



Parts & Maintenance Manual

Manuel de Maintenance & Nomenclature des Pièces de Rechange

Cushman® Turf Truckster®

With Four Post ROPS

Avec structure de protection anti-retournement à 4 montants

84063 – Kubota® D1105-E3B Diesel Engine, MT
84064 – Kubota® D1105-E3B Diesel Engine, MT, EC
84067 – Suzuki® K6 Gas Engine, MT
84068 – Suzuki® K6 Gas Engine, AT
84069 – Suzuki® K6 Gas Engine, RV and Utility

84063 – Moteur Diesel Kubota® D1105-E3B, MT
84064 – Moteur Diesel Kubota® D1105-E3B, MT, EC
84067 – Moteur Essence Suzuki® K6, MT
84068 – Moteur Essence Suzuki® K6, AT
84069 – Moteur Essence Suzuki® K6, RV et utilitaires



WARNING

If incorrectly used, this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine



AVERTISSEMENT

Risque de blessures graves en cas d'utilisation incorrecte de la machine. Les opérateurs et le personnel d'entretien doivent être formés et conscients des dangers encourus. Ils doivent lire avec attention le manuel avant d'essayer de monter, d'utiliser, de régler ou maintenir la machine.



When Performance Matters.™

FOREWORD

This manual contains adjustment, maintenance, troubleshooting instructions and parts list for your new Jacobsen® machine. This manual should be stored with the equipment for reference during operation.

Before you operate your machine, you and each operator you employ should read the manual carefully in its entirety. By following the safety, operating and maintenance instructions you will prolong the life of your equipment and maintain its maximum efficiency.

If additional information is needed contact your Jacobsen Dealer.

The serial plate is located on the frame rail under the steering wheel. Jacobsen recommends you record these numbers below for easy reference.

JACOBSEN <small>A Textron Company</small>		CHARLOTTE, NC, USA 1 800 848 1636 Jacobsen.com
MODEL	xxxxx	
DATE CODE	xxxxx	
LABEL #	xxxxxxx	
SERIAL #	*xxxxxxx*	
		Lb/kg W Batt Nom Power Hp/kw
		

Suggested Stocking Guide

To Keep your equipment fully operational and productive, Jacobsen suggests you maintain a stock of the more commonly used maintenance items. We have also included part numbers for additional support materials and training aids.

To order any of the following material:

1. Write your full name and complete address on your order form.

2. Explain where and how to make shipment:

☐ UPS

☐ Regular Mail

☐ Overnight

☐ 2nd Day

3. Order by the quantity desired, the part number, and the description of the part.

4. Send or bring the order to your authorized Jacobsen Dealer.

Service Parts

Qty.	Part No.	Description	Qty.	Part No.	Description
	4113986	Diesel Engine Oil Filter		2701908	Gas Engine Oil Filter
	550489	Diesel Engine Fuel Filter Element		2701898	Gas Engine Fuel Filter
	4175560	Diesel Alternator-Power Steering Belt		4139265	Gas Alternator-Power Steering Belt
	4117092	Diesel Hydraulic Pump Belt		4235370	Gas Governor-Hydraulic Pump Belt
	5000919	Diesel Engine Air Filter Element		840352	Gas Engine Air Filter Element
				885249	Hydraulic Filter Element

Service Support Material

Qty.	Part No.	Description
	4241725	Safety & Operation Manual
	4241724	Parts & Maintenance
	4160162	Kubota D1105 Engine Parts Manual
	4241728	Suzuki K6A Engine Parts Manual

Qty.	Part No.	Description
	4171642	MT Truck Service Manual
	4171675	AT Truck Service Manual
	4171985	Suzuki K6A Service Manual
	4239442	Accessory Manual

These are the original instructions verified by
Jacobsen A Textron Company

© Copyright 2011, Jacobsen, A Textron Company. "All rights reserved, including the right to reproduce this material or portions thereof in any form."

Proposition 65 Warning

This product contains or emits chemicals known to State of California to cause cancer and birth defects or other reproductive harm.

Table of Contents

1	Safety				
1.1	Operating Safety	4	5.11	Charging Battery	22
1.2	Important Safety Notes	5	5.12	Hydraulic Hoses	23
2	Vehicle Identification Numbers		5.13	Hydraulic Reservoir and Filter	23
2.1	Vehicle Identification Number	6	5.14	Fuel	24
2.2	Engine Identification Numbers	6	5.15	Fuel System	24
3	Specifications		5.16	Tire Pressure	25
3.1	Product Identification	7	5.17	Tire Removal and Installation	25
3.2	Diesel Engine	7	5.18	Raising the vehicle	26
3.3	Gas Engine	7	5.19	Towing the Vehicle	27
3.4	vehicle	8	5.20	Governor Oil Level	27
3.5	Gear Ratios	8	5.21	Hydraulic Brakes	28
3.6	Weights and Dimensions	8	5.22	Differential Fluid	29
3.7	Accessories & Support Literature	9	5.23	Diesel Engine Manual Transmission	29
3.8	Declaration of Conformity	10	5.24	Gas Engine Manual Transmission	30
4	Adjustments		5.25	Gas Engine Automatic Transmission	30
4.1	General	12	5.26	Electrical System	31
4.2	Engine Access	12	5.27	Dash Panel	31
4.3	Front Cowl Access	13	5.28	Headlight Replacement	32
4.4	Access Panels	13	5.29	Tail Light Replacement	32
4.5	Diesel Alternator Belt	14	5.30	EFI Diagnostic Check	33
4.6	Diesel Hydraulic Pump Belt	14	5.31	Care and Cleaning	33
4.7	Gas Power Steering - Alternator Belt	14	5.32	Storage	34
4.8	Gas Hydraulic Pump Belt	15	6	Troubleshooting	
4.9	Parking Brake Cable	15	6.1	General	35
4.10	Torque Specification	16	7	Maintenance & Lubrication Charts	
5	Maintenance		7.1	General	36
5.1	General	17	7.2	Lubrication Chart	36
5.2	Engine	17	7.3	Maintenance Charts	37
5.3	Engine Oil	18	7.4	Common Replacement Parts	38
5.4	Power Steering Reservoir	19	7.5	Kubota Diesel Engine Service Parts	38
5.5	Muffler and Exhaust	19	8	Notes	
5.6	Engine Overheat Procedure	19	9	Parts Catalog	
5.7	Cooling System	20	9.1	How To Use The Parts Catalog	40
5.8	Air Filter	21	9.2	To Order Parts	40
5.9	Jump Starting	21	9.3	Table Of Contents	41
5.10	Battery	22			

1 SAFETY

1.1 OPERATING SAFETY



WARNING

EQUIPMENT OPERATED IMPROPERLY OR BY UNTRAINED PERSONNEL CAN BE DANGEROUS.

Familiarize yourself with the location and proper use of all controls. Inexperienced operators should receive instruction from someone familiar with the equipment before being allowed to operate the machine.

1. Safety is dependent upon the awareness, concern and prudence of those who operate or service the equipment. Never allow minors to operate any equipment.
2. It is your responsibility to read this manual and all publications associated with this equipment (Safety & Operation Manual, Engine Manual, accessories, and attachments). If the operator cannot read English it is the owner's responsibility to explain the material contained in this manual to them.
3. Learn the proper use of the machine, the location and purpose of all the controls and gauges before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Never allow anyone to operate or service the machine or its attachments without proper training and instructions or while under the influence of alcohol or drugs.
5. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands, and feet. Operate the machine only in daylight or in good artificial light.
6. Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by Jacobsen.
7. Stay alert for holes in the terrain and other hidden hazards.
8. Inspect the area where the equipment will be used. Pick up all the debris you can find before operating. Beware of overhead obstructions (low tree limbs, electrical wires, etc.) and also underground obstacles (sprinklers, pipes, tree roots, etc.) Enter a new area cautiously. Stay alert for hidden hazards.
9. Never allow anyone near the machine while in operation. The owner/operator can prevent, and is responsible for, injuries inflicted to themselves, to bystanders, and damage to property.
10. Do not carry passengers. Keep bystanders and pets a safe distance away.
11. Never operate equipment that is not in perfect working order or is without decals, guards, shields, or other protective devices securely fastened in place.
12. Never disconnect or bypass any switch.
13. Do not change the engine governor setting or overspeed the engine.
14. Carbon monoxide in the exhaust fumes can be fatal when inhaled. Never operate the engine without proper ventilation or in an enclosed area.
15. Fuel is highly flammable; handle with care.
16. Keep the engine clean. Allow the engine to cool before storing and always remove the ignition key.
17. Place transmission in Neutral, depress clutch and engage parking brake before starting the engine (motor). Start the engine only when sitting in operator's seat never while standing beside the unit.
18. Equipment must comply with the latest federal, state, and local requirements when driven or transported on public roads. Watch out for traffic when crossing or operating on or near roads.
19. Local regulations may restrict the age of the operator.
20. Operate the machine up and down the face of the slopes (vertically) not across the face (horizontally).
21. To prevent tipping or loss of control do not start or stop suddenly on slopes. Reduce speed when making sharp turns. Use caution when changing directions.
22. Always use the seat belt when operating vehicles equipped with a Roll Over Protective Structure (ROPS).

Never use a seat belt when operating vehicle without a ROPS.

Accessory ROPS will continue to be offered for all equipment currently covered. This allows for the outfitting of any machines without previous ROPS installations or replacement of damaged structures.
23. Keep legs, arms, and body inside the seating compartment while the vehicle is in motion.
24. Always shift transmission to 1st Gear (Manual Transmission) or Park (Automatic Transmission), engage parking brake, and stop engine before leaving the vehicle.
25. Charge batteries in an open well ventilated area away from spark and flames. Unplug charger before connecting and disconnecting charger from battery. Wear protective clothing and use insulated tools.
26. Disconnect the battery cables before performing any welding operations on this vehicle.

1.2 IMPORTANT SAFETY NOTES



This safety alert symbol is used to alert you to potential hazards.

DANGER - Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

WARNING - Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury, and property damage. It may also be used to alert against unsafe practices.

NOTICE - Indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage. It may also be used to alert against unsafe practices.

For pictorial clarity some illustrations in this manual may show shields, guards or plates open or removed. Under no circumstances should this equipment be operated without these devices securely fastened in place.



WARNING

The Interlock System on this vehicle prevents the vehicle from starting unless the clutch pedal is depressed (Manual Transmission) or gear selector is in Park (P) or Neutral (N) (Automatic Transmission).

NEVER operate vehicle unless the Interlock System is working.



WARNING

1. Before leaving the operator's position for any reason:
 - a. Remove foot from accelerator pedal.
 - b. Slow vehicle using service brake.
 - c. Depress clutch and shift transmission to 1st Gear (Manual Transmission, or Park (Automatic Transmission).
 - d. Engage parking brake.
 - e. Stop engine and remove the ignition key.
2. Keep hands, feet, and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
3. Keep the area of operation clear of all bystanders and pets.
4. Never carry passengers unless a seat is provided for them.

By following all instructions in this manual you will prolong the life of your machine and maintain its maximum efficiency. Adjustments and maintenance should always be performed by a qualified technician.

If additional information or service is needed contact your Authorized Jacobsen Dealer who is kept informed of the latest methods to service this equipment and can provide prompt and efficient service.

2 VEHICLE IDENTIFICATION NUMBERS

2.1 VEHICLE IDENTIFICATION NUMBER

The Vehicle Identification Number (VIN), consisting of the model number, date code, and serial number, is printed on the Nameplate/Identification Decal attached to the cross member under the dash.

The serial number is also stamped on the cross member. It is located to the left of the Nameplate/Identification Decal.

NOTE: *Reference to the Front, Rear, Left, and Right sides of the vehicle are always determined by the operator's seated position.*

Record the Vehicle Identification information below for easy reference.

Model Number: _____

Date Code: _____

Serial Number: _____

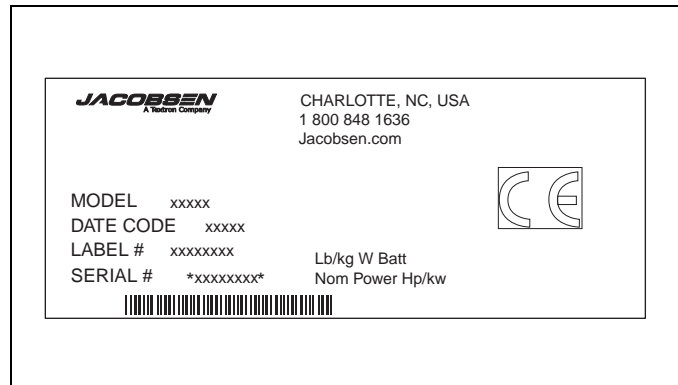


Figure 2A

Always provide the Vehicle Identification Number of the unit when ordering replacement parts or requesting service information. Vehicle Identification Numbers must appear on all correspondence concerning this vehicle.

2.2 ENGINE IDENTIFICATION NUMBERS

The Truckster is equipped with either a Kubota® three cylinder, diesel powered, liquid cooled, four cycle engine or a Suzuki® three cylinder gas powered, liquid cooled, four cycle engine.

The Engine Serial Number for the Kubota engine is on a plate located on the valve cover.

The Engine Serial Number for the Suzuki engine is stamped onto the upper engine block on the right side of the engine under the engine mount and may be partially hidden by the electrical harness. The serial number is also hand printed on the fuel rail.

Record the Engine Serial Number below for easy reference.

Engine Serial Number: _____

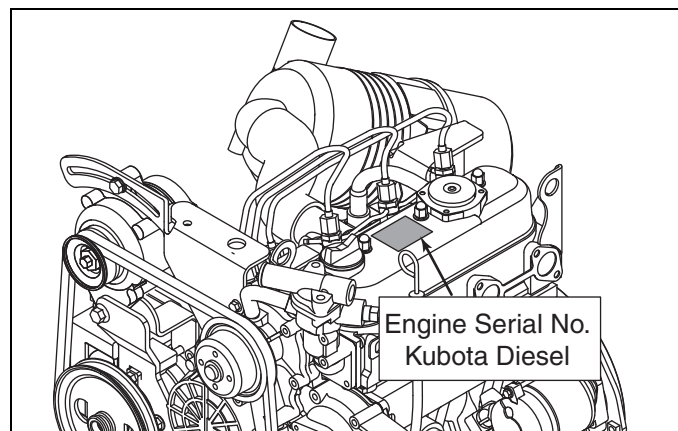


Figure 2B



3.1 PRODUCT IDENTIFICATION

84063	Turf Truckster, liquid cooled diesel engine, 4 speed manual transmission, 11.16:1 2 speed differential, mechanical PTO, and four post ROPS.	84068	Turf Truckster liquid cooled gas engine, 3 speed automatic transmission, 14.21:1 2 speed differential, and four post ROPS.
84064	Turf Truckster liquid cooled diesel engine, 4 speed manual transmission, 11.16:1 2 speed differential, mechanical PTO, and four post ROPS. EC approved.	84069	Turf Truckster liquid cooled gas engine, 5 speed manual transmission, 11.16:1 2 speed differential, and four post ROPS.
84067	Turf Truckster liquid cooled gas engine, 5 speed manual transmission, 14.21:1 2 speed		

Product	EEC Sound Power	Operator Ear	Vibration M/S ²	
			Arms	Body
84064	103 dB(A)	84 dB(A)	2.14	.096

3.2 DIESEL ENGINE

MakeKubota
 ModelD1105-E3B
 Horsepower.....26 hp (19.4 kW) @3000 rpm
Note: Actual sustained horsepower will likely be lower than listed in specifications due to operating limitations and environmental factors
 Displacement68.5 cu. in. (1123 cc)
 Torque52.7 ft. lbs. (71.5 Nm) @ 2200 rpm
 Fuel:
 Type.....No. 2 Low or Ultra Low Sulfur Diesel
 Rating.....Cetane Rating-45
 Capacity6.55 U.S. Gal. (24.5 liters)

Governor.....All Speed Mechanical
 Low Idle1300 RPM
 High Idle3180 RPM
 Lubrication:
 Capacity5.4 quarts (5.1 liters)
 Below 32° F (0° C) . SAE 10W or 10W-30/10W-40
 32-77° F (0-25° C)... SAE 20W or 10W-30/10W-40
 Above 77° F (25 ° C)SAE 30W or 10W-30/10W-40
 API Classification ... CD or CE
 Air Filter.....Dry type with evacuator valve
 Alternator60 amp
 Cooling System.....Liquid Cooled
 Capacity5.1 qt. (4.8 l) 50/50 water ethylene glycol mix

3.3 GAS ENGINE

MakeSuzuki
 ModelK6
 Horsepower.....34 hp (25.35 kW) @ 5000 rpm
 Displacement40.2 cu. in. (658 cc)
 Torque38.3 ft. lbs. (51.9 Nm) @3200 rpm
 Fuel:
 Type.....Unleaded Gasoline
 Rating.....Min. Octane rating 87
 Capacity6.55 U.S. Gal. (24.5 liters)

Governor.....External Mechanical
 Low Idle950 RPM
 High Idle4450 RPM
 Lubrication:
 Capacity3.6 quarts (3.4 liters)
 Below 32° F (0° C) . SAE 10W30
 32-86° F (0-30° C)... SAE 10W30
 Above 86° F (30 ° C)SAE 10W30W or 10W40
 API Classification ... SJ
 Air Filter.....Dry type with evacuator valve
 Alternator60 amp
 Cooling System.....Liquid Cooled
 Capacity3.3 qt. (3.0 l) 50/50 water ethylene glycol mix
 Spark Plugs:
 NGK 3932DCPR7E Gap
 Denso.....XU22EPR-U
 Gap0.032 - 0.035 in. (0.8 - 1.27 mm)

NOTICE

The use of any fuel containing greater than 10% ethanol may harm the engine's emission control system and therefore invalidate the emission-related warranty through the improper action of the operator.

3 SPECIFICATIONS

3.4 VEHICLE

Tires:		actuated
Front	20 x 10 - 10 Multi Rib	SteeringFront wheel power steering
Rear	24 x 13 -12 Titan Ultra Trac	Hitch Capacity:
Tire Pressure:		Max. trailer GVWR.... 1500 lb. (680 kg)
Front	20 psi (1.38 BAR)	Tounge Weight..... 200 lb. (90.7 kg)
Rear	15 - 18 psi (1 - 1.2 BAR)	Vehicle Rated Capacity .. 2850 lb. (1293 kg)
Battery:		NOTE: <i>When calculating load weight, include 118 lb. (53.5 kg) for the standard four post ROPS. Do not exceed Vehicle Rated Capacity.</i>
Type	12 Volt Lead/Acid	
Group.....	24	
Service Brake	4 Wheel hydraulic drum brakes	
Brake Fluid.....	DOT 3	
Parking Brake	Integral to rear drum, hand lever	

3.5 GEAR RATIOS

84067 Gear Ratios:

5th Gear	1.000:1
4th Gear	1.264:1
3rd Gear	1.908:1
2nd Gear.....	3.017:1
1st Gear	5.106:1
Reverse	5.151:1
Hypoid Differential...	14.21:1 with 3.2:1 Reduction

84068 Gear Ratios:

3rd Gear	1.000:1
2nd Gear.....	1.536:1
1st Gear	2.727:1
Reverse	2.222:1
Hypoid Differential...	14.21:1 with 3.2:1 Reduction

84069 Gear Ratios:

5th Gear.....	1.000:1
4th Gear	1.264:1
3rd Gear	1.908:1
2nd Gear.....	3.017:1
1st Gear	5.106:1
Reverse	5.151:1
Hypoid Differential ...	11.16:1 with 3.2:1 Reduction

84063 and 84064 Gear Ratios:

4th Gear	1.000:1
3rd Gear	1.423:1
2nd Gear.....	1.947:1
1st Gear	3.652:1
Reverse	3.463:1
Hypoid Differential ...	11.16:1 with 3.2:1 Reduction

3.6 WEIGHTS AND DIMENSIONS

Dimensions:	Inches	(mm)	Weights:	Lbs.	(kg)
Length.....	114	(2897)	84063	1838	(834)
Height	74.5	(1892)	84064	1849	(838)
Wheel Base	58.2	(1478)	84067	1690	(766)
Turning Radius (Outside).....	242	(6146)	84068	1503	(682)
			84069	1690	(766)

3.7 ACCESSORIES & SUPPORT LITERATURE

Contact your area Jacobsen Dealer for a complete listing of accessories and attachments.



CAUTION

Use of other than Jacobsen authorized parts, excluding emission related components defined in the Emission Warranty, and accessories may cause personal injury or damage to the equipment.

Flatbeds and Boxes

47 in. Quick Disconnect Flatbed	889983
60 in. Quick Disconnect Flatbed	894769
47 in. Box Assembly (Requires 889983)	890010
60 in. Box Assembly (Requires 894769)	2703394
Poly Box Assembly	892530
Box Liner (for 890010)	888532

Hitches

Fifth Wheel Ball Hitch	894690
Receiver Style Drawbar Hitch	4114386
Flat bar Style Hitch	4114566

ROPS Attachments

Upper ROPS (Roll Over Protective Structure)	894761
Steel Door, Left Side (Requires 894761)	2701303
Steel Door, Right Side (Requires 894761)	2701304
Outside Mirrors (Left and Right)	894768
Rear Window	894758
Windshield with Wiper	894757
Replacement Four Post ROPS	4205580

NOTE: *The four post ROPS equipped as standard equipment on this vehicle cannot be used with cab attachments. If an enclosed cab is desired, the four post ROPS must be replaced with Upper ROPS 894761.*

Hydraulic Attachments

High/Low Gas Hydraulics	4147940
High/Low Diesel Hydraulics	894713
Implement Lift (A-Frame)	892493
Dry Seal Coupler, 1 set	894604
Hydraulic PTO (Requires 894712 and 894713)	894644

Truck Attachments

Heavy Duty Mechanical PTO	4112981
Quick Aerator	2701529
Ram Mount (Sprayer Control Mount)	4119631
1500 Top Dresser	2701650
Turn Signal with Right Taillight	894764
VICON Spreader (Requires 2701601 or 2701602)	2701600

VICON Hydraulic Power Kit	2701601
VICON Mechanical Power Kit	2701602
Back-up Alarm	2703183
Exhaust Spark Arrestor	882574
Heater Defroster	894760

Support Literature


Safety & Operation Manual	4175886
Parts & Maintenance Manual	4175887
Suzuki Engine Parts Manual	4140632
Kubota Engine Parts Manual	4160162
Service & Repair Manual	

3 SPECIFICATIONS

3.8 DECLARATION OF CONFORMITY

**DECLARATION OF CONFORMITY • ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ • PROHLÁŠENÍ O SHODĚ •
OVERENSTEMMELSESERKLÆRING • CONFORMITEITSVERKLARING • VASTAVUSDEKLARATSIOON •
VAATIMUSTENMUKAISUUSVAKUUTUS • DECLARATION DE CONFORMITE • KONFORMITÄTSEKTLÄRUNG •
ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ • MEGFELELŐSÉGI NYILATKOZAT • DICHIARAZIONE DI CONFORMITÀ • ATBILSTĪBAS
DEKLARĀCIJA • ATITIKTIES DEKLARACIJA • DIKJARAZZJONI TAL-KONFORMITÀ • DEKLARACJA ZGODNOŚCI •
DECLARAÇÃO DE CONFORMIDADE • DECLARAȚIE DE CONFORMITATE • VYHLÁSENIE O ZHODE • IZJAVA O
SKLADNOSTI • DECLARACIÓN DE CONFORMIDAD • DEKLARATION OM ÖVERENSSTÄMMELSE**

Business name and full address of the manufacturer • Търговско име и пълен адрес на производителя • Obchodní jméno a plná adresa výrobce • Producentens firmanavn og fulde adresse • Bedrijfsnaam en volledig adres van de fabrikant • Tootja ärinimi ja täielik address • Valmistajan toimintimi ja täydellinen osoite • Nom commercial et adresse complète du fabricant • Firmenname und vollständige Adresse des Herstellers • Επωνυμία και ταχυδρομική διεύθυνση κατασκευαστή • A gyártó üzleti neve és teljes címe • Ragione sociale e indirizzo completo del fabbricante • Uzņēmuma nosaukums un pilna ražotāja adrese • Verslo pavadinimas ir pilnas gamintojo adresas • Isem kummerčiali u indirizz shih tal-fabbrikant • Nazwa firmy i pełny adres producenta • Nome da empresa e endereço completo do fabricante • Denumirea comercială și adresa completă a producătorului • Obchodný názov a úplná adresa výrobcu • Naziv podjetja in polni naslov proizvajalca • Nombre de la empresa y dirección completa del fabricante • Tillverkarens företagsnamn och kompletta adress	Jacobsen, A Textron Company 11524 Wilmar Blvd. Charlotte, NC 28273, USA
Product Code • Код на продукта • Kód výrobku • Produktkode • Productcode • Toote kood • Tuotekoodi • Code produit • Produktcode • Кодικός προϊόντος • Termékkód • Codice prodotto • Produkta kods • Produktu koda • Kódici tal-Prodott • Kod produktu • Código do Produto • Cod produs • Kód výrobku • Oznaka proizvoda • Código de producto • Produktkod	84064
Machine Name • Наименование на машината • Název stroje • Maskinnavn • Machinenaam • Masina nimi • Laitteen nimi • Nom de la machine • Maschinenbezeichnung • Ονομασία μηχανήματος • Gépnév • Denominazione della macchina • Iekārtas nosaukums • Mašinos pavadinimas • Isem tal-Magna • Nazwa urządzenia • Nome da Máquina • Numele echipamentului • Názov stroja • Naziv stroja • Nombre de la máquina • Maskinens namn • Beteckning	Diesel Turf Truckster
Designation • Предназначение • Označení • Betegnelse • Benaming • Nimetus • Tyypimerkintä • Παζμείμιας • Bezeichnung • Χαρακτηρισμός • Megnevezés • Funzione • Apzīmējums • Lithuanian • Denominazzjoni • Oznaczenie • Designação • Specificație • Označenie • Namen stroja • Descripción • Beteckning	Article 13
Serial Number • Серийн номер • Sériové číslo • Seriennummer • Seriennummer • Seerianumber • Valmistusnumero • Numéro de série • Seriennummer • Σειριακός αριθμός • Sorozatszám • Numero di serie • Sérijas numurs • Serijos numeris • Numru Serjali • Numer seryjny • Número de Série • Număr de serie • Sériové číslo • Serijska številka • Número de serie • Seriennummer	8406401651-8406404500
Engine • Двигател • Motor • Motor • Motor • Motor • Mootori • Moteur • Motor • Μηχανή • Modulnėv • Motore • Dzinējs • Variklis • Sahha Netta Installata • Silnik • Motor • Motor • Motor • Motor • Motor • Motor	Kubota D1105-E3B
Net Installed Power • Нетна инсталирана мощност • Čistý instalovaný výkon • Installeret nettoeffekt • Netto geïnstalleerd vermogen • Installeeritud netovõimsus • Asennettu nettoteho • Puissance nominale nette • Installierte Nettoleistung • Καθαρή εγκατεστημένη ισχύς • Nettó beépített teljesítmény • Potenza netta installata • Paredzētā tīkla jauda • Grynoji galia • Wisa' tal-Qtugh • Moc zainstalowana netto • Potência instalada • Puterea instalată netă • Čistý instalovaný výkon • Neto vgrajena moč • Potencia instalada neta • Nettoeffekt	18,5 kW @ 3200 RPM
Cutting Width • Широчина на рязане • Šírka fezu • Skærebredde • Maalbreedte • Lökelauius • Leikkuleveys • Largeur de coupe • Schnittbreite • Μήκος μισιζής • Vágási szélesség • Larghezza di taglio • Griešanas platums • Pjovimo plotis • Tikkonforma mad-Direttivi • Szerokość cięcia • Largura de Corte • Lățimea de tăiere • Šírka zaberu • Širina reza • Anchura de corte • Klippbredd	NA
Conforms to Directives • В съответствие с директивите • Splňuje podmínky směrnice • Er i overensstemmelse med direktiver • Voldoet aan de richtlijnen • Vastab direktiivide • Direktiivien mukainen • Conforme aux directives • Entspricht Richtlinien • Καθαρή εγκατεστημένη ισχύς • Megfelel az irányelveknek • Conforme alle Direttive • Atbilst direktīvām • Atitinka direktyvų reikalavimus • Valutazzjoni tal-Konformità • Dyrektywy związane • Cumpre as Directivas • Respectă Directivile • Je v súlade so smernicami • Skladnost z direktivami • Cumple con las Directivas • Uppfyller direktiv	2004/108/EC 2006/42/EC 2000/14/EC, 2005/88/EC 2006/66/EC
Conformity Assessment • Оценка за съответствие • Hodnocení plnění podmínek • Översensstemmelsesvurdering • Conformiteitsbeoordeling • Vastavushindamine • Vaatimustenmukaisuuden arviointi • Evaluation de conformité • Konformitätsbeurteilung • Διαπίστωση Συμμόρφωσης • Megfelelőség-értékelés • Valutazione della conformità • Atbilstības novērtējums • Atitiktības įvertinimas • Livell tal-Qawwa tal-Foss Imkejjel • Ocena zgodności • Avaliação de Conformidade • Evaluarea conformității • Vyhodnotenie zhodnosti • Ocena skladnosti • Evaluación de conformidad • Bedömning av överensstämmelse	2006/42/EC Annex VIII
Measured Sound Power Level • Измерено ниво на звукова мощност • Naměřený akustický výkon • Målte lydstrykeniveau • Gemeten geluidsniveau • Mõõdetud helivõimsuse tase • Mitatt åänitehotaso • Niveau de puissance sonore mesuré • Gemessener Schalldruckpegel • Σηθθισμένο επίπεδο ηχητικής ισχύος • Mért hangteljesítményszint • Livello di potenza sonora misurato • Izmērtais skaņas jaudas līmenis • Išmatuotas garso stiprumo lygis • Livell tal-Qawwa tal-Foss Iggarantit • Moc akustyczna mierzona • Nivel sonoro medido • Nivelul măsurat al puterii acustice • Nameranā hlāidna akustiskāho výkonu • Izmerjena raven zvčne moči • Nivel de potencia sonora medido • Uppmätt ljudeffektsnivå	103 dB(A) LWA
Guaranteed Sound Power Level • Гарантирано ниво на звукова мощност • Garantovaný akustický výkon • Garanteret lydstrykeniveau • Gegarandeerd geluidsniveau • Garanteeritud helivõimsuse tase • Taattu äänitehotaso • Niveau de puissance sonore garanti • Garantierter Schalldruckpegel • Εγγυημένο επίπεδο ηχητικής ισχύος • Szavatolt hangteljesítményszint • Livello di potenza sonora garantito • Garantētais skaņas jaudas līmenis • Garantuotas garso stiprumo lygis • Livell tal-Qawwa tal-Foss Iggarantit • Moc akustyczna gwarantowana • Nivel sonoro fantidito • Nivelul garantat al puterii acustice • Garantovaná hlāidna akustickāho výkonu • Zajamčena raven zvčne moči • Nivel de potencia sonora garantizado • Garanterad ljudeffektsnivå	104 dB(A) LWA
Conformity Assessment Procedure (Noise) • Оценка за съответствие на процедурата (Шум) • Postup hodnocení plnění podmínek (hluk) • Procedure for overensstemmelsesvurdering (Støj) • Procedure van de conformiteitsbeoordeling (geluid) • Vastavushindamismenetlus (müra) • Vaatimustenmukaisuuden arviointimenetely (Melu) • Procédure d'évaluation de conformité (bruit) • Konformitätsbeurteilungsverfahren (Geräusch) • Διαδικασία Αξιολόγησης Συμμόρφωσης (Θόρυβος) • Megfelelőség-értékelési eljárás (Zaj) • Procedura di valutazione della conformità (rumore) • Atbilstības novērtējuma procedūra (troksnis) • Atitiktības įvertinimo procedūra (garsas) • Procedura tal-Valutazzjoni tal-Konformità (Foss) • Procedura oceny zgodności (poziom hałas) • Procedo de avaliație de conformidate (nivel sonor) • Procedura de evaluare a conformității (zgomot) • Postup vyhodnocovania zhodnosti (hluk) • Postopek za ugotavljanje skladnosti (hrup) • Procedimiento de evaluación de conformidad (ruido) • Procedur för bedömning av överensstämmelse (buller)	2000/14/EC Annex V
UK Notified Body for 2000/14/EC • Нотифициран орган в Обединеното кралство за 2000/14/EO • Úřad certifikovaný podle směrnice č. 2000/14/EC • Det britiske bemyndigede organ for 2001/14/EF • Engels adviesorgaan voor 2000/14/EG • Ühendkuningriigi teavitatud asutus direktiivi 2000/14/EÜ mõistes • Direktiivin 2000/14/EY mukainen ilmoitettu tarkastuslaitos Isossa-Britanniassa • Organisme notifié concernant la directive 2000/14/CE • Britische benannte Stelle für 2000/14/EG • Κοινοποιημένος Οργανισμός Ηνωμένου Βασιλείου για 2000/14/ΕΚ • 2000/14/ΕΚ – egyesült királyságbeli bejelentett szervezet • Organismo Notificato in GB per 2000/14/CE • 2000/14/EK AK regisztrált organizáció • JK notifikuotais iestāgais 2000/14/EC • Korp Notifikat tar-Renju Unit ghal 2000/14/KE • Dopuszczona jednostka badawcza w Wielkiej Brytanii wg 2000/14/WE • Entidade notificada no Reino Unido para 2000/14/CE • Organism notificat în Marea Britanie pentru 2000/14/CE • Notifikovaný orgán Spojeného královstva pre směrnici 2000/14/ES • Britanski prijavljeni organ za 2000/14/ES • Cuerpo notificado en el Reino Unido para 2000/14/CE • Anmält organ för 2000/14/EG i Storbritannien	Number: 1088 Sound Research Laboratories Limited Holbrook House, Little Walsingham Sudbury, Suffolk CO10 0TH
Operator Ear Noise Level • Оператор на нивото на доловим от ухото шум • Hladina hluku v oblasti uší operátora • Støjniveau i førers ørehøjde • Geluidsniveau oor bestuurder • Műratase operátori körvas • Melutaso käyttäjän korvan kohdalla • Niveau de bruit à hauteur des oreilles de l'opérateur • Schallpegel am Bedienerohr • Επίπεδο θορύβου σε λειτουργία • A kezelő füleinél mért zajszint • Livello di potenza sonora all'orecchio dell'operatore • Trokšņa līmenis pie operatora auss • Dirbančiojo su mašina patiriamas triukšmo lygis • Livell tal-Foss fil-Widna tal-Operator • Dopuszczalny poziom hałasu dla operatora • Nivel sonoro nos ouvidos do operador • Nivelul zgomotului la urechea operatorului • Hladina hluku pôsobiaci na sluch operátora • Raven hrupa pri ušesu upravljalca • Nivel sonoro en el oído del operador • Ljudnivå vid förarens öra	84 dB(a) Leq (2006/42/EC)
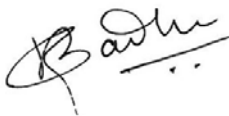
<p>Harmonised standards used • Използвани хармонизирани стандарти • Použité harmonizované normy • Brugte harmoniserede standarder • Gebruikte geharmoniseerde standaards • Kasutatud ühtlustatud standardid • Käytetyt yhdenmukaistettut standardit • Normes harmonisées utilisées • Angewandte harmonisierte Normen • Ευρωπαϊσμένα πρότυπα που χρησιμοποιήθηκαν • Harmonizált szabványok • Standard armonizzati applicati • Izmantotie saskaņotie standarti • Panaudoti suderinti standartai • Standards armonizzati usati • Normy spójne powiązane • Normas harmonizadas usadas • Standardele armonizate utilizate • Použité harmonizované normy • Uporabljeni usklajeni standardi • Estándares armonizados utilizados • Harmoniserade standarder som används</p>	<p>BS EN ISO 20643 BS EN ISO 5349-1 BS EN ISO 5349-2</p>
<p>Technical standards and specifications used • Използвани технически стандарти и спецификации • Použité technické normy a specifikace • Brugte tekniske standarder og specifikationer • Gebruikte technische standaards en specificaties • Kasutatud tehnilised standardid ja spetsifikatsioonid • Käytetyt tekniset standardit ja eritelmät • Spécifications et normes techniques utilisées • Angewandte technische Normen und Spezifikationen • Τεχνικά πρότυπα και προδιαγραφές που χρησιμοποιήθηκαν • Műszaki szabványok és specifikációk • Standard tecnici e specifiche applicati • Izmantotie tehniskie standarti un specifikācijas • Panaudoti techniniai standartai ir techninė informacija • Standards u specifkazzjonijiet tehniki užati • Normy i specyfikacje techniczne powiązane • Normas técnicas e especificações usadas • Standardele tehnice și specificațiile utilizate • Použité technické normy a specifikácie • Uporabljeni tehnični standardi in specifikacije • Estándares y especificaciones técnicas utilizadas • Tekniska standarder och specifikationer som används</p>	<p>ISO 2631-1 SAE 21299</p>
<p>The place and date of the declaration • Място и дата на декларацията • Misto a datum prohlášení • Sted og dato for erklæringen • Plaats en datum van de verklaring • Deklaratsiooni väljastamise koht ja kuupäev • Vakuutuksen paikka ja päivämäärä • Lieu et date de la déclaration • Ort und Datum der Erklärung • Τόπος και ημερομηνία δήλωσης • A nyilatkozat kelle (hely és idő) • Luogo e data della dichiarazione • Deklarācijas vieta un datums • Deklarācijas vieta ir data • Il-post u d-data tad-dikjarazzjoni • Miejsce i data wystawienia deklaracji • Local e data da declaração • Locul și data declarației • Miesto a dátum vyhlásenia • Kraj in datum izjave • Lugar y fecha de la declaración • Plats och datum för deklarationen</p>	<p>Jacobsen, A Textron Company 11524 Wilmar Blvd. Charlotte, NC 28273, USA January 1, 2011</p>
<p>Signature of the person empowered to draw up the declaration on behalf of the manufacturer, holds the technical documentation and is authorised to compile the technical file, and who is established in the Community. Подпис на човека, упълномощен да състави декларацията от името на производителя, който поддържа техническата документация и е авторизиран да изготви техническия файл и е регистриран в общността. Podpis osoby oprávněné sestavit prohlášení jménem výrobce, držet technickou dokumentaci a osoby oprávněné sestavit technické soubory a založené v rámci Evropského společenství. Underskrift af personen, der har fuldmagt til at udarbejde erklæringen på vegne af producenten, der er indehaver af dokumentationen og er bemyndiget til at udarbejde den tekniske journal, og som er baseret i nærområdet. Handtekening van de persoon die bevoegd is de verklaring namens de fabrikant te tekenen, de technische documentatie bewaart en bevoegd is om het technische bestand samen te stellen, en die is gevestigd in het Woongebied. Ühenduse registrisse kantud isiku allkiri, kes on volitatud tootja nimel deklaratsiooni koostama, kes omab tehnilist dokumentatsiooni ja kellel on õigus koostada tehniline toimik. Sen henkilön allekirjoitus, jolla on valmistajan valtuutus vakuutuksen laadintaan, jolla on hallussaan tekniset asiakirjat, joka on valtuutettu laatimaan tekniset asiakirjat ja joka on sijoittautunut yhteisöön. Signature de la personne habilitée à rédiger la déclaration au nom du fabricant, à détenir la documentation technique, à compiler les fichiers techniques et qui est implantée dans la Communauté. Unterschrift der Person, die berechtigt ist, die Erklärung im Namen des Herstellers abzugeben, die die technischen Unterlagen aufbewahrt und berechtigt ist, die technischen Unterlagen zusammenzustellen, und die in der Gemeinschaft niedergelassen ist. Υπογραφή ατόμου εξουσιοδοτημένου για την σύνταξη της δήλωσης εκ μέρους του κατασκευαστή, ο οποίος κατέχει την τεχνική έκθεση και έχει την εξουσιοδότηση να ταξινομεί τον τεχνικό φάκελο και ο οποίος είναι διαρισμένος στην Κοινότητα. A gyártó nevén meghatalmazott személy, akinek jogában áll módosítani a nyilatkozatot, a műszaki dokumentációt őrizi, engedéllyel rendelkezik a műszaki fájl összeállításához, és aki a közösségben letelepedett személy. Firma della persona autorizzata a redigere la dichiarazione a nome del fabbricante, in possesso Della documentazione tecnica ed autorizzata a costituire il fascicolo tecnico, che deve essere stabilita nella Comunità. Tās personas paraksts, kura ir pilnvarota deklarācijas sastādīšanai ražotāja vārdā, kurai ir tehniskā dokumentācija, kura ir pilnvarota sagatavot tehnisko reģistru un kura ir apstiprināta Kopienā. Āsmuo, kuris yra gana žinomas, kuriam gamintojas suteikė įgaliojimus sudaryti šią deklaraciją, ir kuris ją pasirašė, turi visą techninę informaciją ir yra įgaliotas sudaryti techninės informacijos dokumentą. Il-firma tal-persuna awtorizzata li fassal id-dikjarazzjoni f'isem il-fabbrikant, għandha d-dokumentazzjoni teknika u hija awtorizzata li tikkompila l-fajl tekniku u li hija stabbilita fil-Komunità. Podpis osoby upoważnionej do sporządzenia deklaracji w imieniu producenta, przechowującej dokumentację techniczną, upoważnionej do stworzenia dokumentacji technicznej oraz wyznaczonej ds. wspólnotowych. Assinatura da pessoa com poderes para emitir a declaração em nome do fabricante, que possui a documentação técnica, que está autorizada a compilar o processo técnico e que está estabelecida na Comunidade. Semnătura persoanei împuternicite să elaboreze declarația în numele producătorului, care deține documentația tehnică, este autorizată să compileze dosarul tehnic și este stabilită în Comunitate. Podpis osoby poverenej vystavením vyhlásenia v mene výrobcu, ktorá má technickú dokumentáciu a je oprávnená spracovať technické podklady a ktorá je umiestnená v Spoločenstve. Podpis osebe, pooblaščen za izdelavo izjave v imenu proizvajalca, ki ima tehnično dokumentacijo in lahko sestavlja spis tehnične dokumentacije, ter ima sedež v Skupnosti. Firma de la persona responsable de la declaración en nombre del fabricante, que posee la documentación técnica y está autorizada para recopilar el archivo técnico y que está establecido en la Comunidad. Undertecknas av den som bemyndigad att upprätta deklarationen i tillverkarens vägnar, innehar den tekniska dokumentationen och är bemyndigad att sammanställa den tekniska informationen och som är etablerad i gemenskapen.</p>	<p>2006/42/EC Annex II 1.A.2</p> <p>Tim Lansdell Technical Director Ransomes Jacobsen Limited West Road, Ransomes Europark, Ipswich, IP3 9TT, England</p> <p>2006/42/EC Annex II 1.A.10</p>  <p>Vasant Godhalekar VP of Engineering Jacobsen, A Textron Company 11524 Wilmar Blvd, Charlotte, NC 28273, USA</p>
<p>Certificate Number • Номер на сертификат • Číslo osvědčení • Certifikatnummer • Certificaatnummer • Sertifikaadi number • Hyväksyntänumero • Numéro de certificat • Bescheinigungsnummer • Αριθμός Πιστοποιητικού • Hitelesítési szám • Numero del certificato • Serifikata numurs • Serifikato numeris • Numru tač-Certifikat • Numer certyfikatu • Número do Certificado • Număr certificat • Číslo osvedčenia • Številka certifikata • Número de certificado • Certifikatsnummer</p>	<p>4175887 Rev B</p>

GB English	BG български	CZ čeština	DK dansk	NL Nederlands	EE eesti	FI suomi	FR français	DE Deutsch	GR Ελληνικά	HU magyar
IT italiano	LV latviešu valoda	LT lietuvių kalba	MT Malki	PL polski	PT português	RO Română	SK slovenčina	SI slovenščina	ES Ελληνικά	SE Svenska

4 ADJUSTMENTS

4.1 GENERAL



WARNING

To prevent injury, depress clutch pedal and shift transmission to Neutral, engage parking brake, stop engine, and remove key from ignition switch before making any adjustments or performing maintenance.

Make sure the vehicle is parked on a solid and level surface. Never work on a vehicle that is supported only by the jack. Always use jack stands.

If only the front or rear of the vehicle is raised, place chocks in front of and behind the wheels that are not raised.

1. Adjustments and maintenance should always be performed by a qualified technician. If proper adjustment cannot be made, contact an authorized Cushman Dealer.

2. Replace, do not adjust, worn, or damaged components.
3. Long hair, jewelry, or loose fitting clothing may get tangled in moving parts.



CAUTION

Be careful to prevent entrapment of the hands and fingers between moving and fixed components of the machine.

4. Do not change governor settings or overspeed the engine.
5. Keep hands and feet away from moving parts. If possible do not make adjustments with the engine running.

4.2 ENGINE ACCESS

Never remove or install the engine cover while the engine is running. The engine cover is a *machinery guard* and its removal exposes you to moving parts. Keep hands, hair, and clothing away from flywheel, radiator cooling fan, alternator fan, engine belts, pulleys, and air intake.



WARNING

Keep clothing, hands, and hair away from moving parts. These items could become entangled, causing serious personal injury.

For servicing the engine and related components, the engine cover can be tilted forward or removed.

To gain access to the engine, unlock key-lock if installed, push the engine cover latch towards the rear of the unit and tilt cover forward.

When replacing the engine cover, make sure the retaining tabs located at the front corners of the engine cover are inserted into the slots in the floorboard. Tilt seat to the rear until the engine latch engages. Lock key-lock if equipped.



WARNING

Failure to latch the seat properly can result in the engine cover tipping forward causing loss of control of the vehicle and possible personal injury.

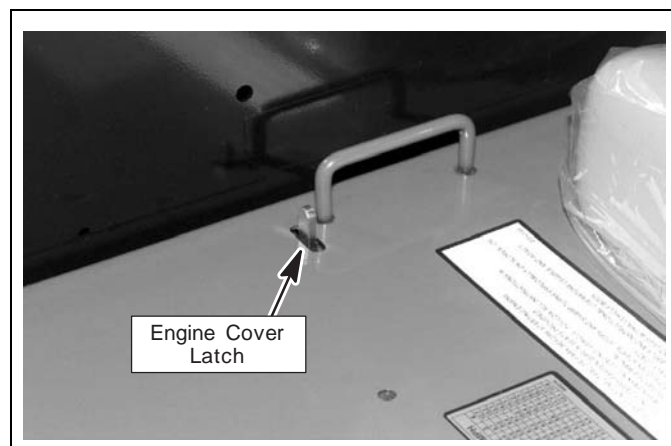


Figure 4A



Figure 4B

4.3 FRONT COWL ACCESS

The front cowl opens to gain access to two access panels, fuse panel, horn, and master cylinder reservoir.

To open the front cowl locate the release lever at the upper left corner of front clip near the left side headlight.

Pull the lever toward the headlight to release the front cowl latch and at the same time pull up on the front cowl.

Fully open the cowl and allow it to rest on the steering wheel (or upper ROPS structure if installed).

The front cowl will not *spring up* when the release lever is pulled and so must be lifted manually.

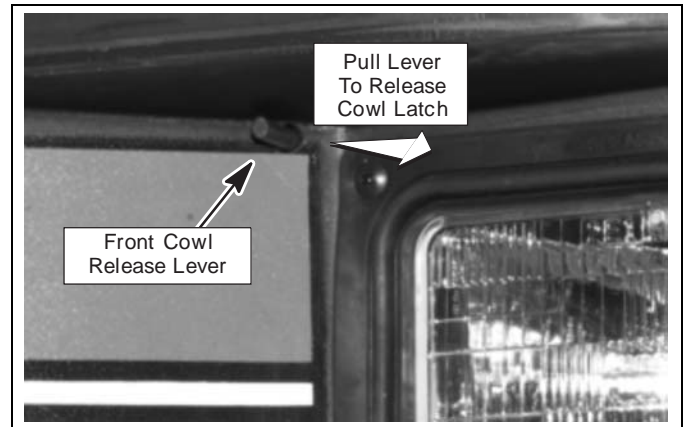


Figure 4C

4.4 ACCESS PANELS

There are two access panels located under the front cowl and one located in the middle of the floorboard.

Remove panel **(A)** under cowl to access the shifter linkage and wiring for the instrument panel.

Remove panel **(B)** under cowl to access the front suspension.

Remove the center panel **(C)** in the middle of floorboard to access the throttle cable, accelerator pedal linkage, wire harness, and rear hydraulic brake line.

NOTE: *It will be necessary to remove the accelerator pedal in order to completely remove the center floorboard panel.*

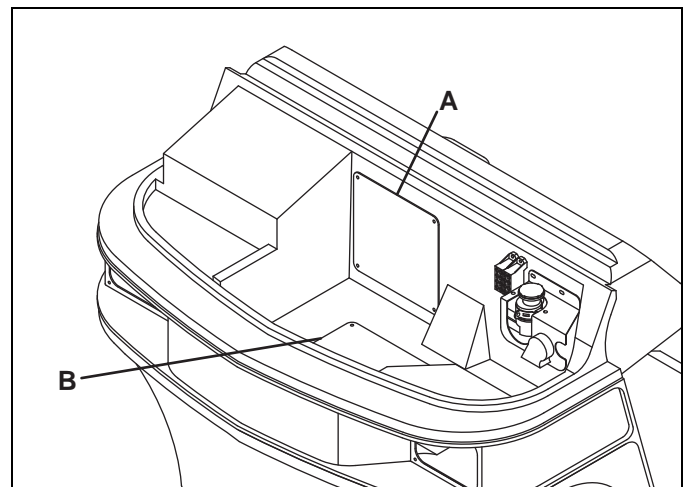


Figure 4D

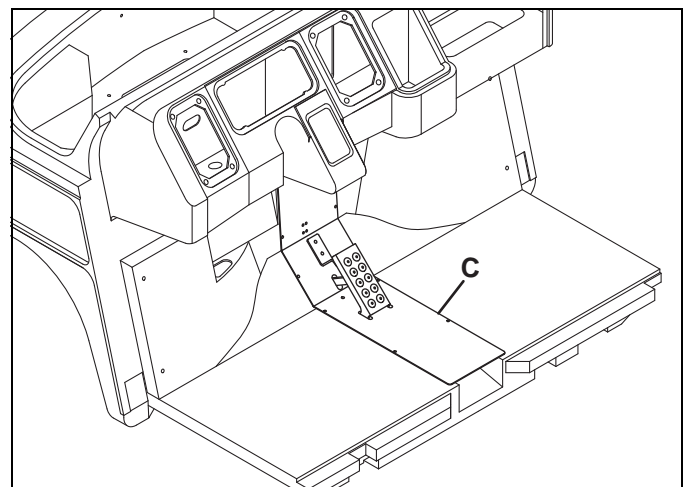


Figure 4E

4 ADJUSTMENTS

4.5 DIESEL ALTERNATOR BELT

Inspect and adjust new belt after first 24-48 hours of operation. Adjust every 200 hours thereafter.

Adjust alternator pulley so belt deflects 1/4 to 1/2 in. (6 to 12 mm) with a 20 lb. push at midpoint between water pump and alternator pulleys.

If tension is incorrect loosen alternator mounting bolts **(D)** and adjust alternator until proper belt tension is achieved.

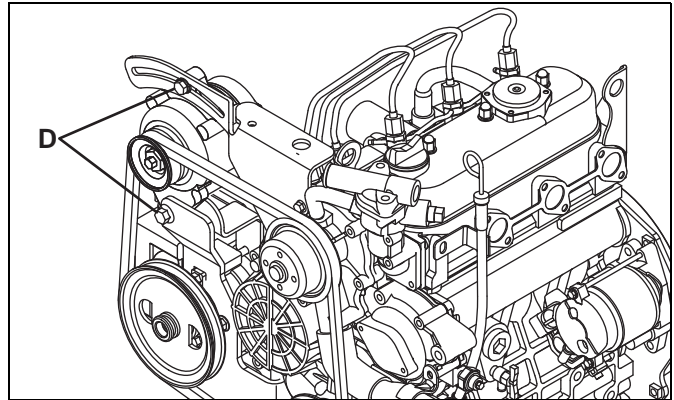


Figure 4F

4.6 DIESEL HYDRAULIC PUMP BELT

Inspect and adjust new belt after first 24-48 hours of operation. Adjust every 200 hours thereafter.

Adjust hydraulic pump belt so belt deflects 1/4 to 1/2 in. (6 to 12 mm) with a 20 lb. push at midpoint between pulleys.

If tension is incorrect loosen pump mounting bolts **(E)** and carefully pry pump away from the engine until proper belt tension is achieved.

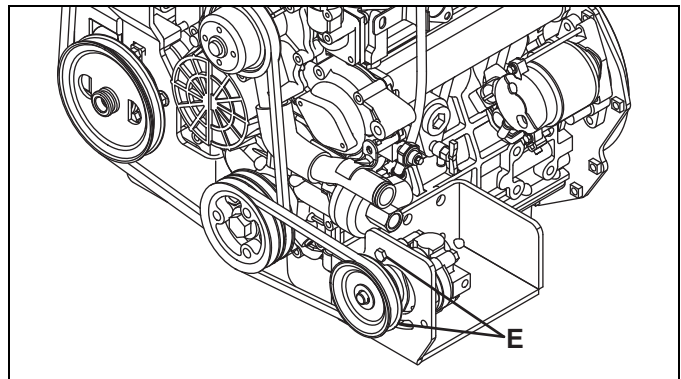


Figure 4G

4.7 GAS POWER STEERING - ALTERNATOR BELT

Inspect and adjust new belt after first 24-48 hours of operation. Adjust every 200 hours thereafter.

Adjust power steering pump so belt deflects 1/4 to 1/2 in. (6 to 12 mm) with a 39 lb. push at midpoint between pulleys.

If tension is incorrect loosen power steering pump mounting bolts **(F)** and carefully pry pump away from the engine until proper belt tension is achieved.

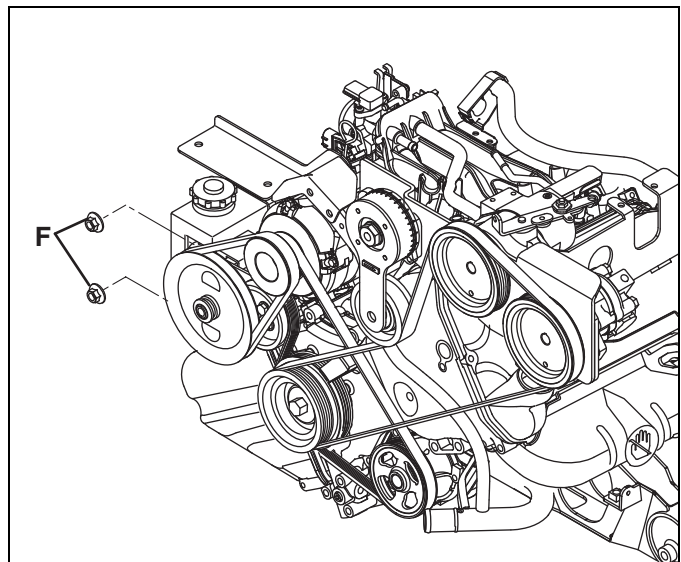


Figure 4H

4.8 GAS HYDRAULIC PUMP BELT

Inspect new belt after first 24-48 hours of operation.

Belt is dynamically adjusted with a spring loaded tensioner to 12 ft-lbs. *No adjustment is required.*

To remove belt rotate tensioner towards radiator to release tension and remove belt from pulleys.

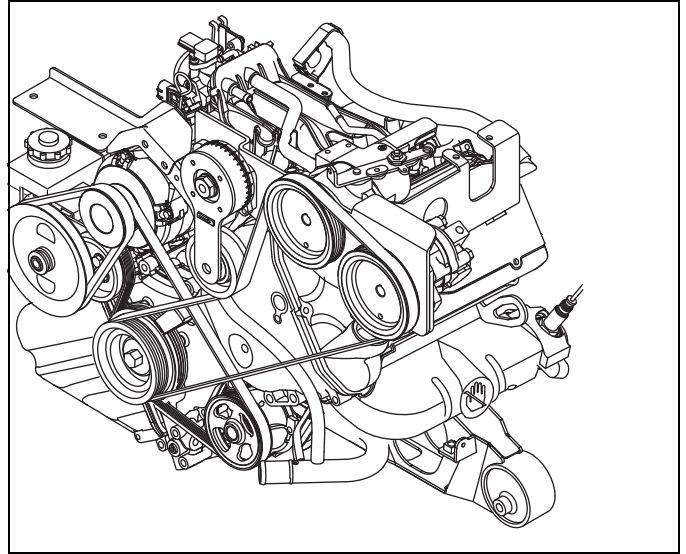


Figure 4I

4.9 PARKING BRAKE CABLE

1. Remove the engine cover. Put chocks in front of and behind at least two wheels at opposite corners of vehicle.
2. Engage parking brake. If handle is at an angle greater than 45° to the panel, adjustment is required.
3. Disengage parking brake.
4. Tighten adjustment nut (**G**) a couple of turns.
5. Engage parking brake. Repeat steps 3 and 4 until handle is at an approximate 45° angle when parking brake is engaged.

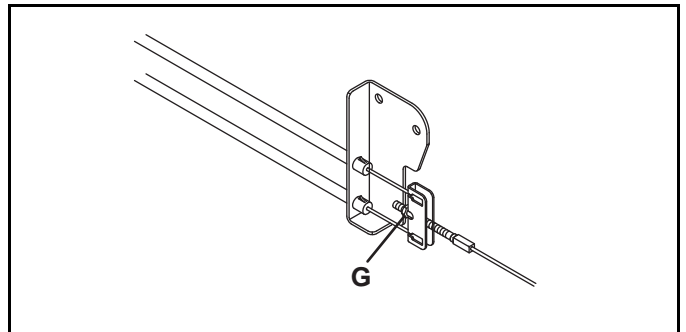


Figure 4J



4 ADJUSTMENTS



4.10 TORQUE SPECIFICATION






NOTICE

All torque values included in these charts are approximate and are for reference only. Use of these torque values is at your sole risk. Cushman is not responsible for any loss, claim, or damage arising from the use of these charts. **Extreme caution should always be used when using any torque value.**

Jacobsen uses Grade 5 (Inch) or Grade 8.8 (Metric) bolts as standard, unless otherwise noted.

AMERICAN NATIONAL STANDARD FASTENERS			
SIZE	UNITS	 GRADE 5	 GRADE 8
#6-32	in-lbs (Nm)	20 (2.3)	—
#8-32	in-lbs (Nm)	24 (2.7)	30 (3.4)
#10-24	in-lbs (Nm)	35 (4.0)	45 (5.1)
#10-32	in-lbs (Nm)	40 (4.5)	50 (5.7)
#12-24	in-lbs (Nm)	50 (5.7)	65 (7.3)
1/4-20	in-lbs (Nm)	95 (10.7)	125 (14.1)
1/4-28	in-lbs (Nm)	95 (10.7)	150 (17.0)
5/16-18	in-lbs (Nm)	200 (22.6)	270 (30.5)
5/16-24	in-lbs (Nm)	240 (27.1)	300 (33.9)
3/8-16	ft-lbs (Nm)	30 (40.7)	40 (54.2)
3/8-24	ft-lbs (Nm)	35 (47.5)	45 (61.0)

AMERICAN NATIONAL STANDARD FASTENERS			
SIZE	UNITS	 GRADE 5	 GRADE 8
7/16-14	ft-lbs (Nm)	50 (67.8)	65 (88.1)
7/16-20	ft-lbs (Nm)	55 (74.6)	70 (94.9)
1/2-13	ft-lbs (Nm)	75 (101.7)	100 (135.6)
1/2-20	ft-lbs (Nm)	85 (115.3)	110 (149.2)
9/16-12	ft-lbs (Nm)	105 (142.4)	135 (183.1)
9/16-18	ft-lbs (Nm)	115 (155.9)	150 (203.4)
5/8-11	ft-lbs (Nm)	150 (203.4)	195 (264.4)
5/8-18	ft-lbs (Nm)	160 (217.0)	210 (284.8)
3/4-10	ft-lbs (Nm)	170 (230.5)	220 (298.3)
3/4-16	ft-lbs (Nm)	175 (237.3)	225 (305.1)
7/8-14	ft-lbs (Nm)	300 (406.8)	400 (542.4)

METRIC FASTENERS							
SIZE	UNITS	 4.8	 5.8	 8.8	 10.9	 12.9	Non Critical Fasteners into Aluminum
M4	Nm (in-lbs)	1.2 (11)	1.7 (15)	2.9 (26)	4.1 (36)	5.0 (44)	2.0 (18)
M5	Nm (in-lbs)	2.5 (22)	3.2 (28)	5.8 (51)	8.1 (72)	9.7 (86)	4.0 (35)
M6	Nm (in-lbs)	4.3 (38)	5.7 (50)	9.9 (88)	14.0 (124)	16.5 (146)	6.8 (60)
M8	Nm (in-lbs)	10.5 (93)	13.6 (120)	24.4 (216)	33.9 (300)	40.7 (360)	17.0 (150)
M10	Nm (ft-lbs)	21.7 (16)	27.1 (20)	47.5 (35)	66.4 (49)	81.4 (60)	33.9 (25)
M12	Nm (ft-lbs)	36.6 (27)	47.5 (35)	82.7 (61)	116.6 (86)	139.7 (103)	61.0 (45)
M14	Nm (ft-lbs)	58.3 (43)	76.4 (55)	131.5 (97)	184.4 (136)	219.7 (162)	94.9 (70)

5.1 GENERAL



WARNING

Before you clean, adjust, or repair this equipment, depress clutch pedal and shift transmission to Neutral, engage parking brake, stop engine, and remove key from ignition switch to prevent injuries.

Make sure the vehicle is parked on a solid and level surface. Never work on a vehicle that is supported only by a jack. Always use jack stands.

1. Adjustment and maintenance should always be performed by a qualified technician. If proper adjustments cannot be made contact an Authorized Cushman Dealer.
2. Inspect the equipment on a regular basis, establish a maintenance schedule, and keep detailed records.
 - a. Keep the equipment clean.
 - b. Keep all moving parts properly adjusted and

lubricated.

- c. Replace worn or damaged parts before operating the machine.
- d. Keep all fluids at their proper levels.
- e. Keep shields in place and all hardware securely fastened.
- f. Keep tires properly inflated.
3. Long hair, jewelry, or loose fitting clothing may get tangled in moving parts.
4. Use the illustrations in the **Parts & Maintenance Manual** as reference for the disassembly and assembly of components.
5. Recycle or dispose of all hazardous materials (batteries, fuel, lubricants, anti-freeze, etc.) according to federal, state, and local regulations.
6. Keep hands and feet away from moving parts. Whenever possible do not make adjustments with the engine running.

5.2 ENGINE

IMPORTANT: A separate Engine Manual, prepared by the engine manufacturer, is supplied with this vehicle. Read the Engine Manual carefully until you are familiar with the operation and maintenance of the engine. Proper attention to the engine manufacturer's directions will assure maximum service life of the engine. To order replacement engine manuals contact the engine manufacturer.

The proper break-in of a new engine can make a considerable difference to the performance and life of the engine.

NOTICE

The vehicle is designed to operate most efficiently at the preset governor setting. Do not change the engine governor settings or overspeed the engine.

During the break-in period Jacobsen recommends the following:

1. During the first 50 hours of operation a new engine should be allowed to reach an operating temperature of at least 140°F (60°C) prior to operation at full load.
2. Check the engine oil level twice daily during the first 50 hours of operation. Higher than normal oil consumption is not uncommon during the break-in period.
3. Change engine oil and oil filter element after first 35 hours of operation.

4. Check and adjust hydraulic pump and alternator belts. See **Sections 4.5, 4.6, 4.7 and 4.8.**
5. Refer to **Section 7.3** and Engine Manual for specific maintenance intervals.
6. If the injection pump, injectors, or the fuel system require service contact an authorized Jacobsen Dealer.

Keep your engine clean. If dirt has accumulated on the engine it should be washed with a nonflammable solvent or strong detergent.

When washing becomes necessary it can be carried out concurrent with servicing the vehicle.

In order to maintain reliable service from your engine a regular check-up and maintenance schedule should be followed. Proper maintenance will prolong the engine's life and avoid premature overhaul.

5 MAINTENANCE

5.3 ENGINE OIL

Check the engine oil at the start of each day before starting the engine.

To check the engine oil remove the dipstick and wipe it with a clean rag. Reinsert the dipstick until it contacts the oil tube. Remove the dipstick and read the oil level.

The oil level should always be between the ADD and FULL mark on the dipstick. If oil level is below the ADD mark remove the filler cap and add oil to bring the level up between marks. *Do Not Overfill.*

NOTE: *If the engine has recently been running allow time (with engine turned off) to let the oil settle to obtain an accurate oil level reading.*

Diesel Engine: Use only engine oils with API classification CD or CE.

Gas Engine: Use only engine oils with API classification SJ.

Using oil other than the service class listed or oil change intervals longer than recommended could reduce engine life. Damage to engine due to improper maintenance or use of incorrect oil quality and/or viscosity is not covered by the engine warranty.

Diesel Engine: Perform initial oil change after first 35 hours of operation and every 75 hours or two months thereafter. See Engine Manual.

Gas Engine: Perform initial oil change after first 50 hours of operation and every 100 hours or three months thereafter. See Engine Manual.

Significant oil loss can damage the engine. Considerable oil loss could be due to a loose or incorrectly installed drain plug, cracked gaskets, or a loose oil filter.

Drain plugs are located beneath the engine in the oil pan. Remove both plugs when changing the oil.

Check drain plugs and oil for metal chips that could indicate engine damage. Immediately replace drain plugs with damaged gasket surfaces.

After oil has completely drained clean excess oil from oil pan and drain plugs. Install drain plugs and tighten securely. Refer to Engine Manual for proper torque.

Always replace the engine oil filter when changing the engine oil. Apply a light coat of engine oil to the rubber gasket surface of new filter before installing.

Diesel Engine: Fill Kubota engine with approximately 5.4 qts. (5.1 l) of clean engine oil. Check oil level and add additional oil if required.

Gas Engine: Fill Suzuki engine with approximately 3.6 qts. (3.4 l) of clean engine oil. Check oil level and add additional oil if required.

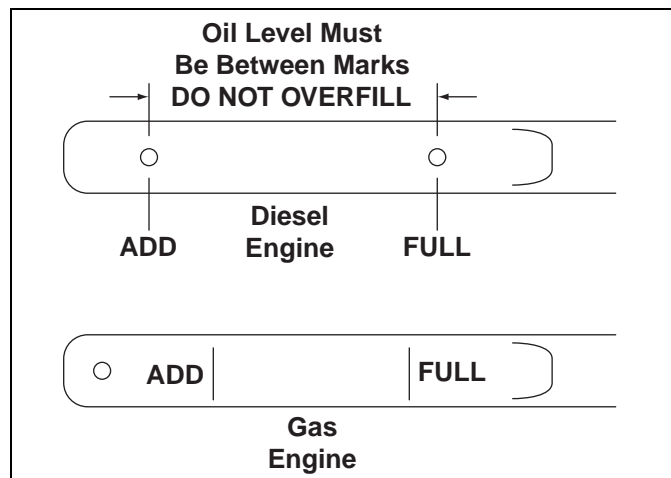


Figure 5A

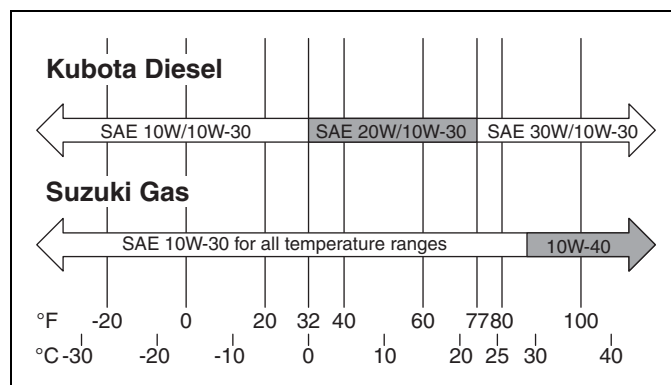


Figure 5B

Diesel Engine:

Above 77°F (25°C)	SAE 30W or SAE 10W30/10W40
32 to 77°F (0 to 25°C)	SAE 20W or SAE 10W30/10W40
Below 32° (0°C)	SAE 10W or SAE 10W30/10W40

Gas Engine:

All temperature ranges	SAE 10W/30
Above 85° F (29° C)	SAE 10W 40

Replacement Oil Filters

Kubota Diesel	4113986
Suzuki Gas	2701908

5.4 POWER STEERING RESERVOIR

WARNING

Before servicing or doing any maintenance work around the engine area make sure the engine has had time to cool. Serious burns can result if the engine or surrounding surfaces are hot.

The power steering reservoir is located on the right side of the engine below the alternator.

The level in the reservoir should be checked after the first 35 and again at 70 hours. After that the level should be checked every 100 hours.

When checking the fluid level before the engine has been warmed up the level should be at the COLD mark on the dipstick. After the engine has been warmed up and the fluid is warm the level should be between the COLD and HOT marks. Use General Motors® Power Steering Fluid as required to bring fluid up to proper level.

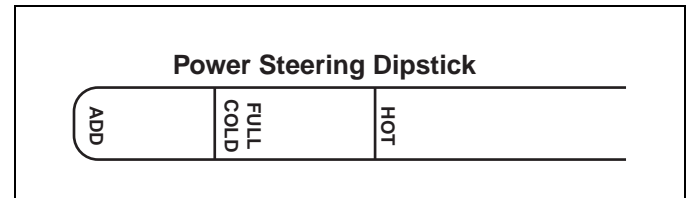


Figure 5C

5.5 MUFFLER AND EXHAUST

WARNING

Exhaust fumes contain carbon monoxide that is toxic and can be fatal when inhaled.

NEVER operate an engine without proper ventilation.

To protect from carbon monoxide poisoning inspect the complete exhaust system regularly and always replace a defective muffler.

If you notice a change in the color or sound of the exhaust stop the engine immediately. Identify the problem and have the system repaired.

Torque all exhaust manifold hardware evenly. Tighten or replace exhaust clamps.

5.6 ENGINE OVERHEAT PROCEDURE

During vehicle operation if the water temperature gauge shows 230° F (110° C) or above and/or the overheat warning buzzer sounds follow this procedure.

1. **Stop** the vehicle. **DO NOT shut the engine off.** Place vehicle in Neutral and engage the parking brake.
2. Immediately disengage any accessories that are operating.
3. Slow the engine speed to a fast idle.
4. Remove any dirt, chaff, debris, etc. from the radiator intake screen located on the right side of the vehicle.

Temperature gauge needle should start to go down approximately 30 seconds after the screen is cleaned. If temperature does not go down STOP the engine and check the following:

1. Check to see if cooling fan is operating. Fan should be turning with coolant above 180° F (82° C) on diesel units or 208° F (97.7° C) on gas units even with ignition switch in OFF position.
2. Check engine oil level.
3. Check for a leak in the cooling system. **Do not** open radiator when hot. Check coolant levels after system completely cools.

Failure to heed the overheat warning and properly maintain the cooling system will cause permanent engine damage.

CAUTION

Be careful when opening the engine access cover or cleaning the intake screen. Metal surfaces near the radiator and engine may be hot to the touch. Use a brush or gloves to clean screen.

5 MAINTENANCE

5.7 COOLING SYSTEM

This vehicle is equipped with a radiator, temperature controlled fan, temperature gauge, and an overheat buzzer.



WARNING

To prevent serious bodily injury from hot coolant or steam blow-out, never attempt to remove the radiator cap while the engine is running. Stop the engine and wait several hours until it is cool. Even then, use extreme care when removing the cap.



CAUTION

Do not pour cold water into a hot radiator. Do not operate engine without a proper coolant mixture. Install cap and tighten securely.



WARNING

The cooling fan is controlled by a temperature switch and may start at any time coolant temperature is above 150° F (65 ° C), even with the ignition switch in the OFF position. Do not attempt to service the cooling system without first disconnecting the negative battery cable or removing the fan fuse.

NEVER add straight antifreeze to the radiator. Mix equal amounts of clean water with ethylene glycol based antifreeze in a separate container before adding it to the cooling system. Do not use a mixture of more than 50% antifreeze.

Always recycle or dispose of used antifreeze in a responsible manner. Used antifreeze can be harmful to the environment.

1. Check coolant level daily. Radiator should be full and recovery bottle should be up to the **cold** mark.
 - a. Tilt engine cover forward to gain access to the radiator.
 - b. With the engine stopped and cool, remove radiator cap and check coolant level. The coolant level should be at or within 1/4 in. (6 mm) of the filler port. Fill with a 50/50 antifreeze/water mixture if required.
 - c. Visually check the reservoir tank. Coolant level should be at or above **FULL** line but less than 4 in. (102 mm). Add a 50/50 antifreeze/water mixture if required.

2. Drain and refill cooling system every 400 hours or 9 months, whichever comes first. Allow system to cool before draining.
 - a. Remove the cooling fan fuse
 - b. Remove the radiator cap.
 - c. Open the engine block drain and the radiator drain. Remove lower radiator hose. Close both drains and install lower radiator hose once system has completely drained.
 - d. Empty and clean the recovery bottle.
 - e. Fill radiator to the bottom of the filler neck with 50/50 antifreeze/water mixture.
 - f. Fill recovery bottle to full mark with 50/50 antifreeze/water mixture.
3. Keep radiator air passages clean. Use compressed air (30 psi maximum) to clean the fins. Water left between the fins will collect dirt and reduce the amount of air flow to properly cool the engine.
4. To provide proper air flow, do not obstruct the air intake screen on the right side of the vehicle. Keep screen clean.
5. Replace clamps and hoses every two years.
6. If you have to add coolant more than once a month, or add more than one quart at a time, have a authorized Cushman Dealer check the cooling system.

5.8 AIR FILTER

Do not remove the element for inspection or cleaning. Unnecessary removal of the filter increases the risk of injecting dust and other impurities into the engine.


When service is required first clean the outside of the filter housing, then remove the old element as gently as possible and discard.

1. Carefully clean the inside of the filter housing without allowing dust into the air intake.
2. Inspect the new element. Do not use a damaged element and never use an incorrect element.
3. Assemble the new element and make sure it seats properly.
4. Reassemble cap making sure it seals completely around the filter housing. Dust evacuator **(A)** must be facing down.
5. Check all hoses and air ducts. Tighten hose clamps.

Replacement (Diesel Only)

1. Clean the outside of the filter housing, especially around hose connections and cover.
2. Note location of hoses. Loosen hose clamps and remove both hoses from air cleaner. Use caution to prevent dust or other debris from entering engine intake hose.
3. Remove air cleaner mounting hardware **(B)**. Air filter is secured with a single screw and nut.
4. Lift the air cleaner assembly out of the vehicle.

5. Unsnap retaining clamps and remove the old element as gently as possible and discard.
6. Carefully clean the inside of the filter housing without allowing dust into the air intake.
7. Inspect the new element. Do not use a damaged element and never use an incorrect element.
8. Assemble the new element and make sure it seats properly.
9. Assemble cap making sure it seals completely around the filter housing. Dust evacuator **(A)** must be facing down.
10. Install air cleaner assembly into the vehicle. Secure with hardware **(B)**.
11. Connect both hoses and tighten hose clamps.

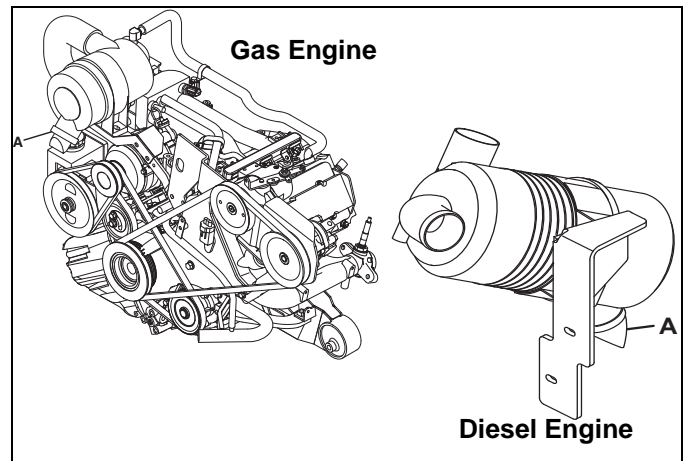

5.9 JUMP STARTING

Before attempting to *jump start* the vehicle check the condition of the discharged battery.

Engage parking brake of both vehicles, shift transmission to Neutral and turn off all electrical loads.



WARNING

Batteries generate explosive hydrogen gas. To reduce the chance of an explosion avoid creating sparks near battery. Always connect the Negative jumper cable to the frame of the vehicle with the discharged battery away from the battery.

When connecting jumper cables:

1. Stop the engine on the vehicle with a good battery.
2. Connect RED jumper cable to the Positive (+) terminal on the good battery and to the Positive (+) terminal on the discharged battery.
3. Connect the BLACK jumper cable from the Negative (-) terminal on the good battery to the frame of the vehicle with the discharged battery.

After cables have been connected start the engine on the vehicle with the good battery then start the vehicle with the discharged battery.

5 MAINTENANCE

5.10 BATTERY

Make absolutely certain the ignition switch is OFF and the key has been removed before servicing the battery.



CAUTION

Always use insulated tools, wear protective glasses or goggles, and protective clothing when working with batteries. You must read and obey all battery manufacturer's instructions.

Tighten cables securely to battery terminals and apply a light coat of silicone dielectric grease to terminals and cable ends to prevent corrosion. Keep vent caps and terminal covers in place.

Keep the top of the battery clean and free of corrosion by washing battery with a solution of baking soda and water. Rinse with clean water.

Verify battery polarity before connecting or disconnecting the battery cables.

1. When installing the battery, always assemble the Positive (RED) (+) battery cable first and the Negative (BLACK) (-) battery cable last.
2. When removing the battery, always remove the Negative (BLACK) (-) battery cable first and Positive (RED) (+) battery cable last.
3. Make sure battery is properly installed and secured to the battery tray.



WARNING

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash your hands after handling.**

5.11 CHARGING BATTERY



WARNING

Charge battery in a well ventilated area. Batteries generate explosive gases. To prevent an explosion keep any device that may create sparks or flames away from the battery.

To prevent injury stand away from battery when the charger is turned on. A damaged battery could explode.

1. Refer to **Section 5.10**. Read the Battery's and Charger's manuals for specific instructions.
2. Whenever possible remove the battery from the vehicle before charging. If battery is not sealed check that the electrolyte covers the plates in all the cells.

Battery cables must be disconnected before using a *fast charger* or damage to the alternator may result.

3. Make sure the charger is Off. Then connect the charger to the battery terminals as specified in the charger's manual.
4. Always turn the charger Off before disconnecting charger from the battery terminals.

5.12 HYDRAULIC HOSES

WARNING

To prevent serious injury from hot, high pressure oil never use your hands to check for oil leaks; use paper or cardboard.

Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin. If fluid is injected into the skin it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

1. Always disengage all drives, engage parking brake, stop engine, and remove key before inspecting or disconnecting hydraulic lines or hoses.
2. Check visible hoses and tubes daily. Look for wet hoses or oil spots. Replace worn or damaged hoses and tubes before operating the machine.
3. The replacement tube or hoses must be routed in the same path as the existing hose. Do not move clamps, brackets, and ties to a new location.
4. Thoroughly inspect all tubes, hoses, and connections every 250 hours.

5.13 HYDRAULIC RESERVOIR AND FILTER

Refer to **Section 7.3** for specific maintenance intervals.

Normally the hydraulic system will not need additional fluid. Sometimes a leak may develop causing the system to require repair and refilling. If you notice hydraulic fluid escaping when the system is being used or if a leak is suspected **turn off all hydraulic functions and stop the engine.**

Periodically check the hydraulic fluid level (hydraulic level should be checked every **100 hours** of operation). Loss of fluid can signal a small leak before it becomes worse.

To check the fluid level:

1. Place vehicle on a flat and level surface. Fully lower any accessory attachment, including the dump box. Stop the vehicle engine.
2. Remove the dipstick/breather tube from the top of the tank. Wipe the dipstick then place in tank with the threaded flange resting on the tank (do not screw in). Fluid should show on the knurled portion of the dipstick. Add GreensCare 68™ fluid as required.

The hydraulic system is protected by one 10 micron filter. The filter is located under the side console near the parking brake lever.

IMPORTANT: The hydraulic system can be permanently damaged if the oil becomes contaminated. Before disconnecting any hydraulic component clean the area around the fittings and the hose ends to keep impurities out of the system.

- a. Before disconnecting any hydraulic component tag or mark the location of each hose then clean the area around the fittings.
- b. As you disconnect the component be prepared to assemble plugs or caps to the hose ends and open ports. This will keep impurities out of the hydraulic system and also prevent oil spills.
- c. Make sure O-rings are clean and hose fittings are properly seated before tightening.
- d. Keep the hose from twisting. Twisted hoses can cause couplers to loosen as the hose flexes during operation resulting in oil leaks.
- e. Kinked or twisted hoses can restrict the oil flow causing the system to malfunction, the oil to overheat and also lead to hose failure.

To replace hydraulic oil filter:

1. Remove the old filter.
2. Fill new filter with GreensCare 68 fluid then install new filter. *Hand tighten only.*
3. Operate engine at idle speed with hydraulic system in Neutral for five minutes.
4. Check hydraulic oil level and fill with GreensCare 68 to knurled mark on gauge.

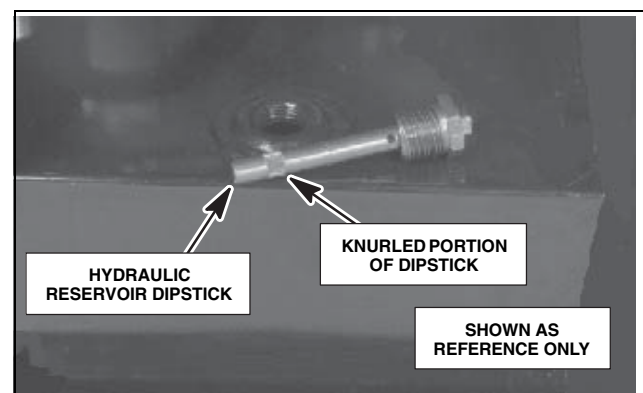


Figure 5E

5 MAINTENANCE

5.14 FUEL

Handle fuel with care - it is highly flammable. Use an approved container. The spout must fit inside the fuel filler neck. *Do not use* cans and funnels to transfer fuel.



WARNING

Remove the fuel cap slowly. Fuel may be under pressure. Spray could cause serious injury.

Never remove the fuel cap from the fuel tank or add fuel when the engine is running or while the engine is hot.

Do not smoke when handling fuel. Never fill or drain the fuel tank indoors.

Do not spill fuel and clean spilled fuel immediately.

Never handle or store fuel containers near an open flame or any device that may create sparks and ignite the fuel or fuel vapors.

Be sure to reinstall and tighten fuel cap securely.

1. Fill the fuel tank to within 1 in. (25 mm) of the bottom of the filler neck.
2. Store fuel according to federal, state and local ordinances and recommendations from your fuel supplier.
3. Never overfill or allow the tank to become empty. Check fuel level in the tank by turning the ignition switch to the ON position and reading the level indicated by the fuel gauge.

4. Check fuel lines and clamps every 50 hours. Replace fuel lines and clamps at the first sign of damage.
5. The fuel tank capacity is 6.5 gal. (24.5 l). Fill tank using the following fuel recommendations:

Diesel Engine

- a. Use clean, fresh, #2 Low or Ultra Low Sulfur Diesel fuel. Minimum Cetane rating 45. Refer to Engine Manual for additional information.
- b. Use clean, fresh, #1 Low or Ultra Low Sulfur Diesel fuel when operating temperature is below 20° F (-7° C). If #1D fuel is not available a winterized blend of #1D and #2D may be available. This blended fuel is usually called #2D and may be used in colder climates. Do not use #2D unless you are sure it has been **winterized**. Cold temperatures may cause it to thicken which will keep your vehicle from running properly.
- c. **DO NOT** use Aviation Fuel JP4. Refer to Engine Manual for additional information.

Gas Engine: Use clean, fresh Unleaded Gasoline with 87 octane or higher rating.

NOTICE

The use of any fuel containing greater than 10% ethanol may harm the engine's emission control system and therefore invalidate the emission-related warranty through the improper action of the operator.

5.15 FUEL SYSTEM

Refer to **Section 7.3** for specific maintenance intervals.

Before replacing any filter thoroughly clean the filter housing and the area around the filter. Dirt must not be allowed to enter into fuel system.

Turn the key switch to the ON position to start the fuel pump and bleed the fuel system if the fuel filter and lines have been removed or the fuel tank has become empty. See Engine Manual.

5.16 TIRE PRESSURE

Keep tires properly inflated to prolong tire life. Check inflation pressure while the tires are cool. Inspect tread wear.

Lower pressure will help avoid leaving tire marks in soft turf. Higher pressures may be required for heavier loads. Rear tire pressure must be set at 28 psi (1.93 BAR) when operating with a full load. *Never* exceed the maximum pressure indicated on the tire.

Check the pressure with an accurate, low pressure tire gauge. Due to the low volume of air needed over-inflation may be reached in a matter of two to three seconds.

Keep tires inflated to:

Front - 20 psi - (1.38 BAR)

Rear - Varies, determined by load. (See Chart)

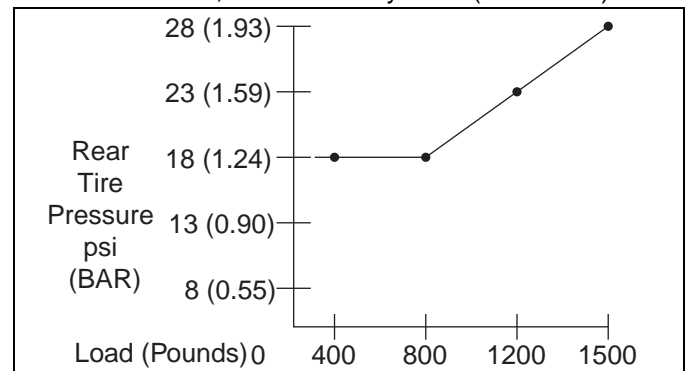


Figure 5F

5.17 TIRE REMOVAL AND INSTALLATION

Removal:

1. Park the vehicle on a flat and level surface. Apply parking brake, shut off engine, and shift transmission to 1st gear (manual) or Park (automatic).
2. Refer to **Section 5.18** for proper lifting procedures. Always use jack stands. Never rely only on a jack for support.

Raise the vehicle only enough to remove the tire. Never place feet, hands, or any part of your body under the vehicle when raising it.

3. Remove the wheel retaining nuts and remove wheel and tire assembly from the hub.
4. Perform required service on tire.



CAUTION

Unless you have the proper training, tools, and experience, **DO NOT** attempt to mount a tire on a rim. Improper mounting can produce an explosion which may result in serious injury.

Installation:

1. Remove dirt, grease, and oil from stud thread. Do not lubricate threads.
2. Position wheel on hub and inspect to ensure full contact between mounting surface of wheel and hub or brake drum. Make sure valve stem is located towards the outside. Finger tighten all hardware then torque hardware in criss-cross order. Always tighten nuts in the top position.
3. Check and retorque daily until 70-100 ft lbs (95-140 Nm) torque is maintained.

5 MAINTENANCE

5.18 RAISING THE VEHICLE



WARNING

Make sure the vehicle is parked on a solid and level surface. Never work on a vehicle that is supported only by a jack. Always use jack stands.

Whenever possible empty the truck bed before raising the vehicle. Loads moving inside the bed can cause an unbalanced load that could tip the vehicle.

Never raise the vehicle with the engine running or with a person sitting in the operator's seat.

Always block the tire diagonally opposite the tire being raised.

Never place hands, feet, or any part of your body under the vehicle when raising it with a hoist or if vehicle is not properly supported by jack stands.

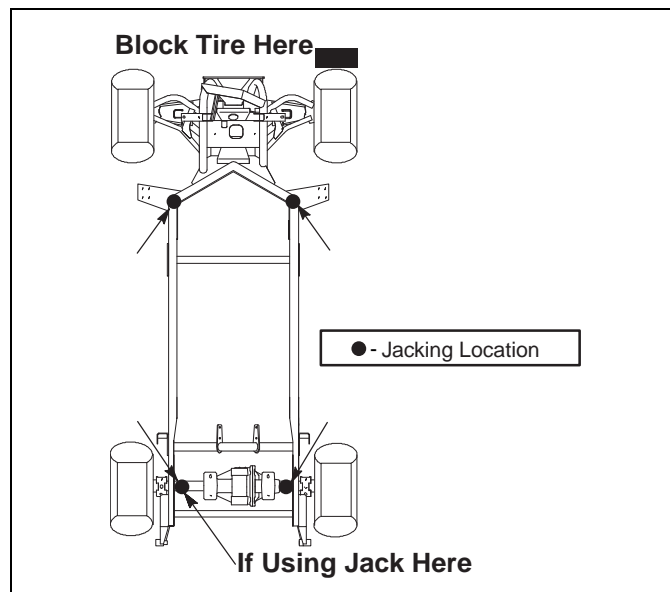


Figure 5G

A scissors type jack or a floor jack with a 1-1/2 ton (minimum) capacity that can be lowered to a height of 3-3/8 in. (86 mm) is required. Refer to **Figure 5G** for jacking locations.

Shift the transmission into 1st gear (manual) or Park (automatic) and apply the parking brake. Chock or block the tire diagonally opposite the side being raised. Raise the vehicle only enough to perform maintenance required.

Jack the vehicle to an appropriate height and place jack stands or equivalent support beneath the frame near the jack. Lower the jack and allow the vehicle to rest on jack stands. *Do not remove jack.*

When using a hoist to raise the vehicle use the same procedure for supporting the frame and blocking the tires as you would when using a jack.

To prevent damage to the vehicle or attached accessory never use a hoist to raise only one corner of the vehicle. Always raise BOTH front or rear corners equally.

5.19 TOWING THE VEHICLE

WARNING

To prevent injury or vehicle damage the following guidelines should always be followed.

- **Never** accelerate or stop suddenly when towing a vehicle.
- **Never** change the direction of the vehicle abruptly or make sharp turns on an incline when towing a vehicle.
- **Never** tow the vehicle faster than 5 mph (8 km/h). Towing at excessive speed could cause either vehicle to lose proper steering control.
- Adjust your speed for weather and surface conditions (rain, snow, ice, hills, etc.) when towing.
- Use care when loading or unloading machine onto a trailer or truck.

If for any reason the vehicle needs to be towed follow the procedures below:

1. If towing the vehicle with a tow-rope or chain an operator is required to steer the towed vehicle and to control the brakes.
2. Attach a tow-rope to the front vertical frame member on either side of the vehicle only.
3. Shift transmission into Neutral and release parking brake.

5.20 GOVERNOR OIL LEVEL

Suzuki Gas Engine only.

Check the oil level in the governor every 100 hours of use. Check only when engine is cool. To check the level remove the plug from the back side of the governor. Oil level should be up to the level of the plug opening.

Governor Oil Capacity 1.5 oz. (44 me)

Oil Type SAE 20W engine oil

If fluid level is low add the recommended oil type.

Remove the plug from the rear of the governor and remove the plug from the top of the governor. Add SAE 20W motor oil until the oil begins to leak from the rear port. Replace both plugs.

When replacing the plugs use Teflon[®] tape or a Permatex[®] 20 sealant (or equivalent pipe thread sealant) on the threads of the plug.

Torque the plugs to 95 ±10 in lb (10.7± 1 Nm).

4. Slowly drive towing vehicle forward until tow-line is pulled tight.
5. While towing, try to keep the tow-line taught at all times. Be careful going down inclines and turning corners.

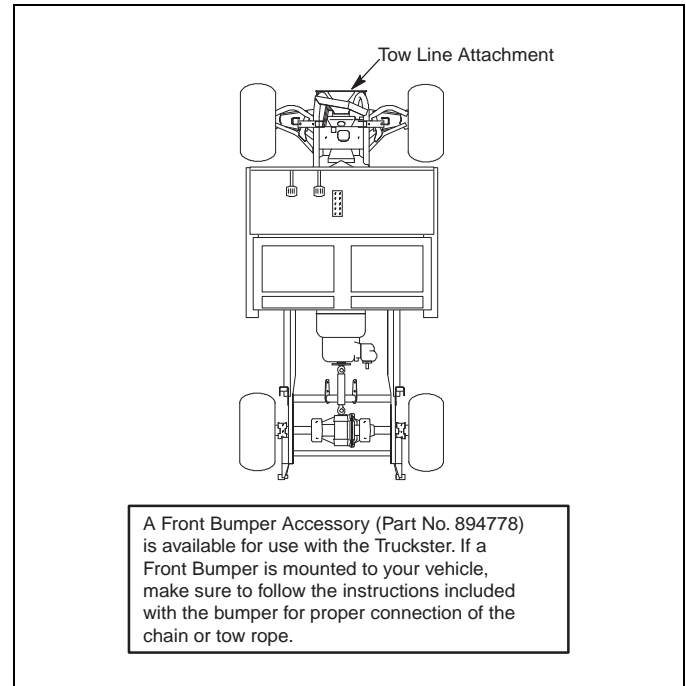


Figure 5H

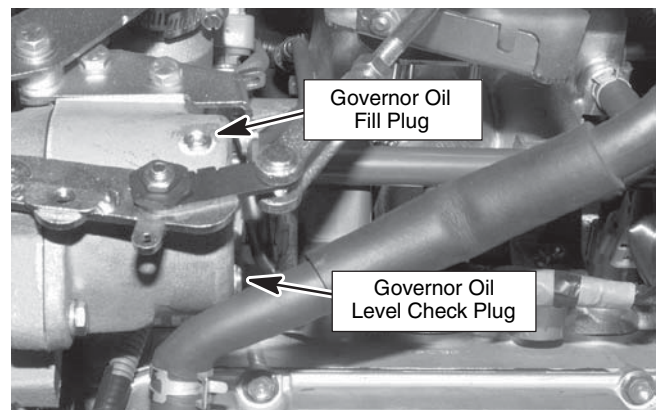


Figure 5I

5 MAINTENANCE

5.21 HYDRAULIC BRAKES



WARNING

Improper maintenance of the brake system may result in loss of vehicle control by the operator. Losing control of the vehicle due to brake loss may cause injury to the operator or bystanders and vehicle damage.

This vehicle is equipped with four-wheel hydraulic brakes controlled by the brake pedal and a hand operated parking brake lever.

Keep your brake system clean and properly maintained. Do not operate the truck if the brakes do not stop vehicle properly.

The brake fluid master cylinder reservoir is located under the front cowl.

The fluid level in the master cylinder reservoir must be kept between the **MIN** (minimum) and **MAX** (maximum) marks. Add DOT 3 type brake fluid as necessary.

If the brake fluid indicator light comes on and remains on check the fluid level in the reservoir.

Bleeding Hydraulic Brakes:

If the brakes do not hold properly, if they feel spongy, or if the brake fluid reservoir is allowed to run dry it may be required to bleed the system in order to remove air from the brake lines.

1. Bleed the brakes in the following order: Left Rear, Right Rear, Right Front and Left Front.
2. Attach a hose to the bleeder screw and place the other end of the hose in a container to catch fluid from brake when bleeding the system.
3. Bleed brake.
 - a. Have an assistant push down on the brake pedal and hold the pedal down.
 - b. Loosen the bleeder screw allowing fluid to flow.
 - c. Tighten the bleeder screw.
 - d. Have assistant release pedal.

NOTE: *Do Not* release brake pedal until the bleeder screw is tightened or air will be sucked back into the brake lines.

- e. Repeat **Steps a** through **d** as required until all air bubbles are purged from the system and a steady flow of fluid comes from the brake line.
- f. Periodically check fluid level in reservoir. Do not allow the reservoir to fully empty or bleeding procedure will need to be repeated.

4. Repeat **Step 3** for each brake.

5. Most communities have a disposal system for **DOT 3** brake fluid. Please dispose of fluids properly.

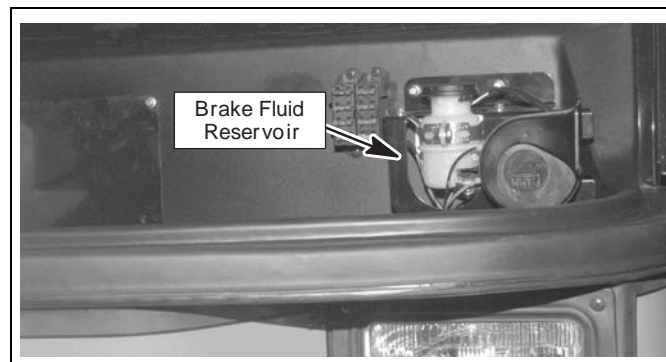


Figure 5J

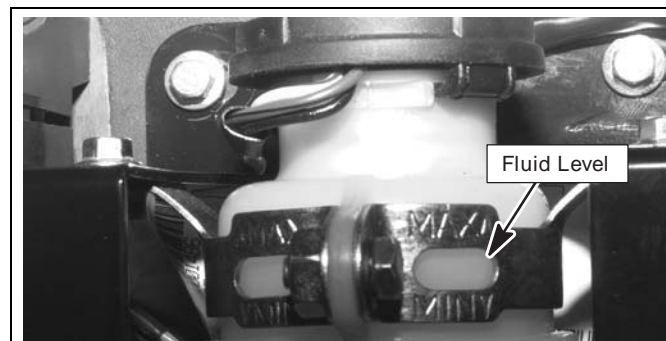


Figure 5K

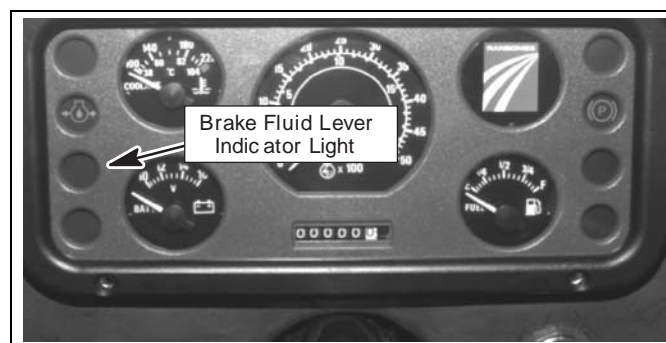


Figure 5L

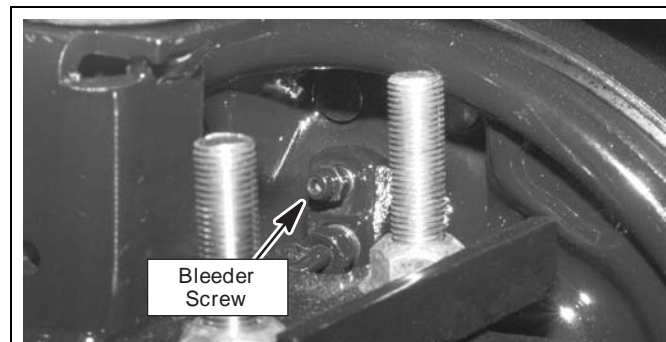


Figure 5M

5.22 DIFFERENTIAL FLUID

The differential fluid should be checked every 100 hours or 3 months. Fluid should be changed after the first 100 hours and every 600 hours (or yearly) thereafter.

Differential Fluid Capacity 3 qts (2.84 l)

Fluid Type SAE EP 80-90 gear lube

To check differential fluid level remove the filler plug from the front of the differential. Fluid should be level with the bottom of filler hole.

If fluid is low add gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

To change differential fluid remove drain plug from rear of differential.

Allow fluid to drain into a suitable container. Dispose of used fluid properly according to federal, state, and local regulations.

Apply pipe thread sealer to drain plug and install.

Fill differential with gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

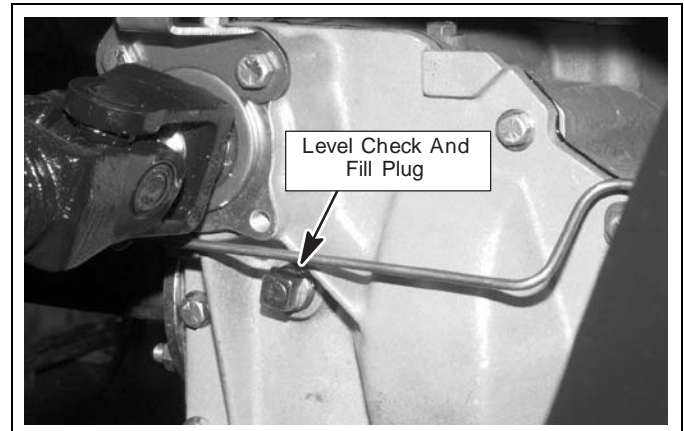


Figure 5N

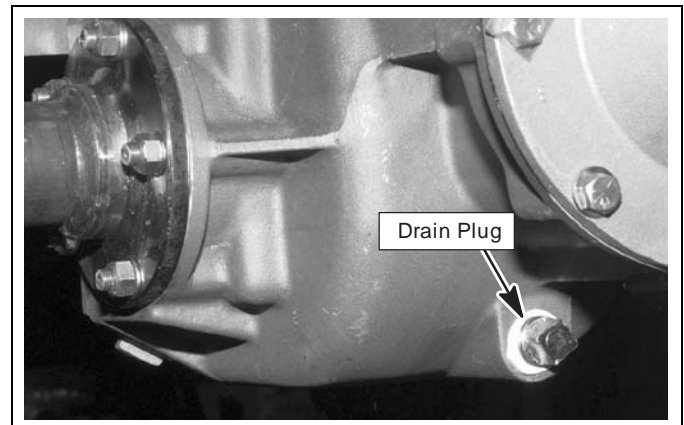


Figure 5O

5.23 DIESEL ENGINE MANUAL TRANSMISSION

The transmission fluid should be checked every 100 hours or 3 months. Fluid should be changed every 600 hours (or yearly).

Transmission Fluid Capacity .. 1.35 qts (1.28 l)

Fluid Type SAE EP 80-90 gear lube

To check transmission fluid level remove the filler plug from the front of the transmission. Fluid should be level with the bottom of filler hole.

If fluid is low add gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

To change fluid remove drain plug from rear of transmission.

Allow fluid to drain into a suitable container. Dispose of used fluid properly according to federal, state, and local regulations.

Apply pipe thread sealer to drain plug and install.

Fill transmission with gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

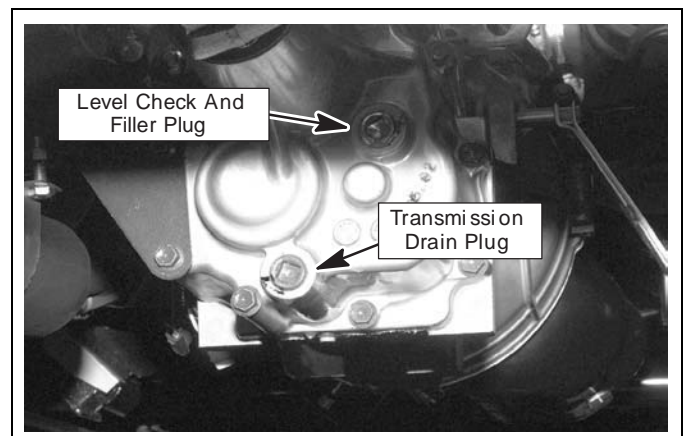


Figure 5P

5 MAINTENANCE

5.24 GAS ENGINE MANUAL TRANSMISSION

The transmission fluid should be checked every 100 hours or 3 months. Fluid should be changed every 600 hours (or yearly).

Transmission Fluid Capacity.. 1.1 qts (1 l)

Fluid Type SAE EP 80-90 gear lube

To check transmission fluid level remove the filler plug from the front of the transmission. Fluid should be level with the bottom of filler hole.

If fluid is low add gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

To change fluid remove drain plug from rear of transmission.

Allow fluid to drain into a suitable container. Dispose of used fluid properly according to federal, state, and local regulations.

Apply pipe thread sealer to drain plug and install.

Fill transmission with gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug

Fill transmission with gear lube until fluid begins to leak from hole. Apply pipe thread sealant and install filler plug.

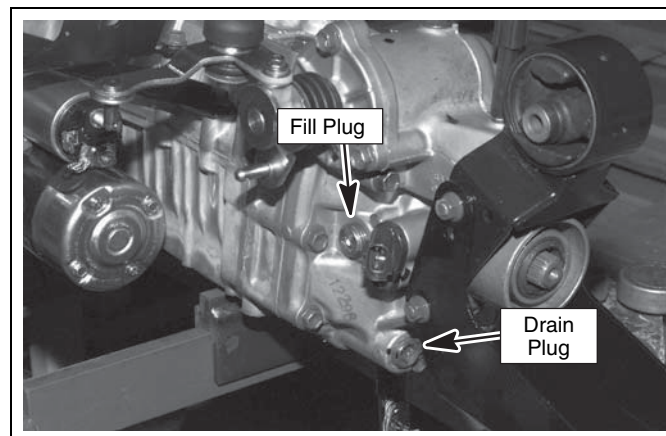


Figure 5Q

5.25 GAS ENGINE AUTOMATIC TRANSMISSION

The transmission fluid should be checked every 100 hours or 3 months. Fluid should be changed every 600 hours (or yearly).

Transmission Fluid Capacity.. 3.8 qts (3.6 l)

Fluid Type..... Mercon/Dextron II

To check transmission fluid level the engine must be running. Place the gear selector in Park (P), apply the parking brake and start the engine.

With engine running remove the dipstick and wipe it with a clean rag. Insert the dipstick into the extension tube until it contacts the tube. Remove the dipstick and read the fluid level.

Fluid must be kept between the two marks on the dipstick. If fluid is low add fluid to obtain the proper level. **Do Not Overfill.** Add fluid using the extension tube as a fill tube.

To change fluid remove drain plug from bottom of transmission.

Allow fluid to drain into a suitable container. Dispose of used fluid properly according to federal, state, and local regulations.

Apply pipe thread sealer to drain plug and install.

Fill transmission until fluid reaches proper mark on dipstick.


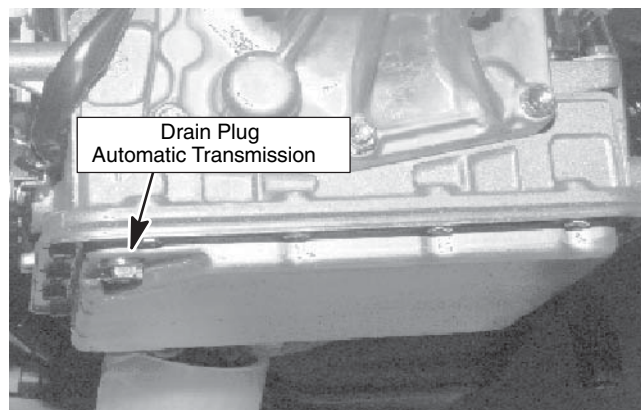


Figure 5R

5.26 ELECTRICAL SYSTEM

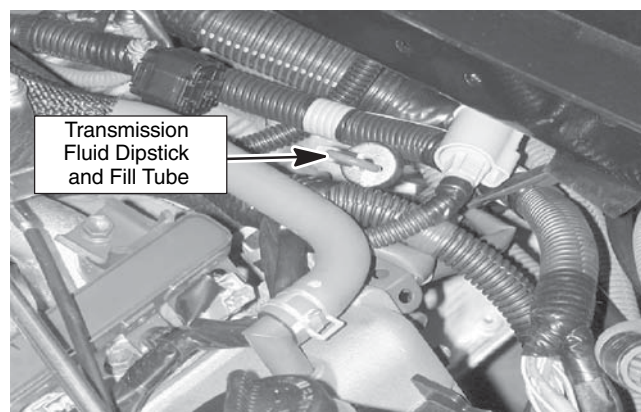


CAUTION

Always turn the ignition switch to the OFF position and remove the Negative (BLACK) battery cable before inspecting or working on the electrical system.

General precautions that can be taken to reduce electrical problems are listed below:

1. Ensure all terminals and connections are clean and properly secured.
2. Check the Interlock System and fuses regularly.
If the Interlock System does not function properly and the problem cannot be corrected contact an authorized Jacobson Dealer.
3. Keep the wire harness and all individual wires away from moving parts to prevent damage.
4. Check the battery and battery charging circuit.
5. Do not wash or pressure spray around electrical connections and components.
6. Circuits are protected by fuses located under the front cowl and a fuse located near the cooling fan.

Diesel Engine

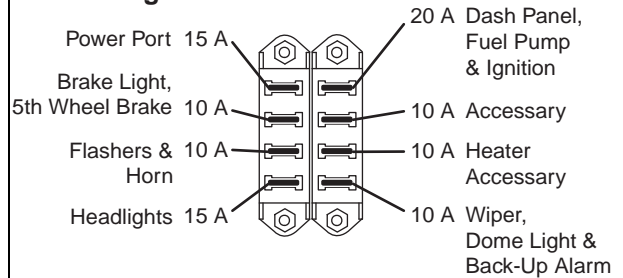

Gas Engine

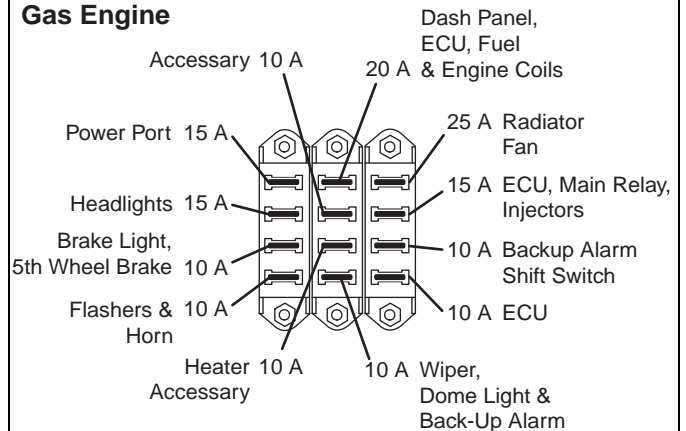


Figure 5S

5.27 DASH PANEL

The dash panel contains gauges and instrument lights to display unit functions. Maintenance of the panel is limited to replacing bulbs and setting the DIP switches.

Remove the four screws securing the instrument panel to the dash.

Pull panel out, tilt panel forward and disconnect electrical connector for easier access to rear of panel.

Light Bulb Replacement:

1. Determine which bulb needs to be replaced.
2. Rotate bulb holder 1/4 turn counter-clockwise and pull up and away from dash panel.
3. Replace old bulb with a new bulb of equal type.

Location	Replacement Bulb
A Voltmeter	C658
B Temperature Gauge	C658
C Fuel Gage	C658
D Hour Meter	C658
E Tachometer	C161
F Left Turn Signal	C161
G Oil Pressure	C161
H Glow Plug	C161
J Brake Fluid	C161

K Right Turn	C161
L Parking Brake	C161
M High Beam	C658
N Alternator / Battery	C161

4. Place bulb and holder back into panel. Turn holder 1/4 turn clockwise to secure into panel. Ensure base of holder is properly seated in panel.

5 MAINTENANCE

Tachometer DIP Switch Setting:

The dash panel uses a DIP Switch sequence code to identify the number of input pulses per engine revolution and engine type to correctly display the engine RPM on the tachometer.

If you are replacing the dash panel or if the tachometer is not operating correctly check to be sure the sequence code is set correctly.

The Truckster with a Kubota Diesel engine uses the following sequence code for 10.5 pulses / revolution.

Kubota Diesel Sequence Code: 0 0 0 1 0 1 0 0

The Truckster with a Suzuki Gas engine uses the following sequence code for 1.5 pulses / revolution.

Suzuki Gas Sequence Code: 0 0 0 0 0 0 1 0

Using a small blade screwdriver or similar tool push the switch levers either up or down to match the sequence code for this unit.

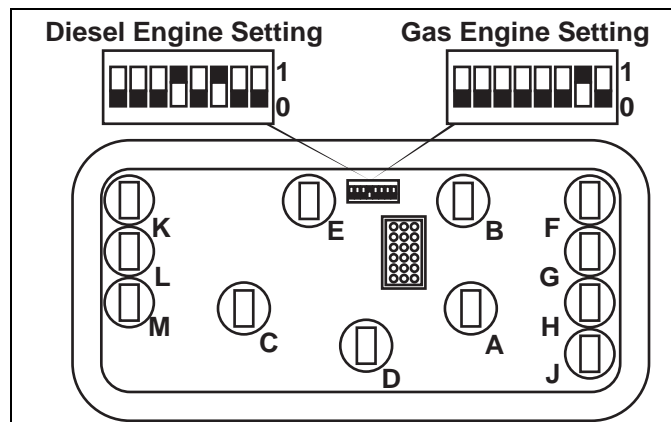


Figure 5T

5.28 HEADLIGHT REPLACEMENT

The headlight should be replaced as soon as it stops functioning or is damaged. The headlight is a sealed unit and can only be replaced as a complete unit.

- | | | |
|------------------|-----------|-------------------|
| Description..... | bulb type | Jacobson Part No. |
| Headlight..... | H6545 | 837303 |
1. Disconnect the Negative (BLACK) battery cable.
 2. Remove the four screws securing the headlight bezel to the front cowl.
 3. Pull headlight and bezel forward and out of the front clip opening.
 4. Disconnect the electrical connector from the rear of the headlight.

5. Remove the headlight from the bezel. Properly dispose of old bulb.
6. Install new headlight in reverse order of removal.

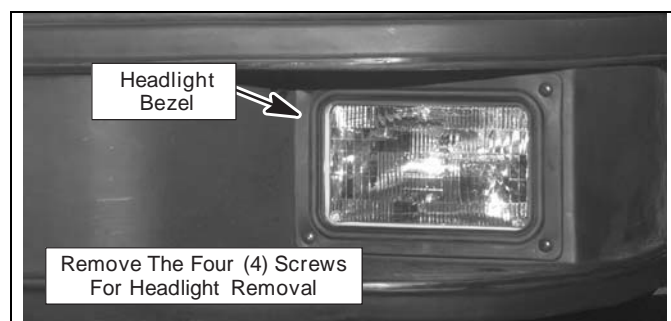


Figure 5U

5.29 TAIL LIGHT REPLACEMENT

The tail light should be repaired as soon as it stops functioning or is damaged. The tail light bulb and lens are replaceable components. Damage to the body of the tail light requires a complete replacement.

- | | | |
|-----------------------|-----------|-------------------|
| Description..... | bulb type | Jacobson Part No. |
| Tail light bulb | 1157 | 822049 |
1. Remove the two screws securing lens. Remove lens and gasket.
 2. Push bulb in, turn 1/4 turn and remove bulb. Dispose of old bulb properly.
 3. Install new bulb in reverse order of removal. Ensure lens gasket is properly positioned.
 4. To remove complete tail light assembly remove two nuts and shake proof washer securing tail light to frame. Disconnect harness and remove tail light from frame.

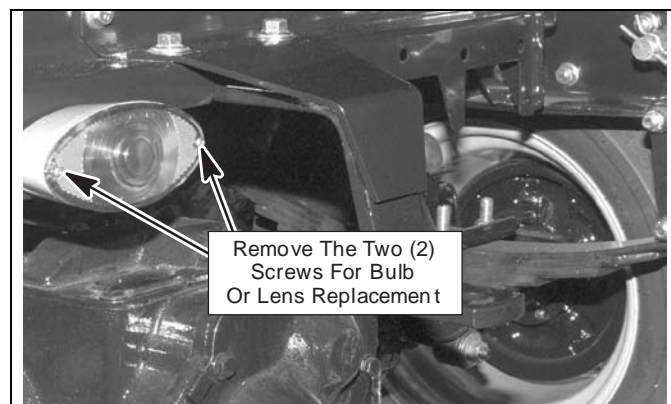


Figure 5V

5.30 EFI DIAGNOSTIC CHECK

Suzuki Gas Engine units only

The electrical system is equipped with an OBD-II diagnostic connector.

Manual transmission: Engage parking brake, shift transmission to Neutral, and turn the ignition switch to the OFF position.

Automatic Transmission: Engage parking brake, place gear selector in Park, and turn the ignition switch to the OFF position.

Open the front cowl and locate the OBD-II connector on the brake fluid reservoir bracket. Plug an OBD-II reader into the connector, turn ignition switch to the ON position (do not start engine), and refer to the instructions included with the reader to retrieve diagnostic codes.

Refer to the Truckster Technical Repair Manual for code descriptions.

5.31 CARE AND CLEANING

Wash the vehicle after each use. Keep the equipment clean.

Note: *Do not wash any portion of the equipment while it is hot. Do not use high pressure spray or steam. Use cold water and automotive cleaners.*

1. Use compressed air to clean engine and radiator fins. A special blow gun is available through Cushman Dealer.
2. Use only fresh water for cleaning your equipment.

Note: *Use of salt water or affluent water has been known to encourage rust and corrosion of metal parts resulting in premature deterioration or failure. Damage of this nature is not covered by the factory warranty.*

3. Do not spray water directly at the dash panel, ignition switch, controls, or any other electrical components, or at bearing housings and seals.
4. Clean all plastic or rubber trim with a mild soap solution or use commercially available vinyl/rubber cleaners.

Repair damaged metal surfaces and use touch-up paint. Wax the equipment for maximum paint protection.



CAUTION

Clean grass and debris from drives, muffler, and engine to prevent fires.

5 MAINTENANCE

5.32 STORAGE

General

1. Wash the vehicle thoroughly and lubricate as necessary. Repair and paint damaged or exposed metal.
2. Inspect the vehicle, tighten all hardware, replace worn or damaged components.
3. Drain and refill radiator.
4. Clean the tires thoroughly and store the vehicle so the load is off the tires. If vehicle is not on jack stands check tires at regular intervals and reinflate as necessary.
5. Keep the machine and all its accessories clean, dry and protected from the elements during storage.



WARNING

Never store equipment near an open flame or spark which could ignite fuel or fuel vapors.

Battery

1. Remove, clean and store battery in upright position on a nonconductive surface (wood) in a cool, dry place. To prevent accelerated discharge do not store battery on concrete or steel surface.
2. Check and recharge battery every 60 to 90 days while in storage.
3. To reduce the self discharge rate room temperature should not rise above 80°F (27°C). Room temperature should not fall below 20°F (-7°C) to prevent electrolyte from freezing.

Engine (General)

1. While the engine is warm remove the drain plug, drain the oil from the crankcase, and change oil filter. Install drain plug and refill with fresh oil. Let engine cool before storing.
2. Clean exterior of engine. Paint exposed metal or apply a light coat of rust preventative oil.

Add a fuel conditioner or biocide to prevent gelling or bacterial growth in fuel. See your local fuel supplier.

If storing indoors drain fuel from tank.

Close fuel shut off valve.

After Storage

1. Check and reinstall battery.
2. Check or service fuel filter and air cleaner.
3. Check the radiator coolant level.
4. Check oil level in the engine crankcase.
5. Fill the fuel tank with fresh fuel. Open fuel shut off valve and bleed the fuel system.
6. Make certain that the tires are properly inflated.
7. Start and operate the engine at 1/2 throttle. Allow sufficient time for the engine to become properly warmed and lubricated.



WARNING

Never operate the engine without proper ventilation. Exhaust fumes can be fatal when inhaled.

6.1 GENERAL

The troubleshooting chart below lists basic problems that may occur during start up and operation. For more

detailed information regarding the electrical system contact your area Jacobson Dealer.

Symptoms	Possible Causes	Action
Engine will not start.	<ol style="list-style-type: none"> 1. Clutch pedal not depressed. 2. Battery low on charge or defective. 3. Fuel tank empty or dirty. Fuel shut off valve closed. 4. Fuse blown. 	<ol style="list-style-type: none"> 1. Check start up procedure. 2. Inspect condition of battery and battery connections. 3. Fill with fresh fuel. Change fuel filter. Bleed fuel lines. Open fuel shut off valve. 4. Replace fuse.
Engine hard to start or runs poorly.	<ol style="list-style-type: none"> 1. Fuel level low. Fuel or fuel filter dirty. 2. Air cleaner dirty. 3. Injectors, fuel pump. 4. Engine problem. 	<ol style="list-style-type: none"> 1. Fill with fresh fuel. Change fuel filter. Bleed fuel lines. 2. Inspect and replace air filter. 3. Consult engine manual. 4. Consult engine manual.
Engine stops.	<ol style="list-style-type: none"> 1. Fuel tank empty. 	<ol style="list-style-type: none"> 1. Fill with fresh fuel and bleed fuel lines.
Engine overheating.	<ol style="list-style-type: none"> 1. Coolant level low. 2. Air intake restricted. 3. Water pump belt broken or loose. 4. Engine overload. 	<ol style="list-style-type: none"> 1. Inspect and add coolant. 2. Clean cooling air intake. 3. Replace or tighten belt. 4. Reduce forward speed.
Vehicle does not react to throttle pedal.	<ol style="list-style-type: none"> 1. Parking brake engaged. 2. Transmission in Neutral. 3. Clutch Pedal Depressed. 	<p>Disengage parking brake.</p> <p>Depress brake and clutch pedals. Shift to proper gear for desired ground speed. Release brake pedal. Slowly let out clutch while pressing the throttle pedal.</p> <p>Slowly let out clutch pedal.</p>

7 MAINTENANCE & LUBRICATION CHARTS

7.1 GENERAL




WARNING

Before you clean, adjust, or repair this equipment, disengage all drives, lower implements to the ground, engage parking brake, stop engine and remove key from ignition switch to prevent injuries

1. Always clean the grease fitting before and after lubricating.
2. Lubricate with grease that meets or exceeds NLGI Grade 2 LB specifications. Apply grease with a manual grease gun and fill slowly until grease begins to seep out. *Do not use compressed air guns.*
3. For smooth operation of all levers, pivot points and other friction points that are not shown on the lubrication chart apply several drops of SAE 30 oil every 40 hours or as necessary.
4. Grease fittings every 100 hours. Do not over grease drive shaft fittings **(A)**. Too much grease will damage the seals.

7.2 LUBRICATION CHART

Fitting	Description	Qty
A	Drive Shaft	2
B	Upper Ball Joints	2
C	Lower Ball Joints	2
D	Tie Rod Ends	4

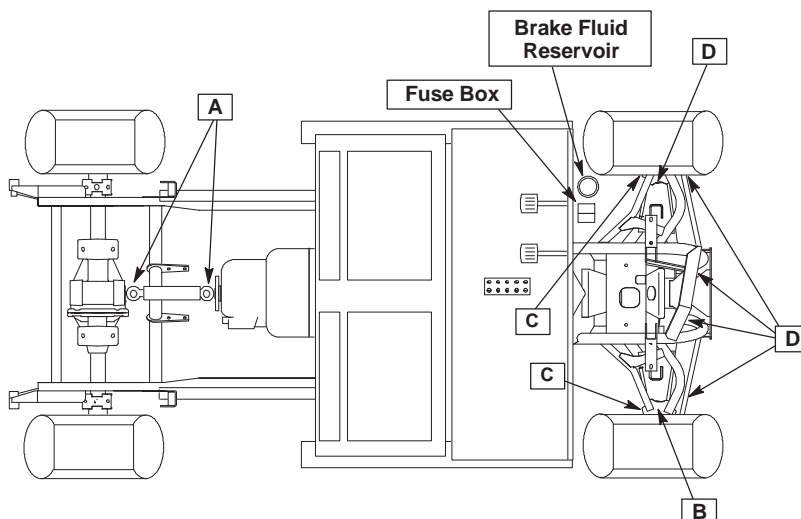

MAINTENANCE & LUBRICATION CHARTS 7

7.3 MAINTENANCE CHARTS

Recommended Service and Lubrication Intervals

	Daily	First 35 Hours	Every 75 Hours or 2 Months	Every 100 Hours or 3 Months	Every 200 Hours or 6 Months	Every 400 Hours or 9 Months	Every 600 Hours or 12 Months	See Section	Lubricant Type
Air Filter					R**			5.8	
Alternator							I		
Battery			I				C	5.10	
Belts	I-A*			I-A			I-A	4., 4.2	
Brake Fluid				I-A				5.21	VI
Brake Linings		I-A*		I-A			I-A		
Clutch				I-A					
Cooling System	I-C-A				I	R		5.7	IV
Differential Fluid				I-R*			R	5.22	III
Electrical System		I*		I				5.26	
Engine Glow Plugs							I		
Engine Idle Speed		I*					I		
Engine Noise / Vibration	I								
Engine Oil (Suzuki)	I	R*****		R**				5.3	
Engine Oil Filter (Suzuki)	I	R*****		R**				5.3	
Engine Oil (Kubota)	I	R*	R**					5.3	II
Engine Oil Filter (Kubota)	I	R*	R**					5.3	
Engine Valve Clearance		I****				I****			
Fluid Leaks	I-R								
Fuel System		I*					I	5.15	
Fuel Filter				R				5.15	
Fuel Water Separator (Diesel Only)	I-C								
Governor Fluid				I-A					IX
Hydraulic Filter							R		
Hydraulic Fluid				I-A			R		VIII
Injection Pump / Timing							I		
Lubricate Chassis				L			L	7.2	I
Muffler and Exhaust	I			I				5.5	
Radiator Screens	I-C/AR							5.7	
Power Steering Fluid		I*		I				5.4	V
Spark Plugs (Gas only)							C-A-R		
Starter Motor Brushes							I		
Tires	I	I-A						5.16	
Transmission Fluid (Manual Transmission)				I			R	5.23 5.24	III
Transmission Fluid (Automatic Transmission)				I			R	5.25	VII
Wheel Bearings							Repack		

A - Add or Adjust C - Clean I - Inspect L - Lubricate R - Repair or Replace AR - As Required

7 MAINTENANCE & LUBRICATION CHARTS

Notes:

- * Indicates initial service for new machines.
- ** Engine oil, oil filter and air filter may require more frequent replacement depending on operating conditions.
- *** Inspect visible hoses and tubes for leaks or oil marks.
- **** Must be done at Authorized Dealer.
- ***** Change oil and filter on Suzuki Engines after first fifty hours.

Lubricants

- I Manual grease gun with NLGI Grade 2 (Service Class LB).
- II Engine Oil - See **Section 5.3**
- III SAE EP 80-90 gear lube
- IV Capacity: 3qt. (2.8 l) 50/50 water ethylene glycol mix
- V GM Power Steering Fluid
- VI DOT 3 brake fluid
- VII Mercon/Dextron II automatic transmission fluid
- VIII GreensCare 68 hydraulic fluid
5003102 55-gallon drum GreensCare 68
5003103 5-gallon pail GreensCare 68
- IX SAE 20W oil

7.4 COMMON REPLACEMENT PARTS

Part Number	Part Description
5000919	Diesel Air Filter Element
840352	Gas Air Filter Element
4113986	Diesel Oil Filter
2701809	Gas Oil Filter
4183591	Diesel Fuel Filter
2701898	Gas Fuel Filter
4175560	Diesel Alternator Belt
4117092	Diesel Hydraulic Pump Belt

Part Number	Part Description
4140919	Gas Water Pump Belt
4139265	Gas Alternator - Power Steering Belt
4139351	Gas Hydraulic Pump Belt
4119606	NGK 3932 (DCPR7E) Spark Plug
2701832	Denso XU22EPR-U Spark Plug

7.5 KUBOTA DIESEL ENGINE SERVICE PARTS

The following common engine parts are provided for reference only. Refer to the Engine Parts Manual for a complete list of service parts.

Part Number	Part Description
2811021	Fuel Solenoid
5000894	Injection Pump
5000901	Injection Pipe #1
5000902	Injection Pipe #2
5000903	Injection Pipe #3
4183586	Fuel Injector
5001265	Injector Return Pipe
4177227	Glow Plug
556412	Thermostat
4134370	Thermostat Gasket
4165525	Water Pump
557867	Water Pump Gasket
4177260	Oil Pan Drain Plug
2500811	Oil Pan Drain Plug Gasket
4113986	Oil Filter
4145944	Oil Fill Cap

Part Number	Part Description
2809955	Oil Fill Cap Seal
2500856	Valve Cover Gasket
557888	Starter Motor
4183623	Alternator

9 PARTS CATALOG

9.1 HOW TO USE THE PARTS CATALOG

Abbreviations

N/S - Not serviced separately. Can only be obtained by ordering main component or kit.

AR -Variable quantity or measurement is required to obtain correct adjustment.

Symbols such as ● next to the item number indicates that a note exists which contains additional information important in ordering that part.

Indented Items

Indented items indicate component parts that are included as part of an assembly or another component. These parts can be ordered separately or as part of the main component.

Item	Part No.	Qty	Description	Serial Numbers/Notes
● 1	123456	1	Mount, Valve	<i>Indicates a piece part</i>
2	789012	1	Valve, Lift	<i>Includes Items 2, and 3</i>
3	345678	1	• Handle	<i>Serviced part included with Item 2</i>
4	N/S	1	• Seal Kit	<i>Non serviced part included with Item 2</i>
5	901234	1	Screw, 1/4-20 x 2" Hex Head	

9.2 TO ORDER PARTS

1. Write your **full** name and **complete** address on the order.
2. Explain where and how to make shipment.
3. Give product number, name and serial number that is stamped on the name plate or serial plate of your product.
4. Order by the quantity desired, the part number and description of the part as given in the parts list.
5. Send or bring the order to an authorized Jacobsen Distributor.
6. Inspect all shipments on receipt. If any parts are damaged or missing file a claim with the carrier before accepting.
7. Do not return material without a letter of explanation listing the parts being returned. Transportation charges must be prepaid.

Use of other than Jacobsen authorized parts will void the warranty.

AVANT-PROPOS

Ce manuel contient les consignes de réglage, de maintenance et de dépannage, ainsi que la liste des pièces, de votre nouvelle machine Cushman. Ce manuel doit être conservé avec la machine, à des fins de référence, pendant son utilisation.

Avant de faire fonctionner votre machine, vous, et toute personne que vous employez, devez lire le manuel attentivement dans son intégralité. En respectant les consignes de sécurité, de fonctionnement et de maintenance, vous prolongerez la durée de vie de votre machine et celle-ci conservera son efficacité maximum.

Si vous souhaitez obtenir de plus amples informations, contactez votre revendeur Cushman.

La plaque comportant le numéro de série est située sur la barre du châssis sous le volant. Cushman vous recommande de consigner les numéros ci-dessous pour vous y référer facilement.

JACOBSEN <small>A Textron Company</small>	CHARLOTTE, NC, USA 1 800 848 1636 Jacobsen.com
MODEL	xxxxx
DATE CODE	xxxxx
LABEL #	xxxxxxxx
SERIAL #	*xxxxxxxx*
	Lb/kg W Batt Nom Power Hp/kw
	

Stockage des pièces de rechange

Pour garder votre équipement entièrement opérationnel et productif, Jacobsen vous conseille de tenir un stock des pièces de maintenance les plus courantes. Nous avons inclus les références de documents d'assistance supplémentaires et de matériels de formation.

Pour commander n'importe quel matériel suivant :

1. Ecrivez votre nom et votre adresse complète sur le bon de commande.
2. Donnez l'adresse de destination et la manière dont doit se faire l'expédition
☐ UPS ☐ Courrier ordinaire
☐ 24 Heures ☐ Deuxième jour
3. Commandez, par la quantité souhaitée, la référence et la description de la pièce.
4. Envoyez ou amenez la commande à votre concessionnaire agréé Jacobsen.

Pièces de rechange

Qté.	Pièce	Description	Qté.	Pièce	Description
	4113986	Filtre à huile moteur diesel		2701908	Filtre à huile moteur essence
	550489	Élément de filtre à carburant moteur diesel		2701898	Filtre à carburant moteur essence
	4175560	Courroie de direction assistée - alternateur diesel		4139265	Courroie de direction assistée - alternateur essence
	4117092	Courroie de pompe hydraulique diesel		4235370	Courroie de pompe hydraulique - régulateur essence
	5000919	Élément de filtre à air moteur diesel		840352	Élément de filtre à air moteur essence
				885249	Élément de filtre hydraulique

Documents d'appui

Qté.	Pièce	Documents de support et d'entretien
	4241725	Manuel de sécurité et de fonctionnement
	4241724	Pièces et Maintenance
	4160162	Manuel des pièces pour moteur Kubota D1105
	4241728	Manuel des pièces pour moteur Suzuki K6A

Qté.	Pièce	Description
	4171642	Manuel d'entretien - véhicule MT
	4171675	Manuel d'entretien - véhicule AT
	4171985	Manuel d'entretien - moteur Suzuki K6A
	4239442	Manuel des accessoires

2006/42/EC

Ce document contient les traductions des instructions originales vérifiées par ACMTRAD SL.

© Copyright 2011, Jacobsen, A Textron Company. « Tous droits réservés, y compris le droit de reproduire ce document ou toute partie de celui-ci sous quelque forme que ce soit. »

Avertissement - Proposition 65

Ce produit contient ou émet des substances chimiques reconnues par l'État de Californie comme étant cancérigènes et pouvant provoquer des anomalies congénitales ou autres problèmes liés à la reproduction.

Table des matieres

1	SECURITE			
1.1	Sécurité d'exploitation	4	5.11	Charge de la batterie
1.2	Consignes de sécurité importantes	5	5.12	Flexibles hydrauliques
2	NUMEROS D'IDENTIFICATION DU VEHICULE		5.13	Réservoir hydraulique et filtre
2.1	Numéro d'identification du véhicule.....	6	5.14	Carburant
2.2	Numéros d'identification du moteur	6	5.15	Circuit d'alimentation en carburant
3	SPECIFICATIONS		5.16	Pression des pneus
3.1	Identification des produits.....	7	5.17	Retrait des pneus et installation
3.2	Moteur diesel	7	5.18	Relevage du véhicule
3.3	Moteur essence.....	7	5.19	Remorquage du véhicule
3.4	Véhicule	8	5.20	Niveau d'huile du régulateur
3.5	Rapports de transmission	8	5.21	Freins hydrauliques
3.6	Poids et dimensions	8	5.22	Liquide du différentiel
3.7	Accessoires et documents techniques	9	5.23	Transmission manuelle moteur diesel
3.8	Déclaration de conformité	10	5.24	Transmission manuelle moteur essence
4	REGLAGES		5.25	Transmission automatique
4.1	Généralités	12		moteur essence
4.2	Accès au moteur	12	5.26	Circuit électrique
4.3	Accès au capot avant	13	5.27	Tableau de bord
4.4	Panneaux d'accès	13	5.28	Remplacement de phare
4.5	Courroie d'alternateur moteur diesel	14	5.29	Remplacement de feu arrière
4.6	Courroie de pompe hydraulique		5.30	Vérification de diagnostic
	moteur diesel	14		d'injection électronique
4.7	Courroie d'alternateur-direction		5.31	Entretien et nettoyage
	assistée moteur essence	14	5.32	Entreposage
4.8	Courroie de pompe hydraulique		6	DEPISTAGE DES DEFAUTS
	moteur essence	15	6.1	Généralités.....
4.9	Câble du frein de stationnement	15		35
4.10	Spécifications des couples de serrage	16	7	TABLEAUX DE MAINTENANCE
5	MAINTENANCE			ET DE GRAISSAGE
5.1	Généralités	17	7.1	Généralités.....
5.2	Moteur	17	7.2	Tableau de lubrification
5.3	Huile moteur	18	7.3	Tableaux de maintenance
5.4	Réservoir de direction assistée	19	7.4	Pièces de rechange courantes
5.5	Silencieux et échappement	19	7.5	Pièces d'entretien du moteur
5.6	Surchauffe du moteur	19		diesel Kubota
5.7	Circuit de refroidissement	20		38
5.8	Filtre à air	21	8	REMARQUES
5.9	Démarrage par connexions volantes	21	9	NOMENCLATURE DES PIECES DE RECHANGE
5.10	Batterie	22	9.1	Utilisation de la nomenclature des
				pièces de rechange.....
			9.2	Commande des pièces de rechange
				40

1 SECURITE

1.1 SECURITE D'EXPLOITATION



AVERTISSEMENT

L'EQUIPEMENT MAL UTILISE OU UTILISE PAR DU PERSONNEL NON COMPETENT S'AVERE DANGEREUX

Se familiariser à la position et à l'utilisation correcte des commandes. Les nouveaux opérateurs doivent être formés par des personnes compétentes avant d'utiliser la machine.

1. La sécurité d'exploitation repose sur la vigilance et la prudence de ceux qui utilisent la machine. Les mineurs ne doivent jamais l'utiliser.
2. L'utilisateur a la responsabilité de lire ce manuel et toutes les publications relatives à ce matériel (Manuels de Maintenance, Moteur, Accessoires et Accouplements, Nomenclature des Pièces de Rechange). Si l'opérateur ne sait pas lire le français, le propriétaire de la machine doit lui expliquer ce manuel.
3. Apprendre le maniement correct de la machine ainsi que l'emplacement et la fonction de chaque commande avant de l'utiliser. Des accidents peuvent survenir lorsque l'on travaille avec du matériel que l'on ne connaît pas bien.
4. Ne jamais laisser qui que ce soit n'ayant pas reçu la formation et les instructions appropriées ou sous l'influence de l'alcool ou de drogues utiliser ni entretenir la machine ou ses accessoires.
5. Porter des vêtements et dispositifs nécessaires afin de se protéger la tête, les yeux, oreilles, mains et pieds. Utiliser la machine uniquement de jour ou sous un bon éclairage artificiel.
6. Etudier le terrain pour déterminer quels sont les accessoires à utiliser pour réaliser le travail correctement et en toute sécurité. Il ne faut utiliser que les accessoires agréés par Jacobsen.
7. Etre vigilant et surveiller les déclivités éventuelles ainsi que les autres risques pouvant être cachés.
8. Inspecter le site où le matériel doit être utilisé. Avant de tondre, ramasser tous les débris visibles dans la zone de travail. Repérer les obstacles en hauteur (branches basses, fils électriques, etc.) ou souterrains (arroseurs, tuyaux, racines, etc.). Approcher les zones non familières avec précaution. Rester attentif aux risques cachés.
9. Ne jamais diriger la goulotte de décharge vers des personnes se trouvant à proximité et ne laisser personne se tenir près de la machine en fonctionnement. L'opérateur est responsable des blessures et/ou dégâts matériels subis.
10. Ne pas transporter de passagers. Eloigner les personnes se trouvant à proximité de la machine de même que les animaux.
11. Ne jamais utiliser de matériel qui n'est pas en parfait état de marche, ou si des autocollants, carters, protecteurs, déflecteurs de décharge ou autres dispositifs de protection ne sont pas solidement assujettis.
12. Ne jamais débrancher et ne jamais contourner les commutateurs.
13. Ne pas modifier le réglage du régulateur du moteur et ne pas dépasser son régime moteur.
14. L'oxyde de carbone présent dans les fumées d'échappement peut être mortel en cas d'inhalation. Ne jamais faire tourner le moteur sans ventilation adéquate.
15. Le carburant est extrêmement inflammable ; le manipuler avec précaution.
16. Le moteur doit rester propre. Laisser le moteur refroidir avant de l'entreposer et toujours retirer la clé de contact.
17. Mettre au point mort, relâcher l'embrayage et serrer le frein de stationnement avant de démarrer le moteur. Il ne faut démarrer le moteur qu'une fois assis sur le siège de l'opérateur et jamais en se tenant près de la machine.
18. La machine doit être conforme aux toutes dernières réglementations routières quand il faut la conduire ou la transporter sur des voies publiques. Faire attention à la circulation pour traverser ou exploiter la machine près des routes.
19. Les réglementations en vigueur peuvent limiter l'âge de l'opérateur.
20. Utiliser la machine au travers des pentes (horizontalement) pour monter ou descendre et non en leur faisant face (verticalement).
21. Afin de ne pas renverser la machine ou d'en perdre son contrôle, ne pas la démarrer et ne pas l'arrêter brusquement sur les pentes. Ralentir dans les tournants et être prudent pour changer de direction.
22. Serrer toujours la ceinture de sécurité quand la machine est munie d'une protection au retournement.
Ne jamais serrer la ceinture de sécurité quand la machine n'est pas munie d'une protection au retournement.
23. Veiller à ce que les membres et le corps restent à l'intérieur de la cabine quand la machine fonctionne.
24. Mettre au point mort (transmission manuelle) ou Stationnement (transmission automatique) et serrer le frein de stationnement avant de quitter le véhicule.
25. Charger les batteries dans une zone ouverte bien ventilée, à l'écart de toute flamme et étincelle.
26. Débrancher le chargeur avant de le connecter et le déconnecter de la batterie. Porter des vêtements de protection et utiliser des outils isolés.

1.2 CONSIGNES DE SECURITE IMPORTANTES



Ce symbole sert à vous signaler la présence de dangers éventuels.

DANGER - Indique un danger immédiat avec **RISQUE** de mort ou de blessures graves.

AVERTISSEMENT - Indique un danger avec **RISQUE EVENTUEL** de mort ou de blessures graves.

ATTENTION - Indique un danger possible avec **RISQUE EVENTUEL** de légères blessures ou d'endommagement de la machine ou des biens. Cela peut également servir à signaler des opérations dangereuses.

AVIS - Indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, **PEUT** endommager des biens. Cela peut également servir à signaler des opérations dangereuses.

Des illustrations paraissent dans la présente notice afin de clarifier les symboles susmentionnés et, certaines représentent des dispositifs de protection ou des plaques ouvertes/déposées. Il est interdit d'utiliser la machine sans ses dispositifs de protection et sans qu'ils ne soient correctement positionnés et serrés.



AVERTISSEMENT

Le système de verrouillage sur ce véhicule empêche au véhicule de démarrer sauf si la pédale d'embrayage est enfoncée (Transmission manuelle) ou si le levier de vitesses est sur P (Stationnement) ou N (point mort) (Transmission automatique).

Ne JAMAIS faire fonctionner le véhicule pendant que le système de verrouillage est en marche.



AVERTISSEMENT

1. Avant de quitter la position de l'utilisateur pour une raison quelconque :
 - a. Retirer le pied de l'accélérateur.
 - b. Ralentir le véhicule à l'aide du frein au pied.
 - c. Relâcher l'embrayage et se mettre au point mort.
 - d. Enclencher le frein de stationnement.
 - e. Arrêter le moteur et retirer la clé de contact.
2. Garder les vêtements, mains et cheveux à l'écart des pièces mobiles. Attendre l'arrêt de toute pièce mobile avant de nettoyer, régler ou entretenir la machine.
3. Garder la zone d'utilisation dépourvue de spectateurs et d'animaux domestiques.
4. Ne jamais transporter de passagers sauf si un siège est prévu pour eux.

En respectant les consignes figurant dans la présente notice, vous prolongerez la vie utile de la machine et maximiserez son rendement. Les réglages et services d'entretien doivent toujours être effectués par des techniciens agréés.

Adressez-vous à votre concessionnaire Jacobsen agréé pour tous renseignements complémentaires ou services d'entretien supplémentaires car il est au courant des toutes dernières techniques et répondra rapidement à vos demandes.

2 NUMEROS D'IDENTIFICATION DU VEHICULE

2.1 NUMERO D'IDENTIFICATION DU VEHICULE

Le numéro d'identification du véhicule (VIN), composé de la référence du modèle, du code dateur et du numéro de série, se trouve sur l'autocollant d'identification / la plaque signalétique fixée à l'entretoise sous le tableau de bord.

Le numéro de série est également estampillé sur l'entretoise. Il est situé à gauche de l'autocollant d'identification / la plaque signalétique.

Remarque : Les références à l'avant, l'arrière, le côté gauche et le côté droit du véhicule sont toujours déterminées depuis la position assise de l'utilisateur.

Consigner les informations d'identification du véhicule ci-dessous pour s'y référer facilement.

Numéro de modèle : _____

Code dateur : _____

Numéro de série : _____


JACOBSEN <small>A Truon Company</small>		CHARLOTTE, NC, USA 1 800 848 1636 Jacobsen.com
MODEL	xxxxx	
DATE CODE	xxxxx	
LABEL #	xxxxxxxx	Lb/kg W Batt
SERIAL #	*xxxxxxxx*	Nom Power Hp/kw
		

Schéma 2A

Toujours fournir le numéro d'identification du véhicule de l'unité lors de la commande de pièces de rechange ou de demandes d'informations relatives à l'entretien. Les numéros d'identification du véhicule doivent apparaître sur toutes les correspondances relatives à ce véhicule.

2.2 NUMEROS D'IDENTIFICATION DU MOTEUR

Le Truckster est équipé soit d'un moteur Kubota® quatre temps, 3 cylindres, à refroidissement liquide, soit d'un moteur essence Suzuki® quatre temps, 3 cylindres, à refroidissement liquide.

Le numéro de série du moteur pour le moteur Kubota est estampillé sur le côté droit du bloc moteur près de l'alternateur.

Le numéro de série du moteur pour le moteur Suzuki est estampillé sur le côté droit du bloc moteur supérieur, sous le support du moteur et peut être partiellement caché par le harnais électrique. Le numéro de série est également mentionné à la main sur le rail du carburant.

Consigner le numéro de série du moteur ci-dessous pour s'y référer facilement.

Numéro de série du moteur : _____

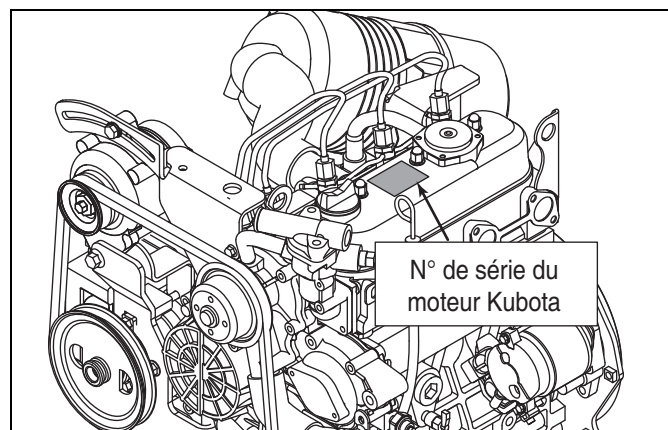


Schéma 2B



Schéma 2C

3.1 IDENTIFICATION DES PRODUITS

84063.....Turf Truckster, moteur diesel à refroidissement liquide, transmission manuelle 4 vitesses, différentiel 2 vitesses 11,16:1, prise de force mécanique et ROPS à 4 montants.	84068.....Turf Truckster, moteur essence à refroidissement liquide, transmission automatique 3 vitesses, différentiel 2 vitesses 14,21:1 et ROPS à 4 montants.
84064.....Turf Truckster, moteur diesel à refroidissement liquide, transmission manuelle 4 vitesses, différentiel 2 vitesses 11,16:1, prise de force mécanique et ROPS à 4 montants. Approuvé CE.	84069.....Turf Truckster, moteur essence à refroidissement liquide, transmission manuelle 5 vitesses, différentiel 2 vitesses 11.16:1 et ROPS à 4 montants.
84067.....Turf Truckster, moteur essence à refroidissement liquide, transmission manuelle 5 vitesses, différentiel 2 vitesses 14,21:1 et ROPS à 4 montants.	

Produit	Puissance sonore CEE	Oreilles de l'opérateur	Vibration M/S ²	
			Bras	Corps
84044	103 dB(A)	84 dB(A)	2,14	0,096

3.2 MOTEUR DIESEL

Fabricant.....Kubota	Bas régime1 300 tr/min
Modèle.....D1105-E3B	Haut régime3 180 tr/min
Puissance26 CV à 3 000 tr/min	Lubrification :
Remarque : La puissance permanente réelle sera probablement inférieure à celle mentionnée dans les spécifications du fait des limites d'utilisation et des facteurs environnementaux.	Capacité5,1 litres
Cylindrée.....1 123 cc	Au-dessous de 0° CSAE 10 W ou 10W30/10W40
Couple.....71,5 Nm à 2 200 tr/min	0 - 25° CSAE 20W ou 10W30/10W40
Carburant :	Au-dessus de 25° C.....SAE 30W ou 10W30/10W40
Type.....Diesel #2 à faible ou très faible teneur en soufre	Classification APICD ou CE
IndiceIndice de cétane mini. 45	Filtre à air.....Type sec avec soupape d'évacuation
Capacité.....24,5 litres	Alternateur60 amp
RégulateurToute mécanique de vitesse	Système de refroidissement.....Refroidissement liquide
	Capacité4,8 litres, mélange éthylène glycol et eau 50/50

3.3 MOTEUR ESSENCE

Fabricant.....Suzuki	RégulateurMécanique externe
Modèle.....K6	Bas régime950 tr/min
Puissance25,35 CV à 4 450 tr/min	Haut régime4 450 tr/min
Cylindrée.....658 cc	Lubrification :
Couple.....51,9 Nm à 3 200 tr/min	Capacité3 litres
Carburant :	Au-dessous de 0° CSAE 10W30
Type.....Essence sans plomb	0 - 30° CSAE 10W30
IndiceIndice d'octane mini. 87	Au-dessus de 30° C.....SAE 10W30W ou 10W40
Capacité.....24,5 litres	Classification APISJ
	Filtre à air.....Type sec avec soupape d'évacuation
	Alternateur60 amp
	Système de refroidissement.....Refroidissement liquide
	Capacité3 litres, mélange éthylène glycol et eau 50/50
	Bougies de préchauffage :
	NGK 3932.....DCPR7E
	DensoXU22EPR-U
	Ecart0,8 - 1,27 mm

AVIS

L'utilisation de tout carburant contenant plus de 10 % d'éthanol peut endommager le système de contrôle des émissions du moteur et, par conséquent, invalider la garantie relative aux émissions, du fait d'une action incorrecte de l'opérateur.

3 SPECIFICATIONS

3.4 VEHICULE

Pneus :

Avant..... 20 x 10 - 10 Nervurés
Arrière 24 x 13 -12 Titan Ultra Trac

Pression des pneus :

Avant..... 1,38 Bar
Arrière 1 - 1,2 Bar

Batterie :

Type 12 volt, accumulateurs au plomb
Groupe 24

Frein principal 4 freins à tambour hydrauliques

Liquide de frein DOT 3

Frein de stationnement ... Intégral sur tambour arrière,
actionné par levier

Direction Direction assistée sur roues avant

Capacité de l'attelage :

PTAC max. de
remorque 680 kg

Poids de la flèche
d'attelage 90,7 kg

Capacité nominale

du véhicule..... 1293 kg

REMARQUE : Lors du calcul du poids de charge, ajoutez les 53,5 kg de la structure de protection anti-retournement (ROPS) à 4 montants. Ne dépassez pas la capacité nominale du véhicule.

3.5 RAPPORTS DE TRANSMISSION

84067 - Rapports de transmission :

5^{ème} vitesse 1,000:1
4^{ème} vitesse 1,264:1
3^{ème} vitesse 1,908:1
2^{ème} vitesse 3,017:1
1^{ère} vitesse..... 5,106:1
Marche arrière..... 5,151:1
Différentiel hypoïde... 14,21:1 avec réduction 3,2:1

84068 - Rapports de transmission :

3^{ème} vitesse 1,000:1
2^{ème} vitesse 1,536:1
1^{ère} vitesse..... 2,727:1
Marche arrière..... 2,222:1
Différentiel hypoïde... 14,21:1 avec réduction 3,2:1

84069 - Rapports de transmission :

5^{ème} vitesse 1,000:1
4^{ème} vitesse 1,264:1
3^{ème} vitesse 1,908:1
2^{ème} vitesse 3,017:1
1^{ère} vitesse 5,106:1
Marche arrière 5,151:1
Différentiel hypoïde... 11,16:1 avec réduction 3,2:1

84063 et 84064 - Rapports de transmission :

4^{ème} vitesse 1,000:1
3^{ème} vitesse 1,423:1
2^{ème} vitesse 1,947:1
1^{ère} vitesse 3,652:1
Marche arrière 3,463:1
Différentiel hypoïde... 11,16:1 avec réduction 3,2:1

3.6 POIDS ET DIMENSIONS

Dimensions :

	mm
Longueur.....	2 897
Hauteur	1 892
Empattement.....	1 478
Rayon de braquage (Extérieur).....	6 146

Poids :

	kg
84063.....	834
84064.....	838
84056.....	766
84057.....	682
84061.....	766

3.7 ACCESSOIRES ET DOCUMENTS TECHNIQUES

Adressez-vous à votre concessionnaire agréé Jacobsen pour obtenir la liste complète des accessoires et outils.



ATTENTION

L'utilisation de pièces et d'accessoires autres que ceux agréés de Jacobsen risque de provoquer des blessures, d'endommager le matériel et d'annuler la garantie.

Plateaux et caisses

Plateau à déconnexion rapide 1,17 m	889983
Plateau à déconnexion rapide 1,5 m	894769
Assemblage de caisse 1,17 m (nécessite 889983) ..	890010
Assemblage de caisse 1,5 m (nécessite 894769) ..	2703394
Assemblage de caisse en polyéthylène.....	892530
Doublure de caisse (pour 890010).....	888532

Attelages

Sellette d'attelage	894690
Flèche d'attelage de type récepteur.....	4114386
Attelage de type plat	4114566

Equipements du cadre de protection

Cadre de protection supérieur	894761
Porte en acier, côté gauche (nécessite 894761)	2701303
Porte en acier, côté droit (nécessite 894761)	2701304
Rétroviseurs extérieurs (droit et gauche)	894768
Vitre arrière	894758
Pare-brise avec essuie-glace.....	894757
ROPS à 4 montants de rechange	4205580

REMARQUE : La structure de protection anti-retournement (ROPS) à 4 montants équipée en série sur ce véhicule ne peut être utilisée avec les accessoires de cabine. Si vous souhaitez une cabine fermée, la ROPS à 4 montants doit être remplacée par la ROPS supérieure 894761.

Equipements hydrauliques

Système hydraulique essence Haut/Bas	4147940
Système hydraulique diesel Haut/Bas	894713
Système de levage (structure en « A »)	892493
Coupleur sec, 1 jeu	894604
Prise de force hydraulique (nécessite 894712 et 894713)	894644

Equipements du chariot

Prise de force mécanique robuste	4112981
Aérateur rapide	2701529
Montage d'éperon (commande de pulvérisateur) ...	4119631
Epandeur d'engrais 1500	2701650
Signal de virage avec feu arrière droit.....	894764
Epandeuse VICON (nécessite 2701601 ou 2701602)	2701600
Kit d'alimentation hydraulique VICON	2701601
Kit d'alimentation mécanique VICON	2701602
Avertisseur sonore de recul	2703183
Echappement pare-étincelles	882574
Dégivrage par réchauffeur	894760

Documentation de support


Manuel d'utilisation et de sécurité	4175886
Manuel Pièces et Maintenance	4175887
Manuel des pièces du moteur Suzuki.....	4140632
Manuel des pièces du moteur Kubota	4160162
Manuel de réparation et entretien	

3 SPECIFICATIONS

3.8 DECLARATION DE CONFORMITE

DECLARATION OF CONFORMITY • ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ • PROHLÁŠENÍ O SHODĚ •
OVERENSSTEMMELSESERKLÆRING • CONFORMITEITSVERKLARING • VASTAVUSDEKLARATSIOON •
VAATIMUSTENMUKAISUUSVAKUUTUS • DECLARATION DE CONFORMITE • KONFORMITÄTSEKTLÄRUNG •
ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ • MEGFELELŐSÉGI NYILATKOZAT • DICHIARAZIONE DI CONFORMITÀ • ATBILSTĪBAS
DEKLARĀCIJA • ATITIKTIES DEKLARACIJA • DIKJARAZZJONI TAL-KONFORMITÀ • DEKLARACJA ZGODNOŚCI •
DECLARAÇÃO DE CONFORMIDADE • DECLARAȚIE DE CONFORMITATE • VYHLÁSENIE O ZHODE • IZJAVA O
SKLADNOSTI • DECLARACIÓN DE CONFORMIDAD • DEKLARATION OM ÖVERENSSTÄMMELSE

Business name and full address of the manufacturer • Търговско име и пълен адрес на производителя • Obchodní jméno a plná adresa výrobce • Producentens firmanavn og fulde adresse • Bedrijfsnaam en volledig adres van de fabrikant • Tootja ärinimi ja täielik address • Valmistajan toiminimi ja täydellinen osoite • Nom commercial et adresse complète du fabricant • Firmenname und vollständige Adresse des Herstellers • Εταιρεία και ταχυδρομική διεύθυνση κατασκευαστή • A gyártó üzleti neve és teljes címe • Ragione sociale e indirizzo completo del fabbricante • Uzņēmuma nosaukums un pilna ražotāja adrese • Verslo pavadinimas ir pilnas gamintojo adresas • Isem kummerčiali u indirizz shih tal-fabbrikant • Nazwa firmy i pełny adres producenta • Nome da empresa e endereço completo do fabricante • Denumirea comercială și adresa completă a producătorului • Obchodný názov a úplná adresa výrobcu • Naziv podjetja in polni naslov proizvajalca • Nombre de la empresa y dirección completa del fabricante • Tillverkarens företagsnamn och kompletta adress	Jacobsen, A Textron Company 11524 Wilmar Blvd. Charlotte, NC 28273, USA
Product Code • Код на продукта • Kód výrobku • Produktkode • Productcode • Toote kood • Tuotekoodi • Code produit • Produktcode • Κωδικός προϊόντος • Termékkód • Codice prodotto • Produkta kods • Produkto kodas • Kódici tal-Prodott • Kod produktu • Código do Produto • Cod produs • Kód výrobku • Oznaka proizvoda • Código de producto • Produktkod	84064
Machine Name • Наименование на машината • Název stroje • Maskinnavn • Machinenam • Masina nimi • Laitteen nimi • Nom de la machine • Maschinenbezeichnung • Ονομασία μηχανήματος • Gépnév • Denominazione della macchina • Iekārtas nosaukums • Mašinos pavadinimas • Isem tal- Magna • Nazwa urządzenia • Nome da Máquina • Numele echipamentului • Názov stroja • Naziv stroja • Nombre de la máquina • Maskinens namn	Diesel Turf Truckster
Designation • Предназначение • Označení • Betegnelse • Benaming • Nimetus • Tyypimerkintä • Pažymėjimas • Bezeichnung • Χαρακτηρισμός • Megnevezés • Funzione • Apzīmējums • Lithuanian • Denominazzjoni • Oznaczenie • Designação • Specificație • Označenie • Namen stroja • Descripción • Beteckning	Article 13
Serial Number • Серийн номер • Sériové číslo • Seriennummer • Seriennummer • Seerianumber • Valmistusnumero • Numéro de série • Seriennummer • Σειριακός αριθμός • Sorozatszám • Numero di serie • Sérjás numurs • Serijos numeris • Numru Serjali • Numer seryjny • Número de Série • Număr de serie • Sériové číslo • Serijska številka • Número de serie • Seriennummer	8406401651-8406404500
Engine • Двигател • Motor • Motor • Motor • Mootor • Moottori • Moteur • Motor • Μηχανή • Modulínév • Motore • Dzinējs • Variklis • Sahha Netta Installata • Silnik • Motor • Motor • Motor • Motor • Motor • Motor	Kubota D1105-E3B
Net Installed Power • Нетна инсталирана мощност • Čistý instalovaný výkon • Installeret nettoeffekt • Netto geïnstalleerd vermogen • Installeeritud netovõimsus • Asennettu nettoteho • Puissance nominale nette • Installierte Nettoleistung • Καθαρή εγκατεστημένη ισχύς • Nettó beépített teljesítmény • Potenza netta installata • Paredzētā tīkla jauda • Grynoji galia • Wisa' tal-Qtugh • Moc zainstalowana netto • Potência instalada • Puterea instalată netă • Čistý instalovaný výkon • Neto vgrajena moč • Potencia instalada neta • Nettoeffekt	18,5 kW @ 3200 RPM
Cutting Width • Широчина на рязане • Šírka fezu • Skærebredde • Maai breedte • Löikelaius • Leikkuuleveys • Largeur de coupe • Schnittbreite • Μήκος μισιλέας • Vágási szélesség • Larghezza di taglio • Griešanas platums • Pjovimo plotis • Tikkonforma mad-Direttivi • Szerokość ciecja • Largura de Corte • Lățimea de tăiere • Šírka záberu • Širina reza • Anchura de corte • Klippbredd	NA
Conforms to Directives • В съответствие с директивите • Splūšje podmínky smérnic • Er i overensstemmelse med direktiver • Voldoet aan de richtlijnen • Vastab direktiividele • Direktiivien mukainen • Conforme aux directives • Entspricht Richtlinien • Ακολουθήστε πιστά τις Οδηγίες • Megfelel az irányelveknek • Conforme alle Direttive • Atitinka direktivām • Atitinka direktīvų reikalavimus • Konformitātsbeurteilung • Διαιστώση Συμμόρφωσης • Cumpre as Directivas • Respectă Directivele • Je v súlade so smernicami • Skladnost z direktivami • Cumple con las Directivas • Uppfyller direktiv	2004/108/EC 2006/42/EC 2000/14/EC, 2005/88/EC 2006/66/EC
Conformity Assessment • Оценка за съответствие • Hodnocení plnění podmínek • Overensstemmelsesvurdering • Conformiteitsbeoordeling • Vastavushindamine • Vaatimustenmukaisuuden arviointi • Evaluation of conformity • Konformitätsbeurteilung • Διαπίστωση Συμμόρφωσης • Megfelelőség-értékelés • Valutazione della conformità • Atbilstības novērtējums • Atitikties įvertinimas • Livell tal-Qawwa tal-Hoss Imkejjel • Ocena zgodności • Avaliação de Conformidade • Evaluarea conformității • Vyhodnotenie zhodnosti • Ocena skladnosti • Evaluación de conformidad • Bedömning av överensstämmelse	2006/42/EC Annex VIII
Measured Sound Power Level • Измерено ниво на звукова мощност • Naměřený akustický výkon • Målte lydstyrkeniveau • Gemeten geluidsniveau • Mõõdetud helivõimsuse tase • Mittattu äänitehotaso • Niveau de puissance sonore mesuré • Gemessener Schalldruckpegel • Σταθμευμένο επίπεδο ηχητικής ισχύος • Mért hangteljesítményszint • Livello di potenza sonora misurato • Izmērtais skaņas jaudas līmenis • Išmatuotas garso stiprumo lygis • Livell tal-Qawwa tal-Hoss Iggarantit • Moc akustyczna mierzona • Nivel sonoro medido • Nivelul măsurat al puterii acustice • Nameranā hlada akustiskāheji vājums • Izmerjena raven zvone moči • Nivel de potencia sonora medido • Uppmätt ljudeffektsnivå	103 dB(A) LWA
Guaranteed Sound Power Level • Гарантирано ниво на звукова мощност • Garantovaný akustický výkon • Garanteret lydstyrkeniveau • Gegarandeerd geluidsniveau • Garanteeritud helivõimsuse tase • Taattu äänitehotaso • Niveau de puissance sonore garanti • Garantierter Schalldruckpegel • Εγγυημένο επίπεδο ηχητικής ισχύος • Szavatolt hangteljesítményszint • Livello di potenza sonora garantito • Garantētais skaņas jaudas līmenis • Garantuotas garso stiprumo lygis • Livell tal-Qawwa tal-Hoss Iggarantit • Moc akustyczna gwarantowana • Nivel sonoro farantido • Nivelul garantat al puterii acustice • Garantovaná hlada akustického výkonu • Zajamčena raven zvone moči • Nivel de potencia sonora garantizado • Garanterad ljudeffektsnivå	104 dB(A) LWA
Conformity Assessment Procedure (Noise) • Оценка за съответствие на процедурата (Шум) • Postup hodnocení plnění podmínek (hluk) • Procedure for overensstemmelsesvurdering (Støj) • Procedure van de conformiteitsbeoordeling (geluid) • Vastavushindamisemenetus (müra) • Vaatimustenmukaisuuden arviointimenetelmä (Melu) • Procédure d'évaluation de conformité (bruit) • Konformitätsbeurteilungsverfahren (Geräusch) • Διαδικασία Αξιολόγησης Συμμόρφωσης (Θόρυβος) • Megfelelőség-értékelési eljárás (Zaj) • Procedura di valutazione della conformità (rumore) • Atbilstības novērtējuma procedūra (troksnis) • Atitikties įvertinimo procedūra (garsas) • Procedura tal-Valutazzjoni tal-Konformità (Hoss) • Procedura oceny zgodności (poziom hałas) • Processo de avaliação de conformidade (nível sonoro) • Procedura de evaluare a conformității (zgomot) • Postup vyhodnocovania zhodnosti (hluk) • Postopek za ugotavljanje skladnosti (hrup) • Procedimiento de evaluación de conformidad (ruido) • Procedur för bedömning av överensstämmelse (buller)	2000/14/EC Annex V
UK Notified Body for 2000/14/EC • Нотифициран орган в Обединеното кралство за 2000/14/EO • Úřad certifikovaný podle směrnice č. 2000/14/EC • Det britiske bemyndigede organ for 2000/14/EF • Engels adviesorgaan voor 2000/14/EG • Ühendkuningriigi teavitatud asutus direktiivi 2000/14/EÜ mõistes • Direktiivin 2000/14/EY mukainen ilmoitettu tarkastuslaitos Isossa-Britanniassa • Organisme notifié concernant la directive 2000/14/CE • Britische benannte Stelle für 2000/14/EG • Κοινοποιημένος Οργανισμός Ηνωμένου Βασιλείου για 2000/14/EK • 2000/14/EK – egyesült királyságbeli bejelentett szervezet • Organismo Notificato in GB per 2000/14/CE • 2000/14/EK AK registrētā organizācija • JK notifikuotais istaigoss 2000/14/EC • Korp Notifikat tar-Renju Unit ghal 2000/14/KE • Dopuszczona jednostka badawcza w Wielkiej Brytanii wg 2000/ 14/WE • Entidade notificada no Reino Unido para 2000/14/CE • Organism notificat în Marea Britanie pentru 2000/14/CE • Notifikovaný orgán Spojeného královstva pre smernicu 2000/14/ES • Britanski prijavljeni organ za 2000/14/ES • Cuerpo notificado en el Reino Unido para 2000/14/CE • Anmält organ för 2000/14/EG i Storbritannien	Number: 1088 Sound Research Laboratories Limited Holbrook House, Little Walsingham Sudbury, Suffolk CO10 0TH
Operator Ear Noise Level • Оператор на нивото на доповим от ухото шум • Hladina hluku v oblasti uší operátora • Støjniveau i førers ørehøjde • Geluidsniveau oor bestuurder • Műratase operátori körvas • Melutase käyttäjän korvan kohdalla • Niveau de bruit à hauteur des oreilles de l'opérateur • Schallpegel am Bedienerohr • Επίπεδο θορύβου σε λειτουργία • A kezelő fülelőli mért zajszint • Livello di potenza sonora all'orecchio dell'operatore • Troksņa līmenis pie operatora auss • Dirbančiojo su mašina patiriamas triukšmo lygis • Livell tal-Hoss fil-Widna tal-Operator • Dopuszczalny poziom hałasu dla operatora • Nivel sonoro nos ouvidos do operador • Nivelul zgomotului la urechea operatorului • Hladina hluku pôsobiaci na sluch operátora • Raven hrupa pri užesu upravljavca • Nivel sonoro en el oído del operador • Ljudnivå vid förarens öra	84 dB(a) Leq (2006/42/EC)
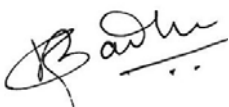
<p>Harmonised standards used • Използвани хармонизирани стандарти • Použité harmonizované normy • Brugte harmoniserede standarder • Gebruikte geharmoniseerde standaards • Kasutatud ühtlustatud standardid • Käytetyt yhdenmukaistettut standardit • Normes harmonisées utilisées • Angewandte harmonisierte Normen • Εναρμονισμένα πρότυπα που χρησιμοποιήθηκαν • Harmonizált szabványok • Standard armonizzati applicati • Izmantotie saskarotie standarti • Panaudoti suderinti standartai • Standards armonizzati usati • Normy spójne powiązane • Normas harmonizadas usadas • Standardele armonizate utilizate • Použité harmonizované normy • Uporabljeni usklajeni standardi • Estándares armonizados utilizados • Harmoniserade standarder som används</p>	<p>BS EN ISO 20643 BS EN ISO 5349-1 BS EN ISO 5349-2</p>
<p>Technical standards and specifications used • Използвани технически стандарти и спецификации • Použité technické normy a specifikace • Brugte tekniske standarder og specifikationer • Gebruikte technische standaards en specificaties • Kasutatud tehnilised standardid ja spetsifikatsioonid • Käytetyt tekniset standardit ja eritelmät • Spécifications et normes techniques utilisées • Angewandte technische Normen und Spezifikationen • Τεχνικά πρότυπα και προδιαγραφές που χρησιμοποιήθηκαν • Műszaki szabványok és specifikációk • Standard tecnici e specifiche applicati • Izmantotie tehniekie standarti un specificācijas • Panaudoti techniniai standartai ir techninė informacija • Standards u specifikacijonijiet technici užati • Normy i specyfikacje techniczne powiązane • Normas técnicas e especificações usadas • Standardele tehnice și specificațiile utilizate • Použité technické normy a specifikácie • Uporabljeni tehnični standardi in specifikacije • Estándares y especificaciones técnicas utilizadas • Tekniska standarder och specifikationer som används</p>	<p>ISO 2631-1 SAE 21299</p>
<p>The place and date of the declaration • Място и дата на декларацията • Místo a datum prohlášení • Sted og dato for erklæringen • Plaats en datum van de verklaring • Deklaratsiooni väljastamise koht ja kuupäev • Vakuutuksen paikka ja päivämäärä • Lieu et date de la déclaration • Ort und Datum der Erklärung • Τόπος και ημερομηνία δήλωσης • A nyilatkozat kelte (hely és idő) • Luogo e data della dichiarazione • Deklarācijas vieta un datums • Deklaracijos vieta ir data • Il-post u d-data tad-dikjarazzjoni • Miejsce i data wystawienia deklaracji • Local e data da declaração • Locul și data declarației • Miesto a dátum vyhlásenia • Kraj in datum izjave • Lugar y fecha de la declaración • Plats och datum för deklarationen</p>	<p>Jacobsen, A Textron Company 11524 Wilmar Blvd. Charlotte, NC 28273, USA January 1, 2011</p>
<p>Signature of the person empowered to draw up the declaration on behalf of the manufacturer, holds the technical documentation and is authorised to compile the technical file, and who is established in the Community. Подпис на човека, упълномощен да състави декларацията от името на производителя, който поддържа техническата документация и е оторизиран да изготви техническия файл и е регистриран в общността. Podpis osoby oprávněné sestavit prohlášení jménem výrobce, držet technickou dokumentaci a osoby oprávněné sestavit technické soubory a založené v rámci Evropského společenství. Underskrift af personen, der har fuldmagt til at udarbejde erklæringen på vegne af producenten, der er indehaver af dokumentationen og er bemyndiget til at udarbejde den tekniske journal, og som er baseret i nærområdet. Handtekening van de persoon die bevoegd is de verklaring namens de fabrikant te tekenen, de technische documentatie bewaart en bevoegd is om het technische bestand samen te stellen, en die is gevestigd in het Woongebied. Ühenduse registreeris kantud isiku allkiri, kes on volitatud tootja nimel deklaratsiooni koostama, kes omab tehnilist dokumentatsiooni ja kellel on õigus koostada tehniline toimik. Sen henkilön allekirjoitus, jolla on valmistajan valtuutus vakuutuksen laadintaan, jolla on hallussaan tekniset asiakirjat, joka on valtuutettu laatimaan tekniset asiakirjat ja joka on sijottautunut yhteisöön. Signature de la personne habilitée à rédiger la déclaration au nom du fabricant, à détenir la documentation technique, à compiler les fichiers techniques et qui est implantée dans la Communauté. Unterschrift der Person, die berechtigt ist, die Erklärung im Namen des Herstellers abzugeben, die die technischen Unterlagen aufbewahrt und berechtigt ist, die technischen Unterlagen zusammenzustellen, und die in der Gemeinschaft niedergelassen ist. Υπογραφή ατόμου εξουσιοδοτημένου για την σύνταξη της δήλωσης εκ μέρους του κατασκευαστή, ο οποίος κατέχει την τεχνική έκθεση και έχει την εξουσιοδότηση να ταξινομήσει τον τεχνικό φάκελο και ο οποίος είναι διορισμένος στην Κοινότητα. A gyártó nevében meghatalmazott személy, akinek jogában áll módosítania a nyilatkozatot, a műszaki dokumentációt őrizi, engedélyvel rendelkezik a műszaki fájllal összeállításához, és aki a közösségen letelepedett személy. Firma della persona autorizzata a redigere la dichiarazione a nome del fabbricante, in possesso della documentazione tecnica ed autorizzata a costituire il fascicolo tecnico, che deve essere stabilita nella Comunità. Tās personas paraksts, kura ir pilnvarota deklarācijas sastādīšanai ražotāja vārdā, kurai ir tehniskā dokumentācija, kura ir pilnvarota sagatavot tehnisko registru un kura ir apstiprināta Kopienā. Asmuo, kuris yra gana žinomas, kuriam gamintojas suteikė įgaliojimus sudaryti šią deklaraciją, ir kuris ją pasirašė, turi visą techninę informaciją ir yra įgaliotas sudaryti techninės informacijos dokumentą. Il-firma tal-persuna awtorizzata li fassal id-dikjarazzjoni f'isem il-fabbrikant, għandha d-dokumentazzjoni teknika u hija awtorizzata li tikkompila l-fajl tekniku u li hija stabbilita fil-Komunità. Podpis osoby upoważnionej do sporządzenia deklaracji w imieniu producenta, przechowującej dokumentację techniczną, upoważnioną do stworzenia dokumentacji technicznej oraz wyznaczonej ds. wspólnotowych. Assinatura da pessoa com poderes para emitir a declaração em nome do fabricante, que possui a documentação técnica, que está autorizada a compilar o processo técnico e que está estabelecida na Comunidade. Semnătura persoanei împuternicite să elaboreze declarația în numele producătorului, care deține documentația tehnică, este autorizată să compileze dosarul tehnic și este stabilită în Comunitate. Podpis osoby poverenej vystavením vyhlásenia v mene výrobcu, ktorá má technickú dokumentáciu a je oprávnená spracovať technické podklady a ktorá je umiestnená v Spoločenstve. Podpis osebe, pooblašene za izdelavo izjave v imenu proizvajalca, ki ima tehnično dokumentacijo in lahko sestavlja spis tehnične dokumentacije, ter ima sedež v Skupnosti. Firma de la persona responsable de la declaración en nombre del fabricante, que posee la documentación técnica y está autorizada para recopilar el archivo técnico y que está establecido en la Comunidad. Undertecknas av den som bemyndigad att upprätta deklarationen är tillverkarens vägnar, innehar den tekniska dokumentationen och är bemyndigad att sammanställa den tekniska informationen och som är etablerad i gemenskapen.</p>	<p>2006/42/EC Annex II 1.A.2</p> <p>Tim Lansdell Technical Director Ransomes Jacobsen Limited West Road, Ransomes Europark, Ipswich, IP3 9TT, England</p> <p>2006/42/EC Annex II 1.A.10</p>  <p>Vasant Godhalekar VP of Engineering Jacobsen, A Textron Company 11524 Wilmar Blvd, Charlotte, NC 28273, USA</p>
<p>Certificate Number • Номер на сертификат • Číslo osvědčení • Certifikatnummer • Certificaatnummer • Sertifikaadi number • Hyväksyntänumero • Número de certificat • Bescheineigungsnummer • Αριθμός Πιστοποιητικού • Hitelesítési szám • Numero del certificato • Sertifikata numurs • Sertifikato numeris • Numru tač-Certifikat • Numer certyfikatu • Número do Certificado • Număr certificat • Číslo osvedčenia • Številka certifikata • Número de certificado • Certifikatsnummer</p>	<p>4175887 Rev B</p>

GB English	BG български	CZ čeština	DK dansk	NL Nederlands	EE eesti	FI suomi	FR français	DE Deutsch	GR Ελληνικά	HU magyar
IT italiano	LV latviešu valoda	LT lietuvių kalba	MT Malki	PL polski	PT português	RO Română	SK slovenčina	SI slovenščina	ES Ελληνικά	SE Svenska

4 REGLAGES

4.1 GENERALITES



AVERTISSEMENT

Afin d'éviter les blessures, abaisser les accessoires au sol, désembrayer les entraînements, serrer le frein de stationnement, arrêter le moteur et retirer la clé de contact avant toute intervention de maintenance ou réglage.

Il faut garer la machine sur une surface ferme et nivelée et ne jamais effectuer d'intervention dessus si elle n'est maintenue que par un cric. Utiliser toujours des béquilles.

Quand seul l'avant ou l'arrière de la machine est relevé, placer des cales sur l'avant et sur l'arrière des roues qui ne sont pas relevées.

1. Les réglages et interventions de maintenance ne doivent être effectués que par du personnel compétent. Quand un réglage ne peut être réalisé, consulter un concessionnaire Cushman agréé.
2. Les composants endommagés ou usés doivent être remplacés et non ajustés.
3. Les cheveux longs et vêtements lâches risquent de s'accrocher aux pièces mobiles.



ATTENTION

Il faut surveiller les mains et doigts qui risquent de se coincer entre les composants mobiles et fixes de la machine.

4. Il ne faut pas modifier les réglages du régulateur et dépasser le régime prescrit du moteur.
5. Garder les mains et les pieds à l'écart des pièces mobiles. Si possible, ne pas effectuer de réglages lorsque le moteur est en marche.

4.2 ACCES AU MOTEUR

Ne jamais retirer ou installer le capot moteur lorsque le moteur est en fonctionnement. Le capot moteur est une protection de machinerie et son retrait vous expose à des pièces mobiles. Garder les mains, cheveux et vêtements à l'écart du volant d'inertie, du ventilateur de refroidissement du radiateur, du ventilateur de l'alternateur, des courroies du moteur, des poulies et de l'admission d'air.



AVERTISSEMENT

Garder les vêtements, mains et cheveux à l'écart des pièces mobiles. Ces éléments pourraient s'emmêler et provoquer de graves blessures corporelles.

Pour l'entretien du moteur et des composants associés, le capot moteur peut être incliné vers l'avant ou retiré.

Pour pouvoir accéder au moteur, déverrouiller le verrou à clé si installé, pousser le loquet du capot moteur vers l'arrière de l'unité et incliner le capot vers l'avant.

Au moment de remettre en place le capot moteur, vérifier que les attaches situées aux coins avant du capot moteur sont insérées dans les encoches du plancher. Incliner le siège vers l'arrière jusqu'à ce que le loquet du moteur s'enclenche. Verrouiller le verrou à clé le cas échéant.



AVERTISSEMENT

Tout manquement à verrouiller le siège correctement peut se traduire par une inclinaison du capot moteur entraînant la perte de contrôle du véhicule et une blessure corporelle potentielle.

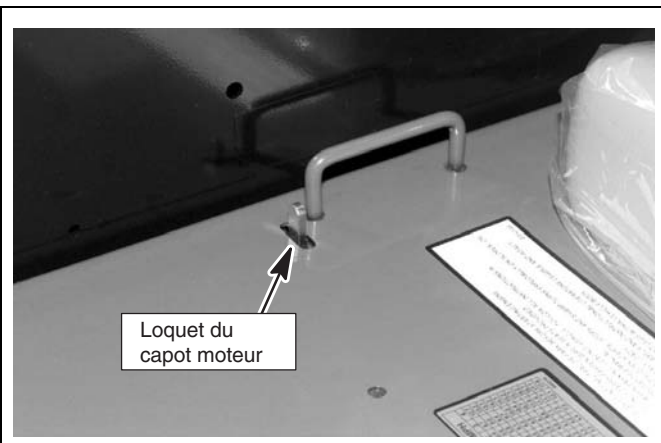


Schéma 4A

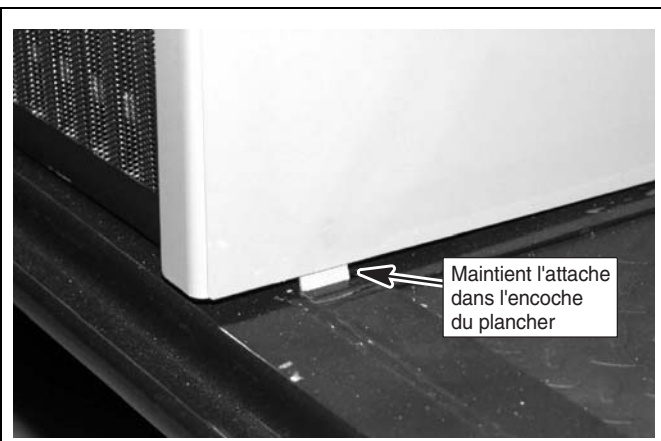


Schéma 4B

4.3 ACCES AU CAPOT AVANT

La capot avant s'ouvre pour permettre d'accéder aux deux panneaux d'accès, à la boîte à fusibles, à l'avertisseur et au réservoir du cylindre principal.

Pour ouvrir le capot avant, localiser le levier de déverrouillage dans le coin supérieur gauche de la fermeture avant, près du phare côté gauche.

Tirer le levier vers le phare pour déverrouiller le loquet du capot avant et, en même temps, soulever le capot avant.

Ouvrir entièrement le capot et le laisser posé sur le volant ou sur la structure supérieure du cadre de protection (ROPS) (si installé).

La capot avant ne s'élève pas lorsque le levier de déverrouillage est tiré, il doit être soulevé manuellement.

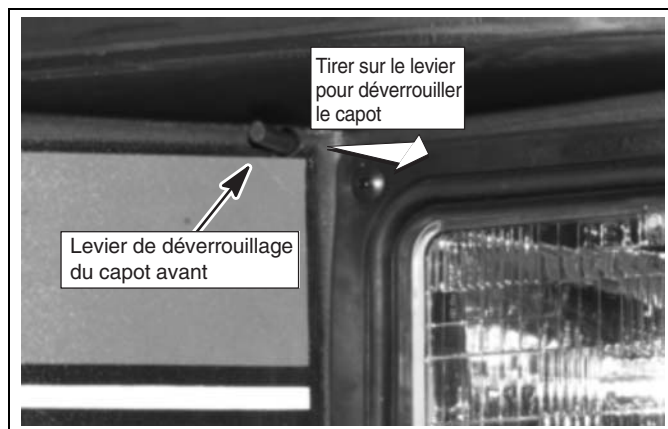


Schéma 4C

4.4 PANNEAUX D'ACCES

Il existe deux panneaux d'accès situés sous le capot avant et au milieu du plancher.

Retirer le panneau **(A)** situé sous le capot pour accéder à l'embrayage et au câblage du tableau de bord.

Retirer le panneau **(B)** situé sous le capot pour accéder à la suspension avant.

Retirer le panneau central **(C)** situé au milieu du plancher pour accéder au câble d'accélérateur, à la tringlerie de la pédale d'accélérateur, à un harnais de câbles et à la conduite de frein hydraulique arrière.

Remarque : Il sera nécessaire de retirer la pédale d'accélérateur afin de retirer complètement le panneau de plancher central.

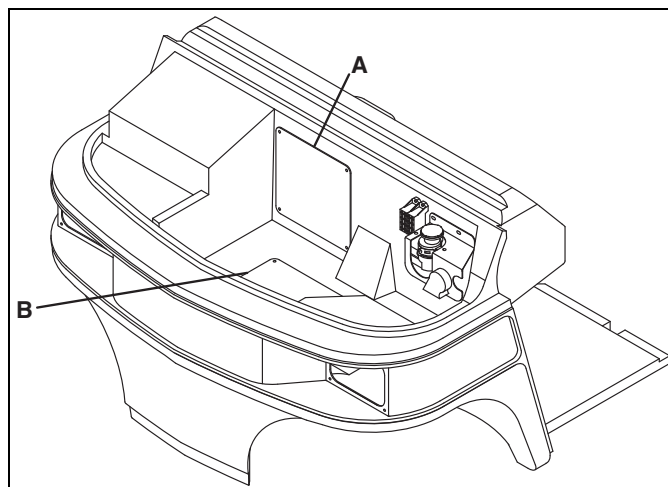


Schéma 4D

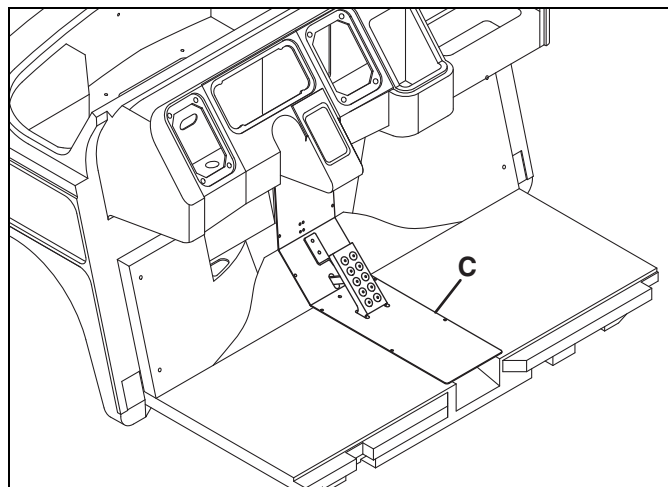


Schéma 4E

4 REGLAGES

4.5 COURROIE D'ALTERNATEUR MOTEUR DIESEL

Inspecter et ajuster la courroie neuve après les premières 24-48 heures d'utilisation. Ajuster toutes les 200 heures par la suite.

Ajuster la poulie d'alternateur afin que la courroie fléchisse de 6 à 12 mm lorsqu'une pression de 9 kg est exercée à mi-chemin entre la pompe à eau et les poulies d'alternateur.

Si la tension est incorrecte, desserrer les boulons de montage de l'alternateur (**D**) et ajuster l'alternateur jusqu'à ce que la tension de courroie correcte soit obtenue.

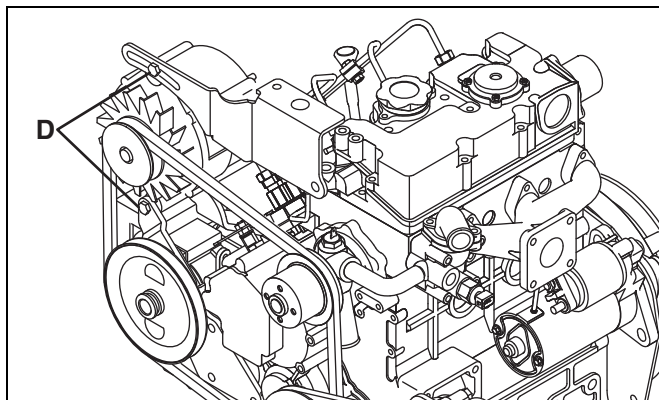


Schéma 4F

4.6 COURROIE DE POMPE HYDRAULIQUE MOTEUR DIESEL

Inspecter et ajuster la courroie neuve après les premières 24-48 heures d'utilisation. Ajuster toutes les 200 heures par la suite.

Ajuster la courroie de pompe hydraulique afin que la courroie fléchisse de 6 à 12 mm lorsqu'une pression de 9 kg est exercée à mi-chemin entre les poulies.

Si la tension est incorrecte, desserrer les boulons de montage de la pompe (**E**) et l'écarter prudemment du moteur jusqu'à ce que la tension de courroie correcte soit obtenue.

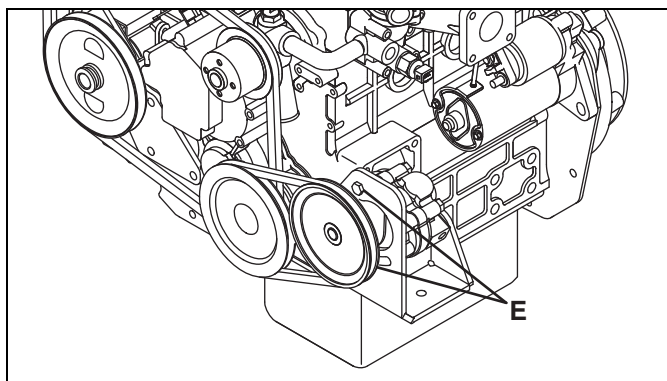


Schéma 4G

4.7 COURROIE D'ALTERNATEUR-DIRECTION ASSISTEE MOTEUR ESSENCE

Inspecter et ajuster la courroie neuve après les premières 24-48 heures d'utilisation. Ajuster toutes les 200 heures par la suite.

Ajuster la pompe de la direction assistée afin que la courroie fléchisse de 6 à 12 mm lorsqu'une pression de 17,5 kg est exercée à mi-chemin entre les poulies.

Si la tension est incorrecte, desserrer les boulons de montage de la pompe de direction assistée (**F**) et l'écarter prudemment du moteur jusqu'à ce que la tension de courroie correcte soit obtenue.

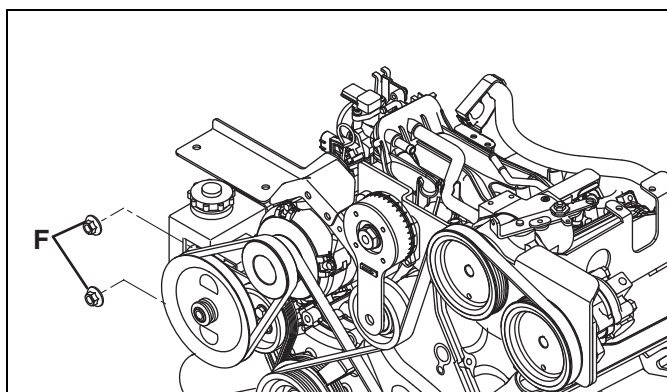


Schéma 4H

4.8 COURROIE DE POMPE HYDRAULIQUE MOTEUR ESSENCE

Inspecter et ajuster la courroie neuve après les premières 24-48 heures d'utilisation.

La courroie est ajustée dynamiquement grâce à un tendeur à ressort à 1,3 Nm. Aucun ajustement n'est requis.

Pour retirer la courroie, faire tourner le tendeur vers le radiateur pour relâcher la tension et enlever la courroie des poulies.

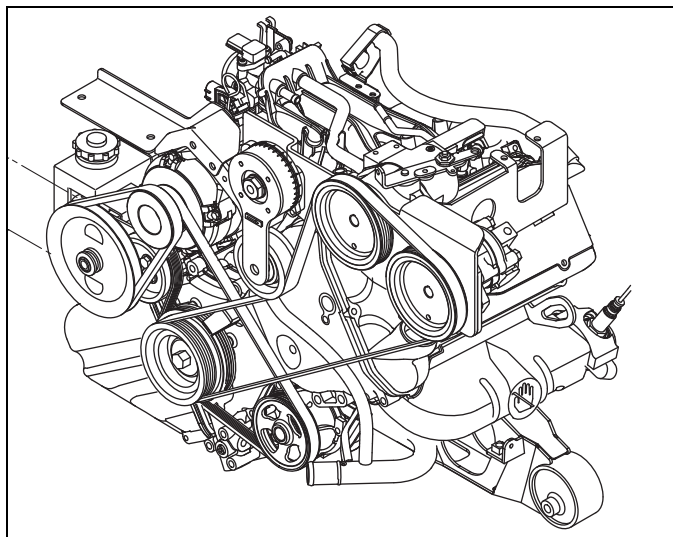


Schéma 4I

4.9 CABLE DU FREIN DE STATIONNEMENT

1. Retirer le capot moteur. Placer des cales devant et derrière aux moins deux roues aux coins opposés du véhicule.
2. Enclencher le frein de stationnement. Si la poignée forme un angle supérieur à 45° par rapport au panneau, un réglage est nécessaire.
3. Enlever le frein de stationnement.
4. Serrer l'écrou d'ajustement (**G**) de deux tours.
5. Enclencher le frein de stationnement. Répéter les étapes 3 et 4 jusqu'à ce que la poignée forme un angle d'environ 45° lorsque le frein de stationnement est enclenché.

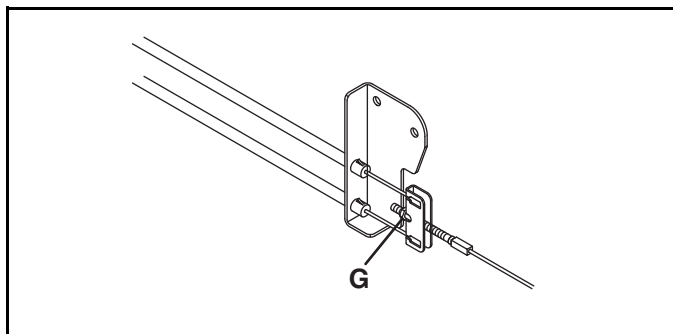


Schéma 4J

4 REGLAGES



4.10 SPECIFICATIONS DES COUPLES DE SERRAGE



AVIS






Les valeurs des couples de serrage, indiquées dans les tableaux, sont toutes des valeurs approximatives et ne sont données qu'à titre de référence. Toute utilisation de ces valeurs est à vos propres risques. Jacobsen décline toute responsabilité en cas de perte, poursuites éventuelles ou dégâts pouvant résulter à la suite de leur utilisation.

Il faut faire très attention aux valeurs des couples de serrage utilisés.

Jacobsen recommande l'utilisation, en standard, de boulons métallisés de qualité 5, à moins qu'indiqué différemment.

ATTACHES DE LA NORME AMERICAINE			
DIMENSION	UNITES	 QUALITE 5	 QUALITE 8
#6-32	in-lbs (Nm)	20 (2,3)	–
#8-32	in-lbs (Nm)	24 (2,7)	30 (3,4)
#10-24	in-lbs (Nm)	35 (4,0)	45 (5,1)
#10-32	in-lbs (Nm)	40 (4,5)	50 (5,7)
#12-24	in-lbs (Nm)	50 (5,7)	65 (7,3)
1/4-20	in-lbs (Nm)	95 (10,7)	125 (14,1)
1/4-28	in-lbs (Nm)	95 (10,7)	150 (17,0)
5/16-18	in-lbs (Nm)	200 (22,6)	270 (30,5)
5/16-24	in-lbs (Nm)	240 (27,1)	300 (33,9)
3/8-16	ft-lbs (Nm)	30 (40,7)	40 (54,2)
3/8-24	ft-lbs (Nm)	35 (47,5)	45 (61,0)

ATTACHES DE LA NORME AMERICAINE			
DIMENSION	UNITES	 QUALITE 5	 QUALITE 8
7/16-14	ft-lbs (Nm)	50 (67,8)	65 (88,1)
7/16-20	ft-lbs (Nm)	55 (74,6)	70 (94,9)
1/2-13	ft-lbs (Nm)	75 (101,7)	100 (135,6)
1/2-20	ft-lbs (Nm)	85 (115,3)	110 (149,2)
9/16-12	ft-lbs (Nm)	105 (142,4)	135 (183,1)
9/16-18	ft-lbs (Nm)	115 (155,9)	150 (203,4)
5/8-11	ft-lbs (Nm)	150 (203,4)	195 (264,4)
5/8-18	ft-lbs (Nm)	160 (217,0)	210 (284,8)
3/4-10	ft-lbs (Nm)	170 (230,5)	220 (298,3)
3/4-16	ft-lbs (Nm)	175 (237,3)	225 (305,1)
7/8-14	ft-lbs (Nm)	300 (406,8)	400 (542,4)

ATTACHES METRIQUES							
DIMENSION	UNITES	 4.8	 5.8	 8.8	 10.9	 12.9	Attaches non critiques pour l'aluminium
M4	Nm (in-lbs)	1,2 (11)	1,7 (15)	2,9 (26)	4,1 (36)	5,0 (44)	2,0 (18)
M5	Nm (in-lbs)	2,5 (22)	3,2 (28)	5,8 (51)	8,1 (72)	9,7 (86)	4,0 (35)
M6	Nm (in-lbs)	4,3 (38)	5,7 (50)	9,9 (88)	14,0 (124)	16,5 (146)	6,8 (60)
M8	Nm (in-lbs)	10,5 (93)	13,6 (120)	24,4 (216)	33,9 (300)	40,7 (360)	17,0 (150)
M10	Nm (ft-lbs)	21,7 (16)	27,1 (20)	47,5 (35)	66,4 (49)	81,4 (60)	33,9 (25)
M12	Nm (ft-lbs)	36,6 (27)	47,5 (35)	82,7 (61)	116,6 (86)	139,7 (103)	61,0 (45)
M14	Nm (ft-lbs)	58,3 (43)	76,4 (55)	131,5 (97)	184,4 (136)	219,7 (162)	94,9 (70)

5.1 GENERALITES



AVERTISSEMENT

Avant de nettoyer, régler ou réparer ce matériel, débrayer tous les entraînements, abaisser les accessoires au sol, serrer le frein de stationnement, arrêter le moteur et retirer la clé de contact pour éviter toutes blessures éventuelles.

Garer la machine sur une surface dure et nivelée. Ne jamais travailler sur une machine placée sur cric. Toujours utiliser des supports de cric.

1. Les réglages et services d'entretien doivent toujours être effectués par un technicien agréé. Quand il est impossible d'obtenir les réglages requis, s'adresser au concessionnaire agréé Jacobsen.
2. Examiner régulièrement le matériel, établir un programme de maintenance et conserver les enregistrements inscrits.
 - a. Veiller à conserver le matériel propre.

- b. Veiller au réglage et graissage corrects de toutes les pièces mobiles.
 - c. Remplacer les pièces usées ou endommagées avant de se servir de la machine.
 - d. Veiller à ce que les fluides soient toujours aux niveaux requis.
 - e. Maintenir les dispositifs de protection en place et veiller à ce que les composants soient bien fixés.
 - f. Veiller au gonflage correct des pneus.
3. Les cheveux longs, bijoux ou vêtements lâches risquent d'être coincés par les pièces mobiles.
4. Se reporter aux illustrations figurant dans le **Manuel de maintenance et Nomenclature des pièces de rechange** pour déposer et reposer les composants.
5. Recycler ou jeter les déchets dangereux (batteries, carburant, graisses, anti-gel, etc.) conformément aux réglementations nationales.
6. Garder les mains et pieds à l'écart des pièces en mouvement. Si possible, ne pas effectuer de réglages lorsque le moteur est en marche.

5.2 MOTEUR

IMPORTANT : Un manuel du moteur séparé, conçu par le fabricant du moteur, est fourni avec ce véhicule. Lire le manuel du moteur attentivement jusqu'à ce que le fonctionnement et la maintenance du moteur soient assimilés. Une attention particulière aux consignes du fabricant du moteur garantira une durée de vie maximale au moteur. Pour commander des manuels concernant le remplacement du moteur, contacter le fabricant du moteur.

Le rodage correct d'un moteur neuf peut faire une différence considérable sur la performance et la durée de vie du moteur.

AVIS

Le véhicule est conçu pour fonctionner plus efficacement avec le réglage de régulateur pré-établi. Ne pas modifier les réglages du régulateur du moteur ou faire fonctionner le moteur en survitesse.

Pendant la période de rodage, Jacobsen recommande ce qui suit :

1. Pendant les 50 premières heures de fonctionnement, un nouveau moteur doit atteindre une température de service d'au moins 60° C avant de le faire fonctionner à plein régime.
2. Vérifier le niveau d'huile du moteur deux fois par jour au cours des 50 premières heures d'utilisation. Une consommation supérieure à la normale n'est pas inhabituelle pendant la période de rodage initiale.
3. Changer l'huile du moteur et le filtre à huile après les 35 premières heures d'utilisation.

4. Vérifier et ajuster la pompe hydraulique et les courroies d'alternateur. Voir les Chapitres 4.5, 4.6, 4.7 et 4.8.
5. Se reporter au Chapitre 7.3 et au Manuel du Moteur pour ce qui concerne les intervalles spécifiques de maintenance.
6. Si la pompe d'injection, les injecteurs ou le circuit de carburant nécessitent une maintenance, contacter un revendeur Jacobsen agréé.

Garder le moteur propre. Si de la saleté s'est accumulée sur le moteur, il doit être nettoyé avec un solvant ininflammable ou un détergent puissant.

Lorsque le nettoyage devient nécessaire, il peut être effectué en même temps que l'entretien du véhicule.

Afin de garantir un fonctionnement fiable du moteur, un contrôle régulier et un calendrier de maintenance doivent être respectés. Une bonne maintenance prolongera la durée de vie du moteur et permettra d'éviter une révision prématurée.

5 MAINTENANCE

5.3 HUILE MOTEUR

Vérifier l'huile moteur à chaque début de journée, avant de démarrer le moteur.

Pour vérifier l'huile moteur, retirer la jauge et l'essuyer avec un chiffon propre. Replacer la jauge jusqu'à ce qu'elle soit en contact avec le tuyau d'huile, retirer la jauge et lire le niveau d'huile.

Le niveau d'huile doit toujours être compris entre les repères MINI et MAXI de la jauge. Si le niveau se trouve sous le repère Ajouter, retirer le bouchon de remplissage et ajouter de l'huile jusqu'à ce que le niveau soit compris entre les repères. *Ne pas remplir excessivement.*

Remarque : Si le moteur a fonctionné récemment, attendre un peu (avec le moteur éteint) pour permettre à l'huile de reprendre sa position normale et obtenir une bonne lecture du niveau d'huile.

Moteur diesel : Utiliser uniquement des huiles dont la classification API est CD ou CE.

Moteur essence : Utiliser uniquement des huiles dont la classification API est SJ.

L'utilisation d'une huile autre que celle de la catégorie mentionnée ou le fait de changer une huile à des intervalles plus longs que ceux recommandés pourraient réduire la durée de vie du moteur. Les dommages au moteur occasionnés par une maintenance incorrecte ou l'utilisation d'une huile à la qualité et/ou la viscosité inappropriée ne sont pas couverts par la garantie du moteur.

Moteur diesel : Effectuer un changement d'huile initiale après les 35 premières heures d'utilisation et toutes les 75 heures ou deux mois, par la suite. Voir le manuel du moteur.

Moteur essence : Effectuer un changement d'huile initiale après les 50 premières heures d'utilisation et toutes les 100 heures ou trois mois, par la suite. Voir le manuel du moteur.

Des pertes d'huile considérables peuvent endommager le moteur. Ces pertes d'huile considérables peuvent être dues à un bouchon de vidange desserré ou installé de façon incorrecte, des joints fendus ou même un filtre à air desserré.

Les bouchons de vidange sont situés sous le moteur dans le carter d'huile. Retirer les deux bouchons lors du changement d'huile.

Vérifier que les bouchons de vidange et l'huile ne contiennent pas de copeaux métalliques qui indiqueraient une avarie du moteur. Remplacer immédiatement les bouchons de vidange dont les joints sont endommagés.

Une fois l'huile complètement vidangée, nettoyer l'excès d'huile du carter d'huile et les bouchons de vidange. Positionner les bouchons de vidange et les serrer convenablement. Consulter le manuel du moteur pour connaître le bon couple.

Toujours remplacer le filtre à huile du moteur lors du changement d'huile. Appliquer une légère couche d'huile

moteur sur la surface du joint en caoutchouc du nouveau filtre avant de l'installer.

Moteur diesel : Remplir le moteur Kubota avec environ 5,1 litres d'huile moteur propre. Vérifier le niveau d'huile et ajouter de l'huile si nécessaire.

Moteur essence : Remplir le moteur Suzuki avec environ 3 litres d'huile moteur propre. Vérifier le niveau d'huile et ajouter de l'huile si nécessaire.

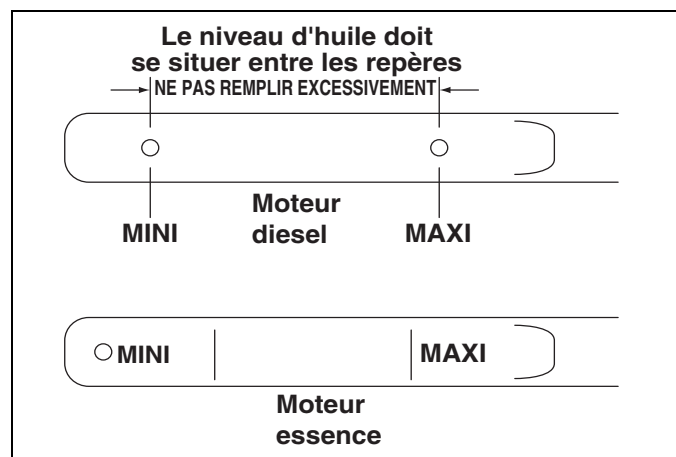


Schéma 5A

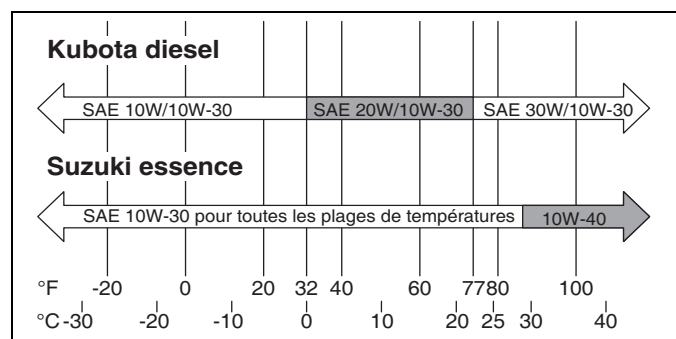


Schéma 5B

Moteur diesel :	
Au-dessus de 25°C	SAE 30W ou SAE10W30/10W40
0 à 25°C	SAE 20W ou SAE10W30/10W40
Au-dessous de 0°C	SAE 10W ou SAE10W30/10W40
Moteur essence :	
Toutes plages de température	SAE 10W30
Au-dessus de 29° C	SAE 10W40

Remplacement des filtres à huile

Kubota diesel	4113986
Suzuki essence	2701908

5.4 RESERVOIR DE DIRECTION ASSISTEE



AVERTISSEMENT

Avant de procéder à l'entretien ou d'effectuer tout travail de maintenance dans la zone du moteur, s'assurer que le moteur a eu le temps de refroidir. De graves brûlures peuvent se produire si le moteur ou les surfaces environnantes sont chauds.

Le réservoir de la direction assistée est situé à la droite du moteur, sous l'alternateur.

Le niveau dans le réservoir doit être vérifié après les 35 à 70 premières heures d'utilisation. Ensuite, le niveau devra être contrôlé toutes les 100 heures.

Lorsque l'on vérifie le niveau avant que le moteur n'ait tourné, celui-ci doit se situer au niveau du repère FROID de la jauge. Après que le moteur ait tourné et quand le liquide est chaud, le niveau doit se situer entre les repères FROID et CHAUD. Utiliser du liquide de direction assistée General Motors si nécessaire pour mettre le liquide à niveau.

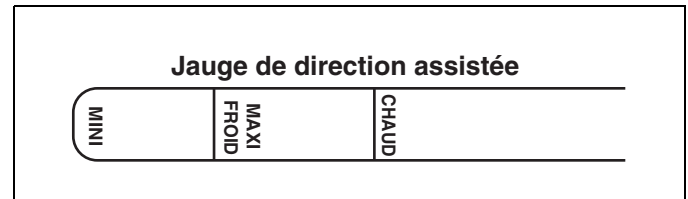


Schéma 5C

5.5 SILENCIEUX ET ECHAPPEMENT



AVERTISSEMENT

Les fumées d'échappement contiennent du monoxyde de carbone qui est toxique et peut être fatal s'il est inhalé.

Ne **JAMAIS** faire fonctionner le moteur dans un endroit mal aéré.

Afin de se prémunir contre tout empoisonnement au monoxyde de carbone, inspecter régulièrement l'ensemble du Circuit d'échappement et toujours remplacer un silencieux défectueux.

En cas de changement dans la couleur ou le son de l'échappement, arrêter le moteur immédiatement. Identifier le problème et faire réparer le circuit.

Serrer tous les équipements du collecteur d'échappement de façon uniforme. Resserrer ou remplacer les colliers de serrage de l'échappement.

5.6 PROCEDURE DE SURCHAUFFE DU MOTEUR

Au cours de l'utilisation du véhicule, si la jauge de température de l'eau indique 110° C ou plus et/ou si l'avertisseur sonore de surchauffe retentit, suivre la procédure suivante.

1. **Arrêter** le véhicule. **NE PAS couper le moteur.** Mettre le véhicule au point mort et enclencher le frein de stationnement.
2. Arrêter immédiatement tous les accessoires qui sont en fonctionnement.
3. Ralentir la vitesse du moteur en se mettant en ralenti accéléré.
4. Retirer toute saleté, paille, débris, etc. de la grille d'entrée d'air du radiateur située sur le côté droit du véhicule.

L'aiguille de la jauge de température devrait commencer à descendre environ 30 secondes après le nettoyage de la grille. Si la température ne diminue pas, **ARRETER** le moteur et vérifier ce qui suit.

1. Vérifier que le ventilateur de refroidissement fonctionne. Le ventilateur doit tourner lorsque le liquide de refroidissement atteint plus de 82° C sur les unités diesel, ou 97,7° C sur les unités essence, même si le commutateur d'allumage est en position OFF (Arrêt).
2. Vérifier le niveau d'huile du moteur.
3. Vérifier s'il n'y a pas de fuite dans le système de refroidissement. **Ne pas** ouvrir le radiateur lorsqu'il est chaud. Vérifier les niveaux du liquide de refroidissement une fois que le système est complètement refroidi.

Tout manquement à tenir compte de l'avertisseur de surchauffe et à entretenir correctement le circuit de refroidissement entraînera un dommage permanent du moteur.



ATTENTION

Etre prudent lors de l'ouverture du capot d'accès au moteur ou du nettoyage de la grille d'entrée d'air. Les surfaces métalliques autour du radiateur et du moteur peuvent être chaudes au toucher. Utiliser une brosse ou des gants pour nettoyer la grille.

5 MAINTENANCE

5.7 CIRCUIT DE REFROIDISSEMENT

Ce véhicule est équipé d'un radiateur, d'un ventilateur de contrôle de température, d'une jauge de température et d'un avertisseur sonore de surchauffe.



AVERTISSEMENT

Afin d'éviter toute blessure corporelle grave due à un liquide de refroidissement chaud ou à une éruption de vapeur, ne jamais essayer de retirer le bouchon du radiateur lorsque le moteur est en marche. Arrêter le moteur et attendre plusieurs heures qu'il ait refroidi. Même après ce délai, utiliser la plus grande précaution lors du retrait du bouchon.



ATTENTION

Ne pas verser d'eau froide dans un radiateur chaud. Ne pas mettre en marche le moteur sans un liquide de refroidissement approprié. Mettre en place le bouchon et le serrer soigneusement.



AVERTISSEMENT

Le ventilateur de refroidissement est contrôlé par un thermocontact et peut démarrer à tout moment lorsque la température du liquide de refroidissement est supérieure à 65° C, même si le commutateur d'allumage est en position OFF (Arrêt). Ne pas essayer de réviser le système de refroidissement sans avoir déconnecté, au préalable, le câble du pôle négatif de la batterie ou retiré le fusible du ventilateur.

Ne JAMAIS ajouter d'antigel directement dans le radiateur. Mélanger des quantités équivalentes d'eau propre et d'éthylène glycol, pour obtenir de l'antigel, dans un récipient séparé avant de l'ajouter au système de refroidissement. Ne pas utiliser un liquide de plus de 50 % d'antigel.

Toujours recycler ou éliminer l'antigel usagé de façon responsable. L'antigel usagé peut être nocif pour l'environnement.

1. Vérifier le niveau du liquide de refroidissement tous les jours. Le radiateur doit être plein et le niveau du bocal du vase d'expansion doit être au-dessus du repère **froid**.
 - a. Incliner le capot moteur vers l'avant pour pouvoir accéder au radiateur.
 - b. Lorsque le moteur est arrêté et froid, retirer le bouchon du radiateur et vérifier le niveau du liquide de refroidissement. Le niveau du liquide de refroidissement doit être à 6 mm ou moins de l'embase de remplissage. Remplir avec un mélange d'antigel et d'eau (50/50) si nécessaire.
 - c. Contrôler visuellement le réservoir. Le niveau du liquide de refroidissement doit être au niveau ou au-dessus du repère **FULL** (plein) mais inférieur à 102 mm. Ajouter un mélange d'antigel et d'eau (50/50) si nécessaire.
2. Vidanger et remplir à nouveau le système de refroidissement toutes les 400 heures ou 9 mois, au premier des termes échu. Laisser le système refroidir avant la vidange.
 - a. Retirer le fusible du ventilateur de refroidissement.
 - b. Retirer le bouchon du radiateur.
 - c. Ouvrir la purge du bloc moteur et la purge du radiateur. Retirer la durit de radiateur inférieure. Fermer les deux purges et mettre en place la durit de radiateur inférieure une fois que le système est complètement vidangé.
 - d. Vider et nettoyer le bocal du vase d'expansion.
 - e. Remplir le radiateur jusqu'au bas du goulot de remplissage avec un mélange d'antigel/eau (50/50).
 - f. Remplir le bocal du vase d'expansion jusqu'au repère full (plein) avec un mélange d'antigel/eau (50/50).
3. Garder les conduits d'air du radiateur propres. Utiliser de l'air comprimé (207 kPa maximum) pour nettoyer les ailettes. De l'eau restée entre les ailettes gardera la saleté et réduira la quantité d'air nécessaire pour refroidir correctement le moteur.
4. Pour fournir un débit d'air correct, ne pas obstruer la grille d'entrée d'air située sur le côté droit du véhicule. Garder la grille propre.
5. Vérifier et serrer la courroie du ventilateur. Remplacer les colliers de serrage et les durits tous les deux ans.
6. S'il faut ajouter du liquide de refroidissement plus d'une fois par mois ou s'il faut ajouter plus d'un quart du réservoir en une fois, contacter un revendeur Jacobsen agréé afin qu'il vérifie le circuit de refroidissement.

5.8 FILTRE A AIR

Ne pas retirer l'élément en vue d'une inspection ou d'un nettoyage. Le retrait non nécessaire du filtre augmente le risque d'injection de poussière et autres saletés dans le moteur.

Lorsqu'une révision est nécessaire, nettoyer tout d'abord l'extérieur du boîtier du filtre ; puis retirer l'ancien élément aussi soigneusement que possible et le jeter.

1. Nettoyer attentivement l'intérieur du boîtier du filtre en évitant d'introduire toute poussière dans l'entrée d'air.
2. Inspecter le nouvel élément. Ne pas utiliser un élément endommagé et ne jamais utiliser un élément inadapté.
3. Monter le nouvel élément et s'assurer qu'il est correctement positionné.
4. Remonter le bouchon en s'assurant qu'il se positionne correctement autour du boîtier du filtre. Le système d'évacuation de poussière **(A)** doit être orienté vers le bas.
5. Vérifier toutes les durits et les conduits d'air. Serrer les colliers des durits.

Remplacement (Diesel uniquement)

1. Nettoyez l'extérieur du boîtier du filtre, en particulier autour des raccords de durits et du couvercle.
2. Notez l'emplacement des durits. Desserrez les colliers des durits et retirez les deux durits du filtre à air. Veillez à ce que de la poussière ou d'autres débris n'entrent pas dans la durit d'admission d'air.
3. Retirez les éléments de montage du filtre à air **(B)**. Le filtre à air est fixé à l'aide d'une vis et d'un écrou.
4. Retirez l'ensemble du filtre à air du véhicule.
5. Défaitez les outils de retenue et retirez les anciens éléments aussi soigneusement que possible puis jetez-les.

6. Nettoyez avec soin l'intérieur du boîtier du filtre en évitant d'introduire de la poussière dans l'entrée d'air.
7. Inspectez le nouvel élément. N'utilisez pas un élément endommagé et n'utilisez jamais un élément inadapté.
8. Montez le nouvel élément et vérifiez qu'il est correctement positionné.
9. Montez le couvercle en vérifiant qu'il se positionne correctement autour du boîtier du filtre. Le système d'évacuation de poussière **(A)** doit être orienté vers le bas.
10. Installez l'ensemble du filtre à air dans le véhicule. Fixez-le à l'aide des éléments **(B)**.
11. Raccordez les deux durits et serrez les colliers.

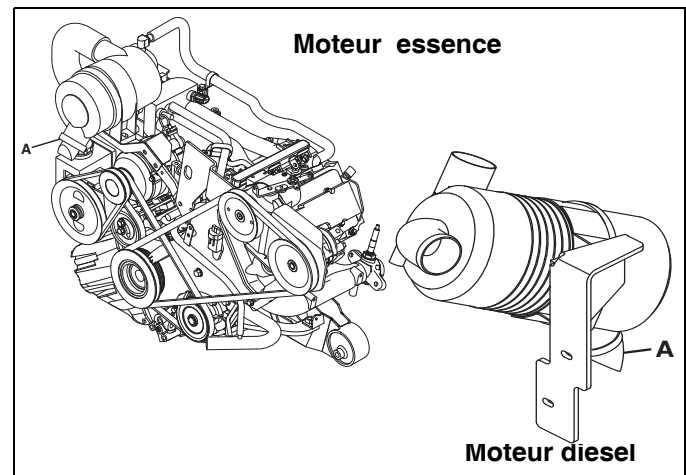


Schéma 5D

5.9 DEMARRAGE PAR CONNEXIONS VOLANTES

Avant de "démarrer par connexions volantes" la machine, vérifier l'état de charge de la batterie.

Enclencher le frein de stationnement des deux véhicules, se mettre au point mort et couper toutes les charges électriques.



AVERTISSEMENT

Les batteries produisent de l'hydrogène qui est explosif. Éviter les étincelles aux alentours des batteries pour éviter les explosions. Brancher toujours le cavalier négatif au châssis de la machine dont la batterie est déchargée, en s'éloignant de cette dernière.

Raccordement des cavaliers :

1. Arrêter le moteur de la machine dont la batterie est bien chargée.
2. Raccorder le cavalier ROUGE à la borne positive (+) de la batterie chargée et aussi à la borne positive (+) de la batterie "déchargée".
3. Raccorder le cavalier NOIR de la borne négative (-) de la batterie chargée au châssis de la machine dont la batterie est déchargée.

Quand les câbles sont tous branchés, démarrer le moteur de la machine dont la batterie est chargée et démarrer ensuite celui de la machine dont la batterie est déchargée.

5 MAINTENANCE

5.10 BATTERIE

Veiller absolument à ce que le commutateur d'allumage soit sur OFF (Arrêt) et que la clé ait été retirée avant de procéder à l'entretien de la batterie.



ATTENTION

Toujours utiliser des outils isolés, porter des lunettes et des vêtements de protection lors de la révision de batteries. Il faut lire et respecter toutes les consignes du fabricant de la batterie.

Serrer les câbles fermement aux bornes de la batterie et appliquer une légère couche de graisse silicone diélectrique sur les bornes et aux extrémités des câbles pour éviter la corrosion. Mettre les bouchons d'aération et les protections de bornes en place.

Conserver le dessus de la batterie propre et dépourvu de corrosion en le nettoyant avec une solution de bicarbonate de sodium et d'eau. Rincer à l'eau claire.

Vérifier la polarité de la batterie avant de connecter ou déconnecter les câbles de batterie.

1. Lors de l'installation de la batterie, toujours connecter le câble de batterie positif (+) ROUGE en premier et le câble négatif (-) NOIR à la masse en dernier.
2. Lors du retrait de la batterie, toujours retirer le câble négatif (-) NOIR de masse en premier et le câble positif (+) ROUGE en dernier.
3. Vérifier que la batterie est correctement installée et fixée dans le bac à batterie.



AVERTISSEMENT

La Californie tient à vous informer que les bornes de la batterie, ses terminaux et composants associés renferment du plomb et dérivés de plomb sont produits chimiques susceptibles de provoquer des cancers, déformités natales et séquelles. **Il faut toujours se laver les mains après toute intervention sur une batterie.**

5.11 CHARGE DE LA BATTERIE



AVERTISSEMENT

Charger la batterie dans un lieu bien ventilé. Les batteries produisent des gaz explosifs et pour éviter les explosions, ne pas s'approcher d'elles avec des flammes.

Pour éviter les blessures, s'éloigner de la batterie quand le chargeur est branché. Une batterie endommagée pourrait exploser.

1. Se reporter au Chapitre 5.10 de même qu'à la notice accompagnant la batterie et le chargeur pour tous renseignements complémentaires.
2. Quand possible, retirer la batterie de la machine avant de procéder à sa charge. Si la batterie n'est pas hermétique, veiller à ce que l'électrolyte recouvre les plaquettes de toutes les cellules.

Les câbles de batterie doivent être déconnectés avant d'utiliser un « chargeur rapide », sinon l'alternateur pourrait être endommagé.

3. Veiller à ce que le chargeur soit sur "Arrêt" avant de le brancher aux bornes de la batterie comme spécifié dans sa notice.
4. Il faut toujours "Arrêter" le chargeur avant de le débrancher des bornes de la batterie.

5.12 FLEXIBLES HYDRAULIQUES



AVERTISSEMENT

Ne jamais se servir des mains pour vérifier les fuites d'huile afin d'éviter toutes blessures provenant d'huile chaude sous haute pression. Toujours utiliser du papier ou carton.

Le fluide hydraulique sous pression risque de pénétrer la peau. En cas de pénétration cutanée, appeler le SAMU ou un spécialiste pour éviter tout risque de gangrène.

1. Abaisser toujours les accessoires au sol, débrayer tous les entraînements, serrer le frein de stationnement, arrêter le moteur et retirer la clé de contact avant de vérifier ou débrancher les conduites ou flexibles hydrauliques.
2. Examiner quotidiennement les flexibles et tubes et décelez ceux qui sont mouillés ou recouverts de tâches d'huile. Remplacer les flexibles ou tubes endommagés ou usés avant de se servir de la machine.
3. Les flexibles ou tubes de rechange doivent être acheminés aux mêmes endroits que ceux qu'ils remplacent, ne pas changer la position de leurs attaches, brides et fixations.

4. Examiner à fond, toutes les 250 heures, les tubes, flexibles et leurs raccords.

IMPORTANT : Risque d'endommagement du circuit hydraulique quand l'huile est contaminée. Avant de débrancher les composants hydrauliques, nettoyer la surface environnant leurs raccords et les extrémités des flexibles pour éliminer les impuretés du circuit.

- a. Avant de débrancher les composants hydrauliques, faire un point de repère pour indiquer la position de chaque flexible puis nettoyer la surface environnant leurs raccords.
- b. Avant de débrancher les composants, être prêt à poser les bouchons ou chapeaux sur les extrémités des flexibles et les orifices ouverts. Ceci évite l'infiltration d'impuretés dans le circuit hydraulique et empêche l'huile de s'échapper.
- c. Veiller à la propreté des joints toriques et à la position correcte des flexibles avant de les serrer.
- d. Veiller à ne pas tordre les flexibles car ils risquent de desserrer les accouplements et provoquer des fuites d'huile.
- e. Les flexibles tordus limitent le débit d'huile et empêchent le circuit de fonctionner normalement, l'huile surchauffe et les flexibles deviennent éventuellement défectueux.

5.13 RESERVOIR HYDRAULIQUE ET FILTRE

Voir le Chapitre 7.3 pour obtenir les intervalles de maintenance spécifiques.

Normalement, le circuit hydraulique ne nécessitera pas de liquide supplémentaire. Parfois, une fuite peut se produire ce qui implique que le circuit soit réparé et rempli à nouveau. Si du liquide hydraulique s'échappe lorsque le circuit est en marche ou si une fuite est suspectée, **éteindre toutes les fonctions hydrauliques et arrêter le moteur.**

Vérifier régulièrement le niveau du liquide hydraulique (le niveau devrait être contrôlé toutes les **100 heures** d'utilisation). Une perte de liquide peut signaler une légère fuite avant qu'elle n'empire.

Pour vérifier le niveau de liquide :

1. Placer le véhicule sur une surface plane. Abaisser complètement tout équipement accessoire, y compris la boîte à déchets. Arrêter le moteur du véhicule.
2. Retirer la jauge/tube d'aérateur du haut du réservoir. Essuyer la jauge puis la placer dans le réservoir avec la bride filetée appuyée sur le réservoir (ne pas la visser), le liquide devrait apparaître sur la partie moletée de la jauge. Ajouter de l'huile GreensCare 68, si nécessaire.

Le circuit hydraulique est protégé par un filtre de 10 microns. Le filtre est situé sous la console latérale, près du levier du frein de stationnement.

Pour remplacer le filtre à huile hydraulique :

1. Retirer l'ancien filtre.
2. Remplir le nouveau filtre d'huile GreensCare 68 puis l'installer. Serrer à la main uniquement.
3. Faire fonctionner le moteur au ralenti avec le système hydraulique au point mort pendant cinq minutes.
4. Vérifier le niveau d'huile hydraulique et remplir avec GreensCare 68 jusqu'au repère moleté sur la jauge.

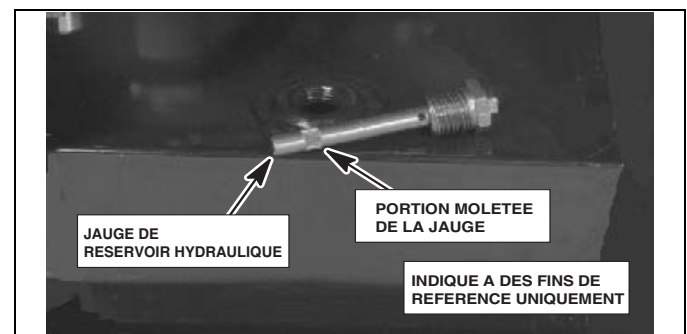


Schéma 5E

5 MAINTENANCE

5.14 CARBURANT

Manipuler le carburant avec précaution, il est hautement inflammable. Utiliser un récipient adapté, le bec doit rentrer dans la goulotte de remplissage du carburant. Eviter d'utiliser des boîtes métalliques et des entonnoirs pour transférer le carburant.



AVERTISSEMENT

Retirer le bouchon d'essence lentement. Le carburant peut être sous pression. Une pulvérisation pourrait entraîner de graves blessures.

Ne jamais retirer le bouchon d'essence du réservoir, ou ajouter du carburant, lorsque le moteur est en marche ou qu'il est chaud.

Ne pas fumer en manipulant le carburant. Ne jamais remplir ou vidanger le réservoir de carburant en intérieur.

Ne pas renverser de carburant et nettoyer immédiatement le carburant renversé.

Ne jamais manipuler ou stocker des cuves de carburant à proximité d'une flamme nue ou de tout appareil qui pourrait créer des étincelles et allumer le carburant ou les vapeurs de carburant.

Veiller à remettre et resserrer le bouchon d'essence convenablement.

1. Remplir le réservoir de carburant jusqu'à 25 mm sous la goulotte de remplissage.
2. Stocker le carburant conformément aux ordonnances locales, d'état ou fédérales et aux recommandations de votre fournisseur de carburant.
3. Ne jamais remplir excessivement ou laisser le réservoir devenir vide. Vérifier le niveau de carburant dans le réservoir en plaçant le commutateur d'allumage en position ON (Marche) et en lisant le niveau indiqué par la jauge de carburant.

4. Vérifier les tuyaux de carburant et les colliers de serrage toutes les 50 heures. Remplacer les tuyaux de carburant et les colliers au premier signe d'usure.
5. La capacité du réservoir de carburant est de 24,5 litres. Remplir le réservoir en respectant les recommandations suivantes :

Moteur diesel :

- a. Utiliser du carburant diesel #2 propre et frais, à faible ou très faible teneur en soufre. Indice de cétane minimum 45. Se reporter au manuel du moteur pour plus d'informations.
- b. Utiliser un carburant Diesel #1 propre, frais lorsque la température de fonctionnement est inférieure à - 7° C. Si le carburant #1D n'est pas disponible, un mélange adapté pour l'hiver de #1D et #2D peut être disponible. Ce carburant mélangé est généralement appelé #2D et peut être utilisé dans **les climats les plus froids**. Ne pas utiliser de #2D si vous n'êtes pas sûr qu'il est adapté pour l'hiver. Les basses températures pourraient l'épaissir ce qui empêcherait votre véhicule de fonctionner.
- c. **NE PAS** utiliser de carburant aviation JP4. Se reporter au manuel du moteur pour plus d'informations.

Moteur essence : Utiliser de l'essence sans plomb propre, indice d'octane de 87 ou plus.

AVIS

L'utilisation de tout carburant contenant plus de 10 % d'éthanol peut endommager le système de contrôle des émissions du moteur et, par conséquent, invalider la garantie relative aux émissions, du fait d'une action incorrecte de l'opérateur.

5.15 CIRCUIT D'ALIMENTATION EN CARBURANT

Voir le Chapitre 7.3 pour obtenir les intervalles de maintenance spécifiques.

Avant de remplacer tout filtre, nettoyer sérieusement le boîtier du filtre et la zone autour du filtre. La saleté ne doit pas entrer dans le circuit de carburant.

Placez le commutateur à clé en position ON (Marche) pour démarrer la pompe à carburant et purger le circuit de carburant si le filtre à carburant et les conduites ont été retirés, ou si le réservoir de carburant a été entièrement vidé. Voir le manuel du moteur.

5.16 PRESSION DES PNEUS

Garder les pneus convenablement gonflés afin de prolonger leur durée de vie. Vérifier la pression de gonflage lorsque les pneus sont froids. Inspecter l'usure de la bande de roulement.

Une pression faible permettra d'éviter de laisser des marques de pneus sur un gazon frais. Des pressions plus élevées peuvent être nécessaires pour des charges plus lourdes. La pression des pneus arrière doit être de 193 kPa lors d'un fonctionnement à pleine charge. Ne jamais dépasser la pression maximale indiquée sur le pneu.

Vérifier la pression avec une jauge précise à basse pression. Etant donné le faible volume d'air nécessaire, le surgonflage peut être atteint en l'espace de deux ou trois secondes.

Garder les pneus gonflés à :

Avant - 138 kPa

Arrière - Variable, déterminé par la charge. (Voir tableau)

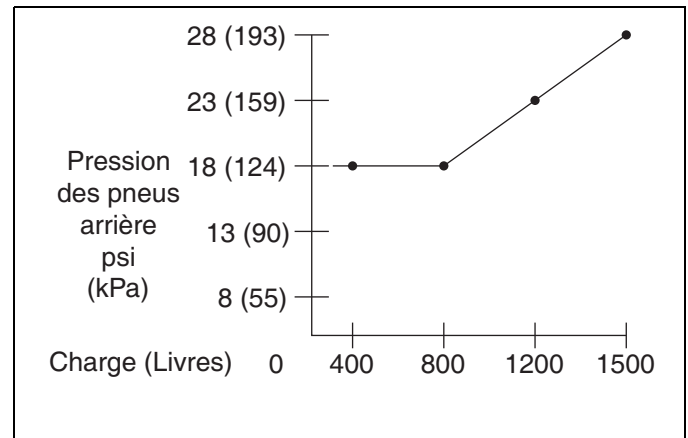


Schéma 5F

5.17 RETRAIT DES PNEUS ET INSTALLATION

Retrait :

1. Placer le véhicule sur une surface plane. Enclencher le frein de stationnement, couper le moteur et enclencher la 1ère vitesse.
2. Voir le **Chapitre 5.18** pour obtenir les procédures de levage correctes. Toujours utiliser les crics, ne jamais faire reposer le véhicule sur un seul cric.

Lever le véhicule suffisamment pour retirer le pneu. Ne jamais placer les pieds, les mains ou toute autre partie du corps sous le véhicule lorsque qu'il est soulevé.

3. Retirer les boulons maintenant la roue et retirer l'ensemble roue et pneu du moyeu.
4. Effectuer la révision nécessaire sur le pneu.

2. Positionner la roue sur le moyeu et vérifier qu'il y a bien un contact intégral entre la surface de montage de la roue et le moyeu ou le tambour du frein. Veiller à ce que la tige de soupape soit située vers l'extérieur. Serrer aux doigts tout l'équipement puis serrer au couple en alternant ; toujours serrer les boulons en position supérieure.
3. Vérifier et resserrer au couple jusqu'à ce que le couple soit maintenu (95 – 140 Nm).



ATTENTION

A moins de ne posséder de bons outils, l'expérience et la formation requises, NE PAS essayer de monter un pneu sur une jante. Un montage incorrect peut entraîner une explosion qui pourrait se traduire par de graves blessures.

Installation :

1. Retirer la saleté, la graisse et l'huile du filetage de goujon. Ne pas lubrifier les filetages.

5 MAINTENANCE

5.18 SOULEVER LE VEHICULE



AVERTISSEMENT

S'assurer que le véhicule est placé sur une surface plane et solide. Ne jamais travailler sur un véhicule qui ne repose que sur le cric. Toujours utiliser des crics.

Chaque fois que cela est possible, vider le réservoir de pulvérisation avant de soulever le véhicule. Le liquide en mouvement dans le réservoir pourrait entraîner un déséquilibre de la charge et incliner le véhicule.

Ne jamais soulever le véhicule lorsque le moteur est en marche ou qu'une personne est assise sur le siège du conducteur.

Toujours bloquer le pneu diagonalement opposé au pneu à soulever.

Ne jamais mettre les mains, les pieds ou toute autre partie du corps sous le véhicule lorsqu'il est soulevé avec un palan ou qu'il n'est pas correctement supporté par les crics.

Un cric à parallélogramme ou un cric roulant d'une capacité de 1,5 T (minimum), qui peut être abaissé à une hauteur de 86 mm, est nécessaire. Se reporter au **Schéma 5G** pour obtenir le point de levage.

Mettre la 1ère vitesse et enclencher le frein de stationnement. Caler ou bloquer le pneu diagonalement opposé au côté à soulever. Lever le véhicule juste ce qu'il faut pour effectuer la maintenance requise.

Lever le véhicule à la hauteur appropriée et placer des chandelles ou supports équivalents sous le châssis près du cric. Abaisser le cric et laisser le véhicule reposer sur les crics.

En cas d'utilisation d'un palan pour lever le véhicule, utiliser la même procédure pour supporter le châssis et bloquer les roues que celle utilisée avec un cric.

Pour éviter d'endommager le véhicule ou tout accessoire annexe, ne jamais utiliser un palan pour ne soulever qu'un seul coin du véhicule. Il faut toujours lever les DEUX coins, avant et arrière, uniformément.

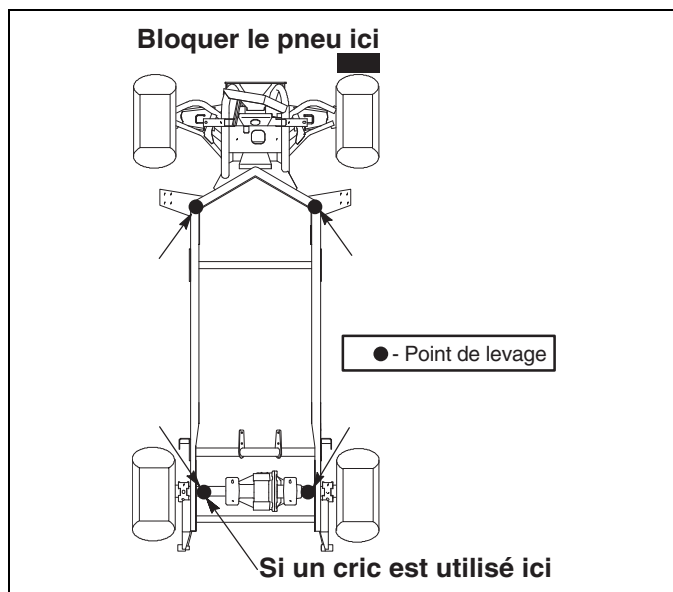


Schéma 5G

5.19 REMORQUAGE DU VEHICULE



AVERTISSEMENT


Pour éviter toute blessure ou dommage au véhicule, il est recommandé de respecter les consignes suivantes.

- **Ne jamais** accélérer ou freiner brusquement lors du remorquage d'un véhicule.
- **Ne jamais** changer soudainement la direction du véhicule ou faire des virages serrés sur une pente lors du remorquage d'un véhicule.
- **Ne jamais** remorquer le véhicule à une vitesse supérieure à 8 km/h. Le remorquage à une vitesse excessive pourrait entraîner une perte de contrôle du véhicule.
- Adapter votre vitesse en fonction de l'état du terrain et des conditions climatiques lors du remorquage (pluie, neige, verglas, côtes, etc.).
- Faire attention pour charger ou décharger la machine sur une remorque ou chariot.

Si, pour une raison quelconque, le véhicule doit être remorqué, suivre la procédure suivante.

1. En cas de remorquage avec une corde ou une chaîne, une personne est nécessaire pour diriger le véhicule et contrôler les freins.
2. Fixer un câble de remorquage uniquement au châssis vertical avant des deux côtés du véhicule.
3. Mettre le véhicule au point mort et desserrer le frein de stationnement.

4. Avancer lentement le véhicule remorqueur jusqu'à ce que le câble de remorquage soit tendu.
5. Pendant le remorquage, essayer de garder le câble tendu en toutes circonstances. Faire particulièrement attention en descente et dans les virages.

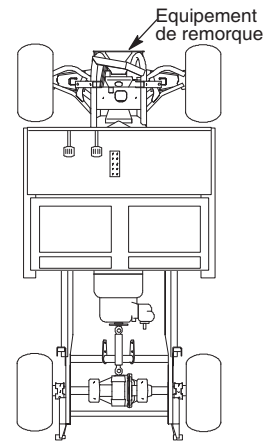

Un accessoire de pare-chocs avant (Pièce n° 894778) est disponible en vue d'une utilisation avec le Truckster. Si un pare-chocs avant est monté sur le véhicule, veiller à suivre les instructions fournies avec le pare-chocs pour le relier correctement à la chaîne ou remorque.

Schéma 5H

5.20 NIVEAU D'HUILE DU REGULATEUR

Moteur essence Suzuki uniquement

Vérifier le niveau d'huile du régulateur toutes les 100 heures d'utilisation. Pour vérifier le niveau, retirer le bouchon situé à l'arrière du régulateur. Le niveau d'huile devrait atteindre le niveau de l'ouverture du bouchon.

Capacité d'huile du régulateur....44 ml

Type d'huileHuile moteur SAE 20W

Si le niveau d'huile est bas, ajouter le type d'huile recommandé.

Retirer le bouchon situé à l'arrière du régulateur, retirer le bouchon situé sur le dessus du régulateur et ajouter de l'huile moteur SAE 20W jusqu'à ce que l'huile commence à s'écouler par l'ouverture arrière. Replacer les deux bouchons.

Pour remplacer les bouchons, utiliser de la bande teflon ou un produit d'étanchéité Permatex® 20 (ou produit équivalent) sur les filetages du bouchon.

Serrer au couple les bouchons à $10,7 \pm 1$ Nm.

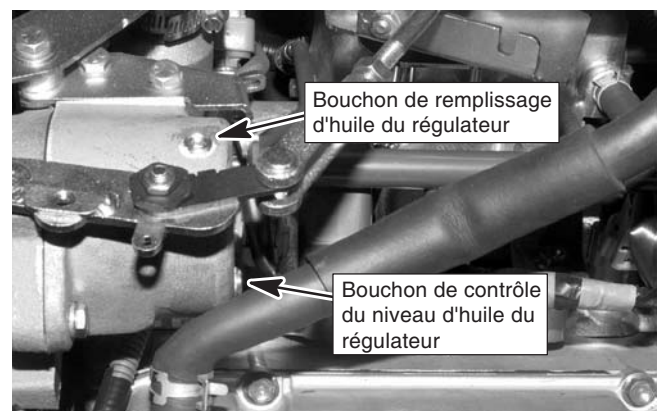


Schéma 5I

5 MAINTENANCE

5.21 FREINS HYDRAULIQUES



AVERTISSEMENT

Une maintenance incorrecte du circuit de freinage peut entraîner une perte de contrôle du véhicule par l'utilisateur. La perte de contrôle du véhicule par l'utilisateur peut occasionner des blessures chez l'utilisateur ou des tiers et des dommages sur le véhicule.

Ce véhicule est équipé de quatre roues à freins hydrauliques contrôlés par la pédale de frein et d'un levier de frein de stationnement actionné manuellement.

Garder le circuit de freinage propre et bien entretenu. Ne pas faire fonctionner la machine si les freins n'arrêtent pas le véhicule correctement.

Le réservoir du cylindre principal de liquide de frein est situé sous le capot avant.

Le niveau de liquide dans le réservoir du cylindre principal doit rester entre les repères MIN (minimum) et MAX (maximum). Ajouter du liquide de frein de type DOT 3 si nécessaire.

Si le voyant indicateur du liquide de frein s'allume et reste allumé, vérifier le niveau du liquide dans le réservoir.

Purger les freins hydrauliques :

Si les freins ne fonctionnent pas correctement, s'ils semblent spongieux ou si le réservoir du liquide de frein peut fonctionner à sec, il peut s'avérer nécessaire de purger le système afin de supprimer l'air des conduites de frein. Purger les freins dans l'ordre suivant :

1. Arrière gauche, arrière droit, avant droit et avant gauche.
2. Fixer un tuyau flexible sur la vis de purge et placer l'autre extrémité du tuyau dans un récipient afin de récupérer les écoulements de liquide lors de la purge du circuit.
3. Purger les freins.
 - a. Desserrer la vis de purge.
 - b. Demander à un assistant d'appuyer sur la pédale de frein et de la maintenir enfoncée.
 - c. Serrer la vis de purge.
 - d. Demander à l'assistant de relâcher la pédale.

Remarque : Ne pas relâcher la pédale de frein avant que la vis de purge soit serrée sinon de l'air entrera dans les conduites de frein.

- e. Répéter les étapes a à d si nécessaire jusqu'à ce que toutes les bulles d'air aient disparu du circuit et qu'il y ait un écoulement constant du liquide dans la conduite de frein.
- f. Vérifier régulièrement le niveau du liquide dans le réservoir. Ne pas vider complètement le réservoir sinon la procédure de purge devra être répétée.

4. Répéter l'étape 3 pour chaque frein.
5. La plupart des collectivités ont un système d'élimination pour le liquide de frein **DOT 3**. Veiller à éliminer les liquides de façon appropriée.

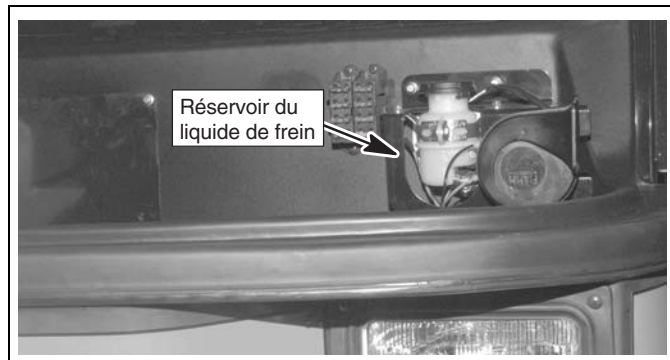


Schéma 5J

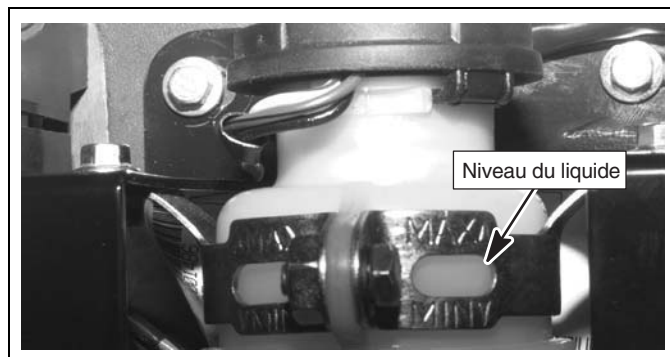


Schéma 5K



Schéma 5L

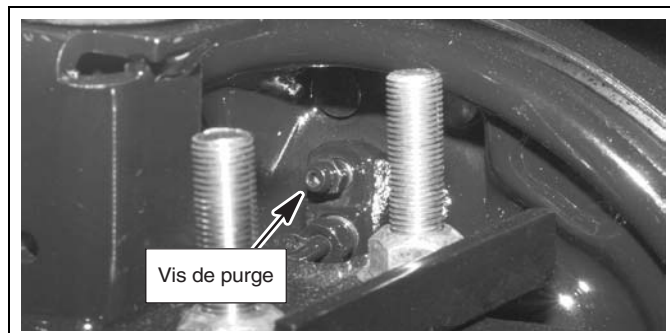


Schéma 5M

5.22 LIQUIDE DU DIFFERENTIEL

Le liquide du différentiel doit être vérifié toutes les 100 heures ou 3 mois. Le liquide doit être changé après les 100 premières heures d'utilisation et toutes les 600 heures (ou une fois par an) par la suite.

Capacité du liquide de différentiel.... 2,5 l

Type de liquide..... Lubrifiant pour engrenages SAE EP 80-90

Pour vérifier le niveau du liquide de différentiel, retirer le bouchon de remplissage situé à l'avant du différentiel. Le liquide doit atteindre le niveau du bas du trou de remplissage.

Si le liquide est plus bas, ajouter du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

Pour changer le liquide de différentiel, retirer le bouchon de vidange situé à l'arrière du différentiel.

Laisser le liquide s'écouler dans un récipient adapté. Eliminer le liquide usagé de façon appropriée conformément aux réglementations locales et d'état.

Appliquer un produit d'étanchéité sur le filetage de tuyau du bouchon de vidange et le repositionner.

Remplir le différentiel avec du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

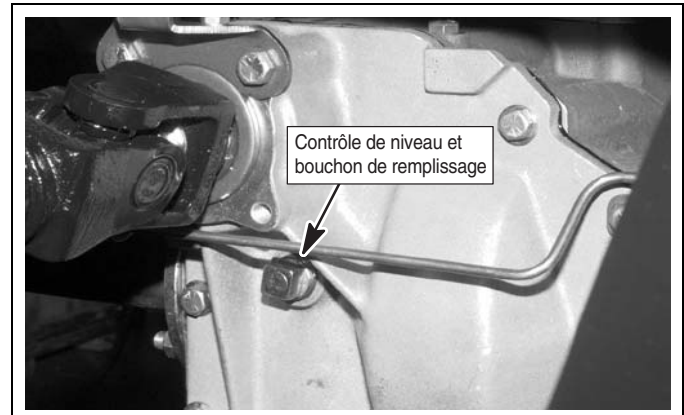


Schéma 5N

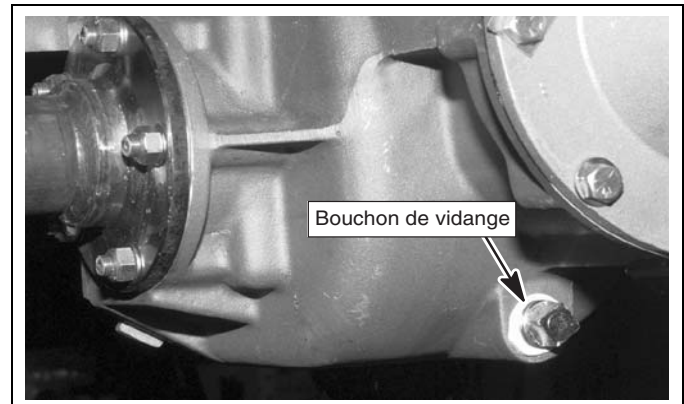


Schéma 5O

5.23 TRANSMISSION MANUELLE MOTEUR DIESEL

Le liquide de transmission doit être vérifié toutes les 100 heures ou 3 mois. Le liquide doit être changé toutes les 600 heures (ou une fois par an).

Capacité du liquide de différentiel.... 1,3 l

Type de liquide..... Lubrifiant pour engrenages SAE EP 80-90

Pour vérifier le niveau du liquide de transmission, retirer le bouchon de remplissage situé à l'avant de la transmission. Le liquide doit atteindre le niveau du bas du trou de remplissage.

Si le liquide est plus bas, ajouter du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

Pour changer le liquide, retirer le bouchon de vidange situé à l'arrière de la transmission.

Laisser le liquide s'écouler dans un récipient adapté. Eliminer le liquide usagé de façon appropriée conformément aux réglementations locales et d'état.

Appliquer un produit d'étanchéité sur le filetage de tuyau du bouchon de vidange et le repositionner.

Remplir la transmission avec du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

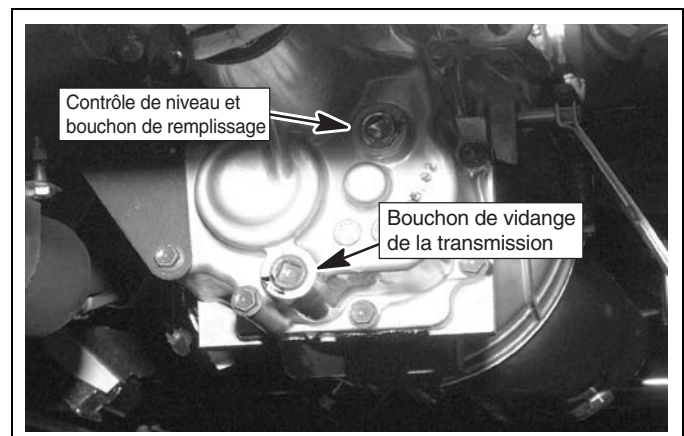


Schéma 5P

5 MAINTENANCE

5.24 TRANSMISSION MANUELLE MOTEUR ESSENCE

Le liquide de transmission doit être vérifié toutes les 100 heures ou 3 mois. Le liquide doit être changé toutes les 600 heures (ou une fois par an).

Capacité du liquide de différentiel.... 1,2 l

Type de liquide Lubrifiant pour engrenages SAE EP 80-90

Pour vérifier le niveau du liquide de transmission, retirer le bouchon de remplissage situé à l'avant de la transmission. Le liquide doit atteindre le niveau du bas du trou de remplissage.

Si le liquide est plus bas, ajouter du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

Pour changer le liquide, retirer le bouchon de vidange situé à l'arrière de la transmission.

Laisser le liquide s'écouler dans un récipient adapté. Eliminer le liquide usagé de façon appropriée conformément aux réglementations locales et d'état.

Appliquer un produit d'étanchéité sur le filetage de tuyau du bouchon de vidange et le repositionner.

Remplir la transmission avec du lubrifiant pour engrenages jusqu'à ce que le liquide commence à s'écouler par le trou. Appliquer un produit d'étanchéité sur le filetage du tuyau et repositionner le bouchon de remplissage.

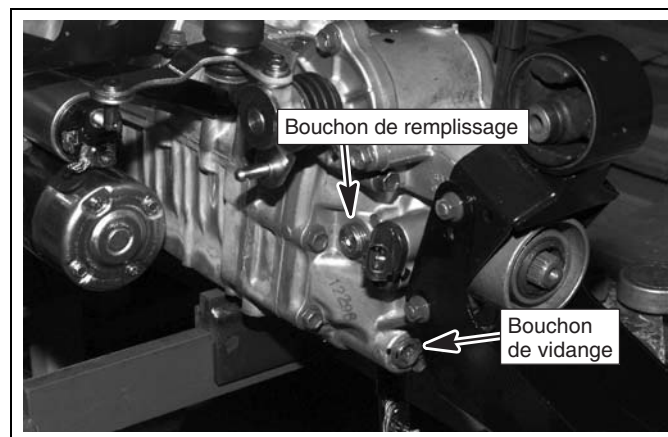


Schéma 5Q

5.25 TRANSMISSION AUTOMATIQUE MOTEUR ESSENCE

Le liquide de transmission doit être vérifié toutes les 100 heures ou 3 mois. Le liquide doit être changé toutes les 600 heures (ou une fois par an).

Capacité du liquide de différentiel.... 4,2 l

Type de liquide Mercon / Dextron II

Pour vérifier le niveau du liquide de transmission, le moteur doit être en marche. Placer le levier de vitesse sur « P » PARK (stationnement), enclencher le frein de stationnement et démarrer le moteur.

Pendant que le moteur tourne, retirer la jauge et l'essuyer avec un chiffon propre. Insérer la jauge dans le tube d'extension jusqu'à ce qu'elle touche le tube. Retirer la jauge et lire le niveau du liquide.

Le liquide doit rester entre les deux repères situés sur la jauge. Si le niveau est trop bas, ajouter du liquide pour obtenir un niveau correct. **Ne pas remplir excessivement.** Ajouter du liquide en utilisant le tube d'extension comme un tube de remplissage.

Pour changer le liquide, retirer le bouchon de vidange situé à l'arrière de la transmission.

Laisser le liquide s'écouler dans un récipient adapté. Eliminer le liquide usagé de façon appropriée conformément aux réglementations locales et d'état.

Appliquer un produit d'étanchéité sur le filetage de tuyau du bouchon de vidange et le repositionner.

Remplir la transmission jusqu'à ce que le liquide atteigne le bon repère sur la jauge.


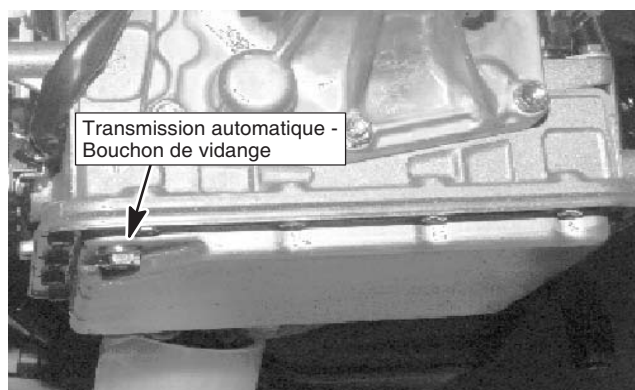


Schéma 5R

5.26 CIRCUIT ELECTRIQUE

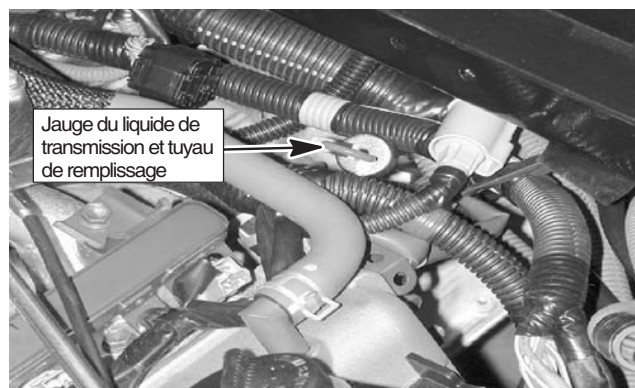


ATTENTION

Toujours mettre le commutateur d'allumage sur OFF (Arrêt) et retirer le câble négatif (Noir) de batterie avant d'inspecter ou de travailler sur le circuit électrique.

Les précautions générales à prendre pour réduire les problèmes électriques sont listées ci-dessous.

1. S'assurer que toutes les bornes et connexions sont propres et correctement sécurisées.
2. Vérifier le système de verrouillage et les fusibles régulièrement.
Si le verrouillage ne fonctionne pas correctement et que le problème ne peut pas être corrigé, contacter un revendeur Jacobsen agréé.
3. Garder le harnais de câbles et tous les fils individuels à l'écart des pièces mobiles pour éviter tout dommage.
4. Vérifier la batterie et le circuit de chargement de la batterie.
5. Ne pas laver ou pulvériser sous pression autour des connexions et composants électriques.
6. Les circuits sont protégés par des fusibles situés sous le capot avant et un fusible situé près du ventilateur de refroidissement.

Moteur diesel

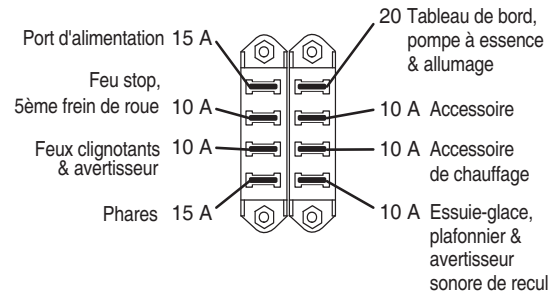

Moteur essence

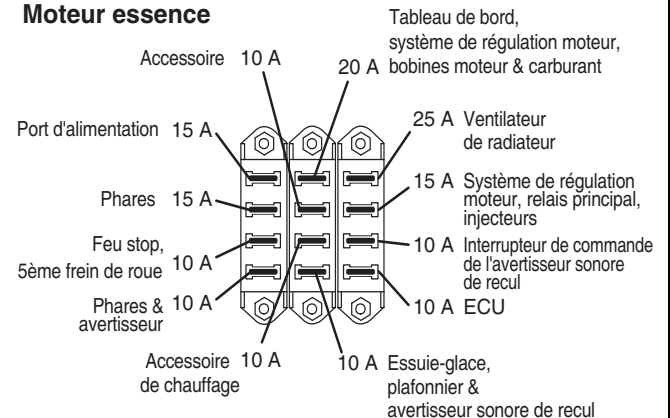


Schéma 5S

5.27 TABLEAU DE BORD

Le tableau de bord est équipé de jauges et de voyants qui affichent les fonctions de l'unité. La maintenance du tableau de bord se limite au remplacement des ampoules et au réglage des commutateurs DIP. Retirer les quatre vis qui fixent le tableau de bord.

Tirer le tableau de bord, l'incliner vers l'avant et débrancher le connecteur électrique pour accéder plus facilement à l'arrière du tableau.

Remplacement d'ampoule électrique :

1. Déterminer quelle ampoule doit être remplacée.
2. Tourner la douille d'un quart de tour dans le sens inverse des aiguilles d'une montre et la retirer du tableau de bord.
3. Remplacer l'ancienne ampoule par une ampoule neuve de même type.

Emplacement..... Ampoule de remplacement

- A VoltmètreC658
- B Jauge de température.....C658
- C Jauge de carburant.....C658
- D Horomètre.....C658
- E Compte-toursC161
- F Clignotant gauche.....C161
- G Pression d'huileC161
- H Bougie de préchauffage.....C161

- J Liquide de frein.....C161
- K Clignotant droitC161
- L Frein de stationnement.....C161
- M Feux de routeC658
- N Alternateur / BatterieC161

4. Placer l'ampoule et la douille dans le tableau de bord. Tourner d'un quart de tour dans le sens des aiguilles d'une montre pour les fixer au tableau de bord. Vérifier que la base de la douille est correctement emboîtée dans le tableau de bord.

5 MAINTENANCE

Réglage du commutateur DIP du compte-tours :

Le tableau de bord utilise un code de séquence de commutateur DIP pour identifier le nombre d'impulsions d'entrée par tour-moteur et le type de moteur afin d'afficher correctement le nombre de tr/min du moteur sur le compte-tours.

Si vous remplacez le tableau de bord ou si le compte-tours ne fonctionne pas correctement, il faut veiller à ce que le code de séquence soit correctement paramétré.

Le Truckster équipé d'un moteur diesel Kubota utilise le code de séquence suivant pour 10,5 impulsions / tour.

Code de séquence du moteur diesel Kubota : 0 0 0 1 0 1 0 0

Le Truckster équipé d'un moteur essence Suzuki utilise le code de séquence suivant pour 1,5 impulsions / tour.

Code de séquence du moteur essence Suzuki : 0 0 0 0 0 0 1 0

A l'aide d'un tournevis fin ou d'un outil similaire, actionner les leviers de commutateur vers le haut ou le bas pour adapter le code de séquence de cette unité.

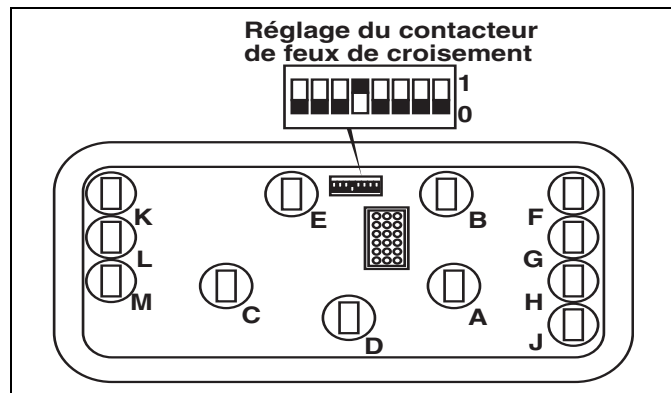


Schéma 5T

5.28 REMPLACEMENT DE PHARE

Le phare doit être remplacé dès lors qu'il ne fonctionne plus ou est endommagé. Le phare est une unité scellée et il ne peut être remplacé que par une unité complète.

Description.....	Type d'ampoule	N° de pièce Jacobsen
Phare	H6545	837303

1. Déconnecter le câble négatif de batterie.
2. Retirer les quatre vis qui fixent le quadrant de phare au capot avant.
3. Tirer le phare et le quadrant vers l'avant, hors de l'ouverture.
4. Débrancher le connecteur électrique situé à l'arrière du phare.
5. Retirer le phare du quadrant. Eliminer correctement l'ancienne ampoule.

6. Installer le nouveau phare en suivant la procédure inverse du retrait.

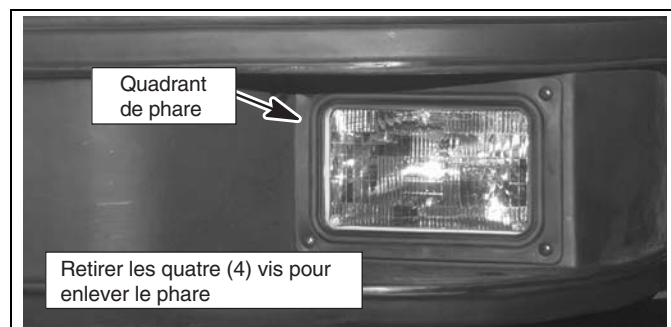


Schéma 5U

5.29 REMPLACEMENT DE FEU ARRIERE

Le feu arrière doit être réparé dès lors qu'il ne fonctionne plus ou est endommagé. L'ampoule du feu arrière et le verre de protection sont des composants remplaçables. Un dommage sur l'armature du feu arrière nécessite un remplacement complet.

Description.....	Type d'ampoule	N° de pièce Jacobsen
Ampoule de feu arrière	1157	822049

1. Retirer les deux vis qui maintiennent le verre de protection. Retirer le verre de protection et le joint.
2. Appuyer sur l'ampoule, la tourner d'un quart de tour et la retirer. Eliminer l'ancienne ampoule de façon appropriée.
3. Installer la nouvelle ampoule en suivant la procédure inverse de celle du retrait. S'assurer que le joint du verre de protection est bien positionné.

4. Pour retirer l'ensemble du dispositif de feu arrière, retirer les deux écrous et retirer le cadre qui maintient le feu arrière au châssis. Déconnecter le faisceau et retirer le feu arrière du châssis.

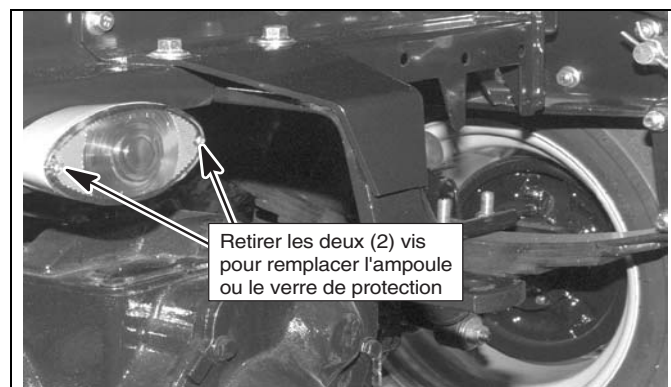


Schéma 5V

5.30 VERIFICATION DE DIAGNOSTIC D'INJECTION ELECTRONIQUE

Unités à moteur essence Suzuki uniquement

Le système électrique est équipé d'un raccord autodiagnostic OBD-II.

Transmission manuelle : enclencher le frein de stationnement, se mettre au point mort et placer le commutateur d'allumage sur OFF.

Transmission automatique : enclencher le frein de stationnement, mettre le levier de vitesse sur « P » et placer le commutateur d'allumage sur OFF.

Ouvrir le capot avant et localiser le raccord OBD-II sur le support du réservoir de liquide de frein. Brancher un lecteur OBD-II dans le raccord, mettre le commutateur d'allumage sur ON (ne pas démarrer pas le moteur) et se reporter aux instructions fournies avec le lecteur pour récupérer les codes de diagnostic.

Se reporter au Manuel technique de réparation du Truckster pour les descriptions de code.

5.31 ENTRETIEN ET NETTOYAGE

Nettoyer la machine et ses accessoires dès la fin du travail et veiller à ce que les composants restent propres.

Remarque: *Ne pas nettoyer certaines parties des composants alors qu'ils sont encore chauds et ne pas utiliser d'air ou de vapeur sous haute pression. Utiliser de l'eau froide et des produits de nettoyage pour automobiles.*

1. Utiliser de l'air comprimé pour nettoyer le moteur et les ailettes du radiateur. Le concessionnaire Jacobsen vend des souffleurs spéciaux.
2. Utiliser uniquement de l'eau douce pour nettoyer l'équipement.

Remarque : *Il a été démontré que l'utilisation d'eau salée ou d'eau d'affluent provoque la formation de rouille et la corrosion de pièces en métal qui entraînent une détérioration ou une défaillance prématurées. Les dommages de cette nature ne sont pas couverts par la garantie d'usine.*

3. Ne pas vaporiser d'eau sur le pupitre des instruments, la clé de contact, le variateur ou les composants électriques, les logements des roulements et les joints.
4. Nettoyer les surfaces en plastique ou caoutchouc avec une solution savonneuse douce ou utiliser des produits de nettoyage pour vinyl/caoutchouc en vente dans le commerce.

Réparer les surfaces métalliques et utiliser de la peinture d'appoint Jacobsen. Cirer les composants pour protéger leur peinture au maximum.



ATTENTION

Retirer l'herbe et les débris des unités de coupe, entraînements, pots d'échappement et du moteur pour éviter les incendies.

5.32 ENTREPOSAGE

Généralités

1. Nettoyer entièrement la machine et la graisser. Réparer et peigner ses surfaces métalliques extérieures ou endommagées.
2. Examiner la machine, serrer les composants et remplacer ceux qui sont endommagés ou usés.
3. Vidanger et remplir de nouveau le radiateur.
4. Nettoyer bien les pneus et entreposer la machine en veillant à ce que la charge ne repose pas sur les pneus. Si la machine ne repose pas sur des crics, Les vérifier régulièrement et les regonfler, s'il y a lieu.
5. Veiller à ce que la machine et ses accessoires restent propres, secs et protégés contre les intempéries pendant l'entreposage.



AVERTISSEMENT

Ne jamais entreposer près de dispositifs inflammables ou susceptibles de provoquer des étincelles pour ne pas enflammer le carburant ou provoquer des vapeurs de carburant.

Batterie

1. Retirer, nettoyer et entreposer la batterie en la plaçant verticalement sur une surface non conductrice (bois), l'entreposer dans un local froid et sec. Ne pas entreposer la batterie sur du ciment ou sur une surface en acier pour qu'elle ne se décharge pas plus rapidement.
2. Vérifier et recharger la batterie tous les 60 à 90 jours pendant la période d'entreposage.
3. Entreposer la batterie dans un local froid et sec. Afin de minimiser sa décharge, la température ambiante du local ne doit pas dépasser 27° C ou tomber sous -7° C pour que l'électrolyte ne gèle pas.

Moteur (généralités)

1. Le moteur encore chaud, déposer le bouchon de vidange, vidanger l'huile du vilebrequin et remplacer le filtre à huile. Reposer le bouchon de vidange et remplir d'huile neuve. Laisser le moteur se refroidir avant d'entreposer la machine.
2. Nettoyer l'extérieur du moteur. Peindre les surfaces extérieures ou appliquer une fine couche d'anti-corrosif.

Ajouter un conditionnant de carburant ou du biocide afin d'éviter toute gélification ou croissance bactérienne dans le carburant. Consulter votre fournisseur de carburant local.

En cas de stockage en intérieur, vider le carburant du réservoir.

Fermer la vanne de fermeture du carburant.

Après l'entreposage

1. Vérifier et reposer la batterie.
2. Vérifier ou entretenir le filtre à carburant et l'épurateur d'air.
3. Vérifier le niveau du refroidisseur dans le radiateur.
4. Vérifier le niveau d'huile du vilebrequin moteur et du circuit hydraulique.
5. Purger le circuit carburant et le remplir avec du carburant neuf.
6. Nettoyer le mélange d'antigel de la pompe.
7. Assembler les durits articulées, les vannes antigouttes, les becs de buse et les crépines.
8. Veiller à ce que les pneus soient correctement gonflés.
9. Lancer et laisser tourner le moteur à mi-régime. Lui accorder suffisamment de temps pour se chauffer et graisser.



AVERTISSEMENT

Ne jamais faire tourner le moteur sans ventilation adéquate. Les fumées d'échappement risquent de s'avérer mortelles en cas d'inhalation.

6.1 GENERALITES

Le tableau suivant de dépistage des défauts indique les problèmes rencontrés couramment lors de la mise en marche et du fonctionnement.

Pour tous renseignements concernant les circuits hydraulique et électrique, adressez-vous à votre concessionnaire régional Jacobsen.

Symptômes	Causes possibles	Action
Moteur ne démarre pas.	<ol style="list-style-type: none">1. Pédale d'embrayage n'est pas enfoncée.2. Batterie peu chargée ou défectueuse.3. Réservoir de carburant vide ou sale. Soupape d'arrêt de carburant fermée.4. Fusible grillé.	<ol style="list-style-type: none">1. Vérifier la procédure de démarrage.2. Inspecter l'état de la batterie et les connexions de batterie.3. Remplir avec du carburant frais. Changer le filtre à carburant. Purger les conduites de carburant. Fermer la vanne de fermeture du carburant.4. Remplacer le fusible.
Moteur a du mal à démarrer ou fonctionne mal.	<ol style="list-style-type: none">1. Faible niveau de carburant, carburant ou filtre à carburant sale.2. Filtre à air sale.3. Injecteurs, pompe d'injection.4. Problème de moteur.	<ol style="list-style-type: none">1. Remplir avec du carburant frais. Changer le filtre à carburant. Purger les conduites de carburant.2. Inspecter et remplacer le filtre à air.3. Consulter le manuel du moteur.4. Consulter le manuel du moteur.
Moteur s'arrête.	<ol style="list-style-type: none">1. Réservoir de carburant vide.	<ol style="list-style-type: none">1. Remplir avec du carburant frais et purger les conduites de carburant.
Surchauffe du moteur	<ol style="list-style-type: none">1. Niveau du liquide de refroidissement bas.2. Entrée d'air obstruée.3. Courroie de la pompe à eau cassée ou détendue.4. Surcharge du moteur.	<ol style="list-style-type: none">1. Inspecter et ajouter du liquide de refroidissement.2. Nettoyer l'entrée d'air du circuit de refroidissement.3. Resserrer ou remplacer la courroie.4. Réduire la vitesse.
La véhicule ne réagit pas à la pédale d'accélérateur	<ol style="list-style-type: none">1. Frein de stationnement enclenché.2. Transmission au point mort.3. Pédale d'embrayage pas enfoncée.	<ol style="list-style-type: none">1. Enlever le frein de stationnement.2. Relâcher les pédales de frein et d'embrayage. Enclencher la bonne vitesse pour obtenir la vitesse désirée. Relâcher la pédale de frein. Relâcher lentement l'embrayage tout en appuyant sur l'accélérateur.3. Relâcher lentement la pédale d'embrayage.

7 TABLEAUX DE MAINTENANCE ET DE GRAISSAGE

7.1 GENERALITES



AVERTISSEMENT


Avant de nettoyer, régler ou réparer ce matériel, débrayer tous les entraînements, abaisser les accessoires au sol, serrer le frein de stationnement, arrêter le moteur et retirer la clé de contact pour éviter les blessures.

1. Toujours nettoyer le graisseur avant et après la lubrification.
2. Lubrifier avec une graisse conforme ou de qualité supérieure aux spécifications NLGI Classe 2 LB. Appliquer la graisse à l'aide d'un pistolet de graissage manuel et remplir lentement jusqu'à ce que la graisse commence à suinter. Ne pas utiliser de pistolets à air comprimé.

3. Pour une manipulation souple de tous les leviers, points de pivotement et autres points de friction qui ne sont pas indiqués dans le tableau de lubrification, appliquer plusieurs couches d'huile SAE 30 toutes les 40 heures ou lorsque cela s'avère nécessaire.
4. Graisser les raccords toutes les 100 heures. Ne pas graisser excessivement les raccords de l'arbre de transmission **(A)**. Trop de graisse endommagerait les joints.

7.2 TABLEAU DE LUBRIFICATION

Raccord	Description	Qté
A	Arbre de transmission	2
B	Rotules supérieures	2
C	Rotules inférieures	2
D	Embouts de biellette de direction	4

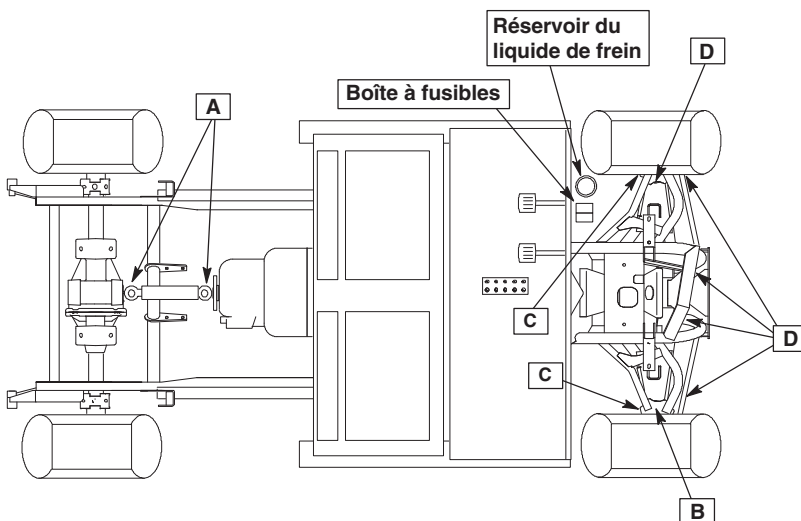

TABLEAUX DE MAINTENANCE ET DE GRAISSAGE 7

7.3 TABLEAUX DE MAINTENANCE

Programme de graissage et de maintenance

	Tous les jours	Premières 35 heures	Toutes les 75 heures/ 2 mois	Toutes les 100 heures/ 3 mois	Toutes les 200 heures/ 6 mois	Toutes les 400 heures/ 9 mois	Toutes les 600 heures/ 12 mois	Voir le chapitre	Type de graisse
Filtre à air					R**			5.8	
Alternateur							I		
Batterie			I				C	5.10	
Courroies	I-A*			I-A			I-A	4., 4.2	
Liquide de frein				I-A				5.21	VI
Garnitures de frein		I-A*		I-A			I-A		
Embrayage				I-A					
Système de refroidissement	I-C-A				I	R		5.7	IV
Liquide du différentiel				I-R*			R	5.22	III
Système électrique		I		I				5.26	
Bougies de préchauffage du moteur							I		
Ralenti du moteur		I					I		
Bruit / vibration du moteur	I								
Huile moteur (Suzuki)	I	R*****		R**				5.3	
Huile moteur (Kubota)	I	R*	R**					5.3	II
Filtre à huile moteur	I	R*****		R**				5.3	
Filtre à huile moteur	I	R*	R**					5.3	
Jeu de soupapes du moteur		I****			I****				
Fuites de liquide	I-R								
Système d'alimentation en carburant		I					I	5.15	
Filtre à carburant				R				5.15	
Séparateur d'eau du carburant (Diesel uniquement)	I-C								
Liquide du régulateur				I-A					
Filtre hydraulique							R		
Liquide hydraulique				I-A					
Pompe d'injection / Temporisation							I		
Lubrifier le châssis				L			L	7.2	I
Silencieux et échappement	I			I				5.5	
Grilles du radiateur	I-C/AR							5.7	
Liquide de direction assistée		I		I				5.4	V
Bougies d'allumage (Essence uniquement)							C-A-R		
Brosses du démarreur							I		
Pneus	I	I-A						5.16	
Liquide de transmission (Transmission manuelle)				I			R	5.23 5.24	III
Liquide de transmission (Transmission automatique)				I			R	5.25	VII
Coussinets de roue							Regarnir		

A - Ajouter ou régler C - Nettoyer I - Vérifier L - Graisser R - Remplacer AR - s'il y a lieu

7 TABLEAUX DE MAINTENANCE ET DE GRAISSAGE

Remarques :

- * Indique la révision initiale pour les machines neuves.
- ** En fonction des conditions d'utilisation, l'huile moteur, le filtre à huile et le filtre à air peuvent nécessiter un remplacement plus fréquent.
- *** Inspecter les durits et tuyaux visibles afin de détecter toutes fuites ou traces d'huile.
- **** A effectuer chez un revendeur agréé
- ***** Changer l'huile et le filtre sur les moteurs Suzuki après les cinquante premières heures d'utilisation.

Lubrifiants :

- I Pistolet de graissage manuel avec NLGI Classe 2 (Catégorie LB).
- II Huile moteur – Voir Chapitre 5.3
- III Lubrifiant pour engrenages SAE EP 80-90
- IV Capacité : 2,8 litres, mélange éthylène glycol et eau 50/50
- V Liquide de direction assistée GM
- VI Liquide de frein DOT 3
- VII Liquide de transmission automatique Mercon/Dextron II
- VIII Huile hydraulique GreensCare 68
5003102 Baril de 220 litres d'huile GreensCare 68
5003103 Bidon de 20 litres d'huile GreensCare 68
- IX Huile SAE 20W

7.4 PIECES DE RECHANGE COURANTES

Référence	Description de la pièce
5000919	Élément de filtre à air de moteur Diesel
840352	Élément de filtre à air de moteur essence
4113986	Filtre à huile de moteur Diesel
2701809	Filtre à huile de moteur essence
4183591	Filtre à carburant de moteur Diesel
2701898	Filtre à carburant de moteur essence
4175560	Courroie d'alternateur de moteur Diesel
4117092	Courroie de pompe hydraulique de moteur Diesel

Référence	Description de la pièce
4139265	Courroie de direction assistée-alternateur de moteur essence
4139351	Courroie de pompe hydraulique de moteur essence
4119606	Bougie de préchauffage NGK 3932 (DCPR7E)
2701832	Bougie de préchauffage Denso XU22EPR-U

7.5 PIECES D'ENTRETIEN DU MOTEUR DIESEL KUBOTA

Les pièces du moteur courantes suivantes sont fournies à des fins de référence uniquement. Vous pouvez obtenir les pièces auprès de votre Manuel des pièces du moteur.

Référence	Description de la pièce
2811021	Solenoïde de carburant
5000894	Pompe d'injection
5000901	Durit d'injection #1
5000902	Durit d'injection #2
5000903	Durit d'injection #3
4183586	Injecteur de carburant
5001265	Durit de retour de l'injecteur
4177227	Bougie de préchauffage
556412	Thermostat
4134370	Joint d'étanchéité de thermostat
4165525	Pompe à eau
557867	Joint d'étanchéité de la pompe à eau
4177260	Bouchon de vidange du carter d'huile

Référence	Description de la pièce
2500811	Joint d'étanchéité du bouchon de vidange du carter d'huile
4113986	Filtre à huile
4145944	Bouchon de remplissage de l'huile
2809955	Joint d'étanchéité du bouchon de remplissage de l'huile
2500856	Joint d'étanchéité de couvercle des soupapes
557888	Démarrateur
4183623	Alternateur

9 NOMENCLATURE DES PIÈCES DE RECHANGE

9.1 UTILISATION DE LA NOMENCLATURE DES PIÈCES DE RECHANGE

Abbreviations

N/S – Non réparable. Passer commande du composant principal ou kit.

AR – Quantité variable ou dimensions requises pour obtenir un réglage correct.

Symboles – Ex. ●, près du numéro de l'article, renvoie à une explication supplémentaire importante pour passer commande.

Éléments énumérés

Les pièces précédées d'un point en relief indiquent qu'elles font partie d'un ensemble ou d'un autre composant. Elles s'obtiennent à l'unité ou font partie du composant principal.

Art.	No. Pièce	Qté.	Description	No. de Série/Remarques
● 1	123456	1	Montage, Soupape	<i>Indique une partie de la pièce</i> <i>Articles 2 & 3 inclus</i> <i>Pièce de rechange comprise dans l'article 2</i> <i>Pièce non réparable comprise dans l'article 2</i>
2	789012	1	Soupape, Levage	
3	345678	1	• Poignée	
4	N/S	1	• Kit de joints	
5	901234	1	Vis, Tête Hex. 1/4 – 20 x 2"	


9.2 COMMANDE DES PIÈCES DE RECHANGE

1. Inscrire son **nom** et **adresse** sur le bordereau de commande.
2. Indiquer l'adresse et le mode de transport pour l'expédition.
3. Indiquer le numéro, nom et numéro de série de la pièce figurant sur la plaque signalétique de la machine.
4. Indiquer la quantité désirée, le numéro de la pièce, le code couleur et la définition de la pièce telle qu'elle parait dans la nomenclature des pièces de rechange.
5. Envoyer le bordereau de commande au concessionnaire agréé de Jacobsen.
6. Vérifier les marchandises à l'arrivée. En cas d'endommagement ou de pièces manquantes, s'adresser au transporteur avant de les accepter.
7. Ne pas renvoyer de pièces sans les accompagner d'une explication indiquant le ou les pièces renvoyées. Les frais de transport doivent être payés à l'avance.

La garantie sera annulée en cas d'utilisation de pièces différentes de celles de Jacobsen.

9.3 TABLE OF CONTENTS

1.1	Front Body	42	58.1	Gas Engine Schematic	160
2.1	Engine Cover	44	59.1	Diesel Engine Electrical Schematic	162
3.1	Four Post ROPS	46			
4.1	Upper ROPS	48			
5.1	Throttle Control.....	50			
6.1	Control Console	52			
7.1	Parking Brake and High-Low Speed Control..	54			
8.1	Brake Pedal	56			
9.1	Clutch Pedal Linkage.....	58			
10.1	Manual Transmission Shifter Linkage	60			
11.1	Manual Transmission Shifter Linkage	62			
12.1	Automatic Transmission Shifter.....	64			
13.1	Automatic Transmission Oil Cooler	65			
14.1	Frame Attachments	66			
15.1	Frame, Lower ROPS and Platform	68			
16.1	Rear Axle	70			
17.1	Front Control Arms.....	72			
18.1	Steering Linkage	74			
19.1	Front Brakes.....	76			
20.1	Steering Column	78			
21.1	Diesel Radiator	80			
22.1	Gas Radiator.....	82			
23.1	Diesel Engine and Transmission Mounting ...	84			
24.1	Gas Engine and MT Mounting	86			
25.1	Gas Engine and AT Mounting.....	88			
26.1	Diesel Engine and Clutch	90			
26.2	Diesel Engine and Clutch	92			
27.1	Suzuki Gas Engine.....	94			
28.1	Diesel Engine Speed Control.....	96			
29.1	Diesel Engine Air Filter.....	98			
30.1	Diesel Engine Exhaust and Remote Oil Filter	100			
31.1	Gas Engine Governor Linkage	102			
32.1	Gas Engine Governor	104			
33.1	Gas Engine Air Filter	106			
34.1	Gas Engine Remote Oil Fill	108			
35.1	Gas Engine Exhaust	109			
36.1	Diesel Fuel System	110			
37.1	Gas Fuel System	112			
38.1	Gas Fuel System	114			
39.1	Hydraulic Tank and Filter	116			
40.1	Hydraulic Pump and Filter	118			
41.1	Lift Cylinder Circuit.....	120			
42.1	Diesel Electrical Components	122			
43.1	Gas Electrical Components	124			
44.1	Differential Assembly	126			
45.1	Differential Housing.....	128			
46.1	Axle Tubes and Shafts	130			
47.1	Front and Shifter Cover	132			
48.1	Input, Main and Jack Shafts.....	134			
49.1	Transmission Clutch Release-Shift Selector	136			
50.1	Transmission Case	138			
51.1	Input and Main Shaft.....	140			
52.1	Gear Shift Fork Linkage	142			
53.1	Mechanical PTO	144			
54.1	Diesel Engine Main Harness	146			
55.1	Diesel Engine and Fan Harness	148			
56.1	Gas Main Harness	152			
56.1	Gas Main Harness (Continued).....	154			
57.1	Gas Engine Electrical Schematic	156			

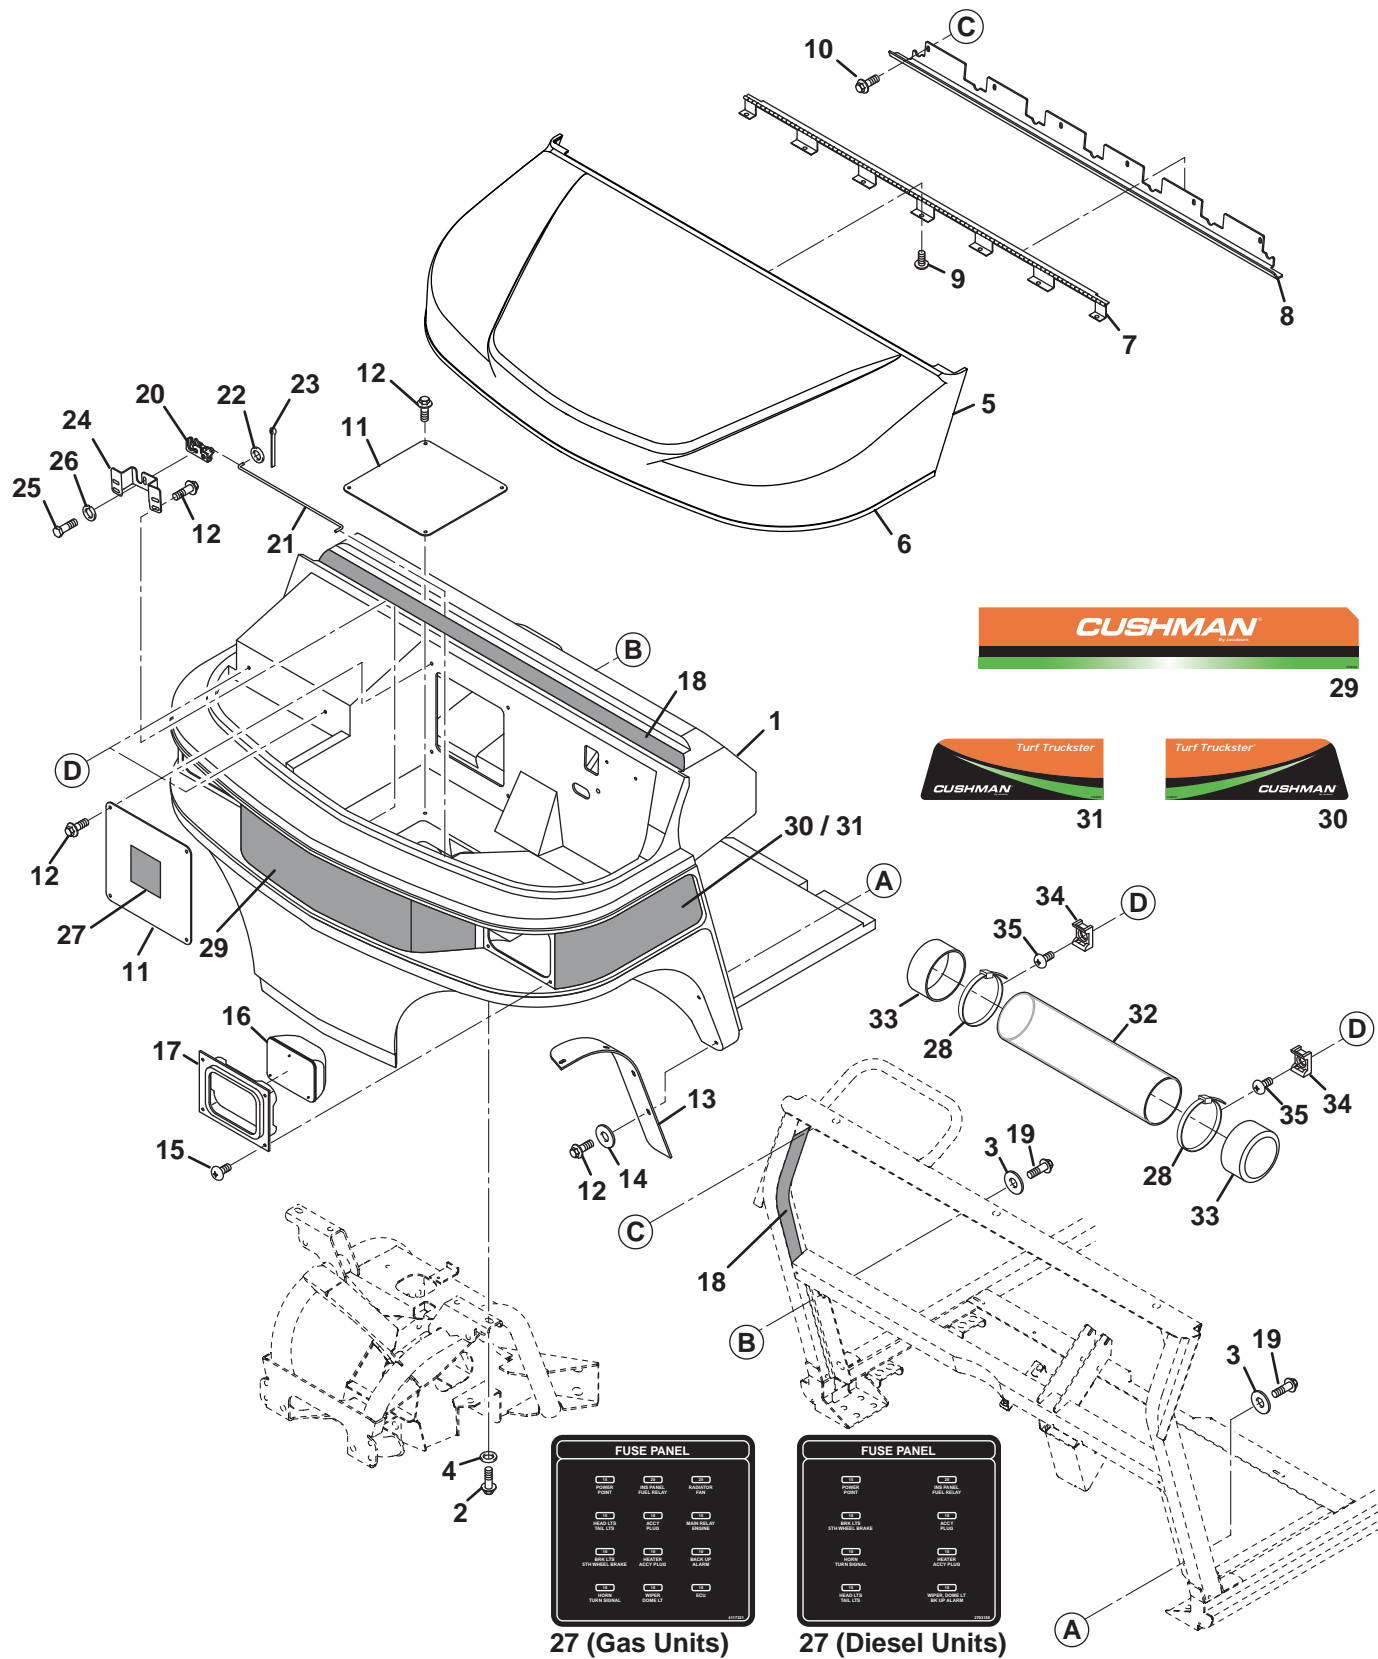

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	2700792	1	Front Clip	Includes decals 821071 & 840901
2	800930	2	Screw, M8-1.25 x 16 mm Hex Flange	
3	548159	4	Flat Washer, 5/16 x 1-1/4 in.	
4	450400	2	Washer, M8	
5	4206760	1	Hood, Orange	
6	4208620	1	• Weather Seal	
7	841477G01	1	Hinge, Hood	
8	841637	1	Angle, Front Clip Mounting	
9	450541	7	Screw, M6-1 x 16 mm Round Head	
10	452695	6	Screw, 1/4-20 x 5/8 in. Taptite	
11	841913	2	Plate, Access	
12	800934	20	Screw, M6-1 x 16 mm Hex Flange	
13	4139691	2	Fender, Flexible	
14	548175	8	Flat Washer, 1/4 x 1-1/4 in.	
15	800943	8	Screw, #10-14 Self Tapping	
16	837303	2	Headlight, Rectangular	
17	841428	2	Bezel, Headlight	
18	828382	AR	Seal, Foam	
19	452389	4	Screw, M8-1.25 x 25 mm Flange	
20	2702198	1	Latch, Hood	
21	841715	1	Rod, Hood Release	Diesel Engine Gas Engine
22	303952	1	Flat Washer, #10	
23	306463	1	Cotter Pin, 1/16 x 1/2 in.	
24	841753	1	Bracket, Hood Latch	
25	306419	2	Screw, 1/4-20 x 1/2 in. Hex Head	
26	306488	2	Lockwasher, 1/4 in. Shakeproof	
27	2703158	1	Decal, Fuses	
27	4117221	1	Decal, Fuses	
28	473142	2	Cable Tie, 15-1/2 in.	
29	4158740	1	Decal, Cushman	
30	4158741	1	Decal, Left Side Turf Truckster	
31	4158742	1	Decal, Right Side Turf Truckster	
32	38541	1	Tube, Clear Document	
33	38061A	2	Cap, Vinyl	
34	840508	2	Mount, Cable Tie	
35	800344	2	Screw, #10 Type AB Self Tapping	


> Change from previous revision

TURF TRUCKSTER

2.1 Engine Cover


Vehicles with Four Post ROPS

Serial No. All

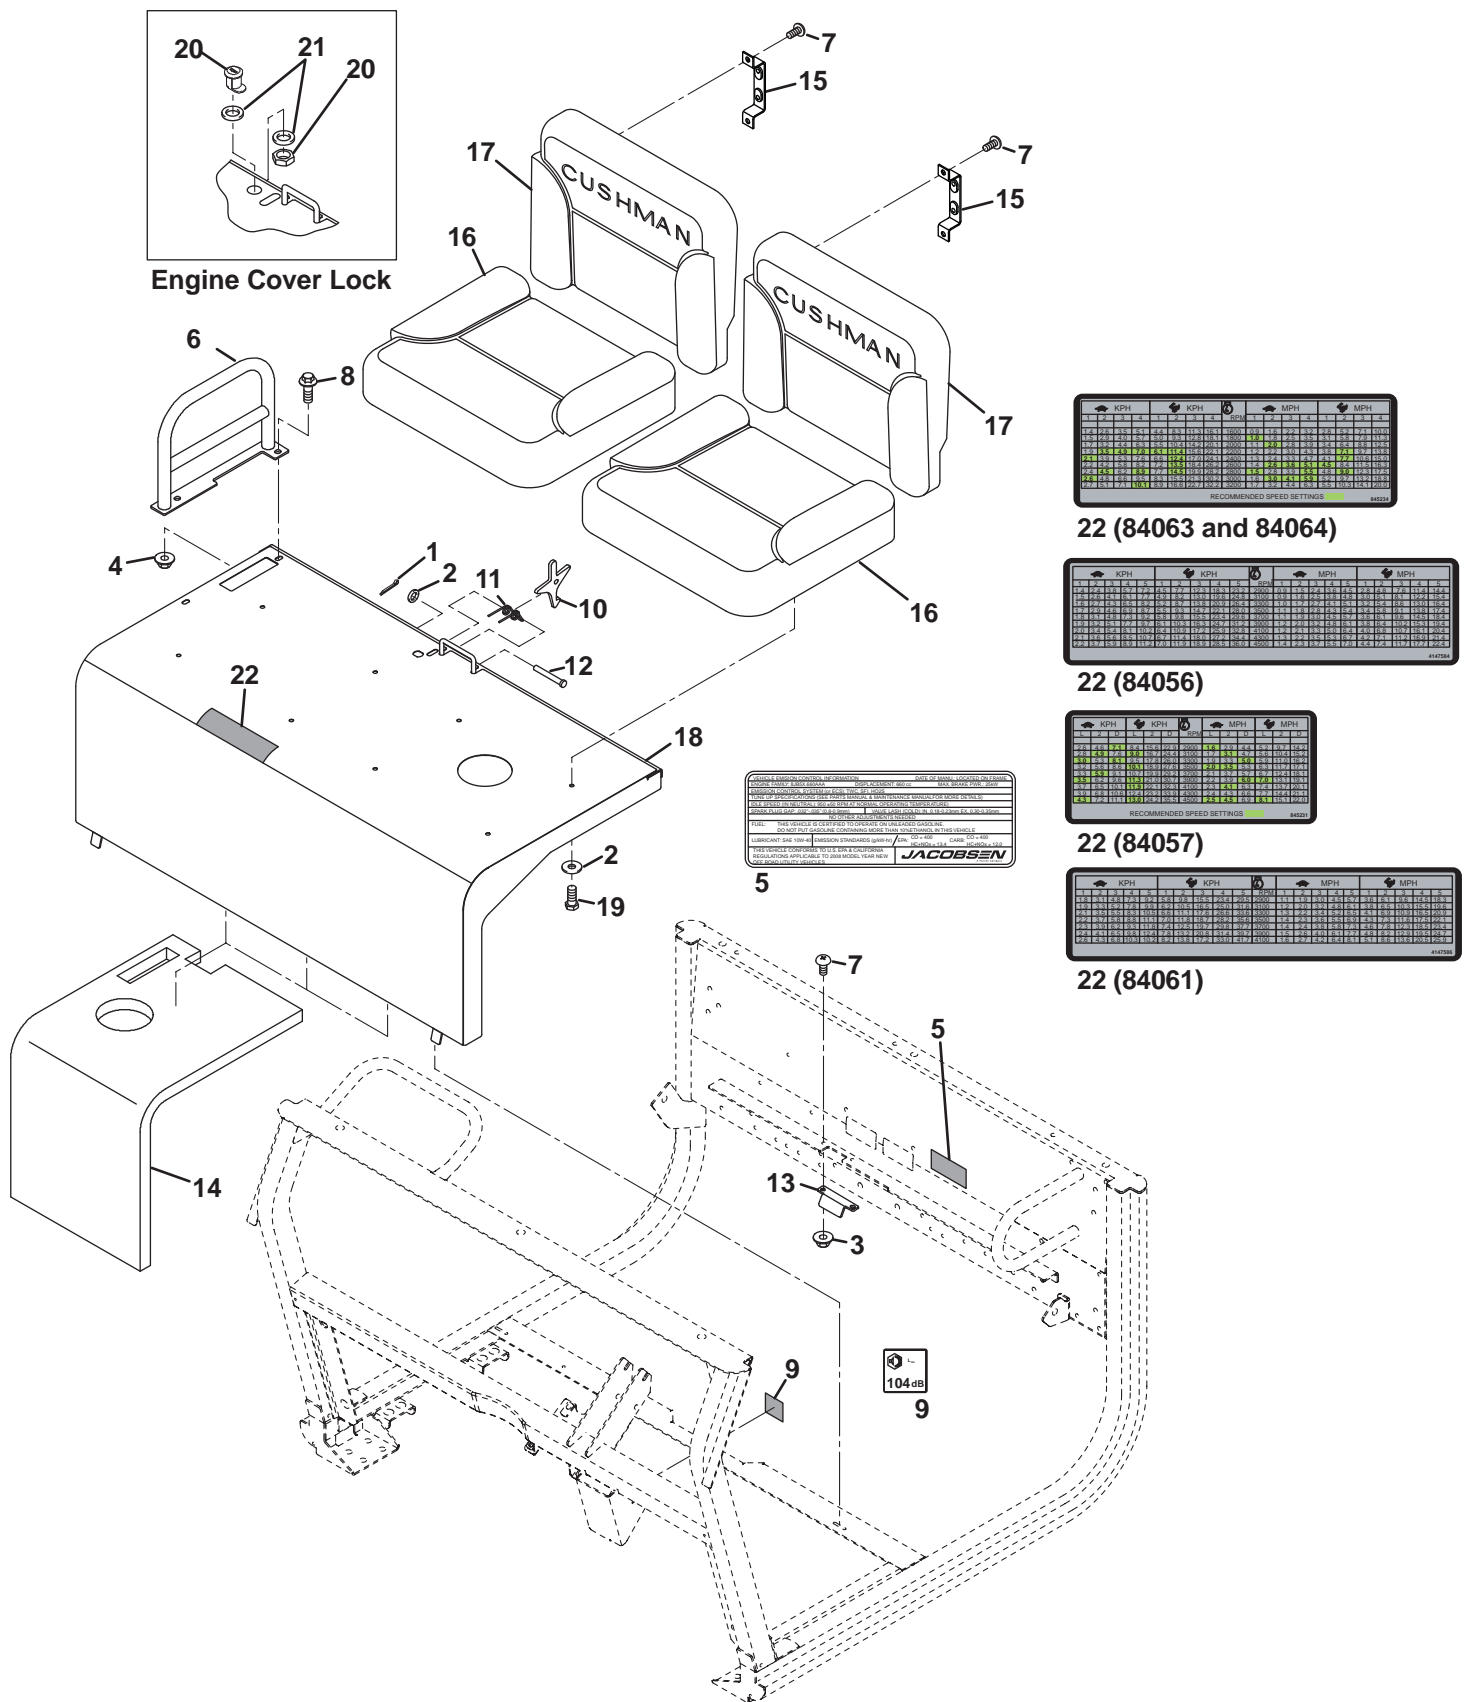

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	306328	1	Cotter Pin, 3/32 x 3/4 in.	Gas Units
2	308090	9	Washer, 1/4	
3	450452	2	Nut, M6-1 Hex Flange	
4	450453	2	Nut, M8-1.25 Hex Flange	
5	REF	1	Decal, Emission	
6	893541	1	Handold, Right Side	CE Diesel Units Only
7	450541	10	Screw, M6-1 x 16 mm Hex Flange	
8	452388	2	Screw, M8-1.25 x 20 mm Hex Flange	
9	4139724	1	Decal, 104 dBA Noise	
10	523085	1	Latch, Engine Cover	
11	816401	1	Spring, Torsion	See 3.1, or See 4.1
12	830784	1	Clevis Pin, 1/4 x 1-7/8 in.	
13	2702199	1	Catch, Engine Latch	
14	4139939	1	Insulation, Engine Cover	
15	893632	4	Mount, Backrest	
16	601937	2	Seat Base	Optional, Required in Europe Optional, Required in Europe Diesel Engines, 84063 and 84064 Gas Engine, MT 84067 Gas Engine, AT84068 Gas Engine, MT 84069
17	893322	4	Backrest	
18	2701223	1	Cover, Engine	
19	302288	8	Screw, 1/4-20 x 1 in. Hex Head	
20	840436	1	Lock, Engine Cover	
21	309488	2	Washer	
22	845234	1	Decal, Ground Speed	
22	4147584	1	Decal, Ground Speed	
22	845231	1	Decal, Ground Speed	
22	4147586	1	Decal,Ground Speed	

> Change from previous revision

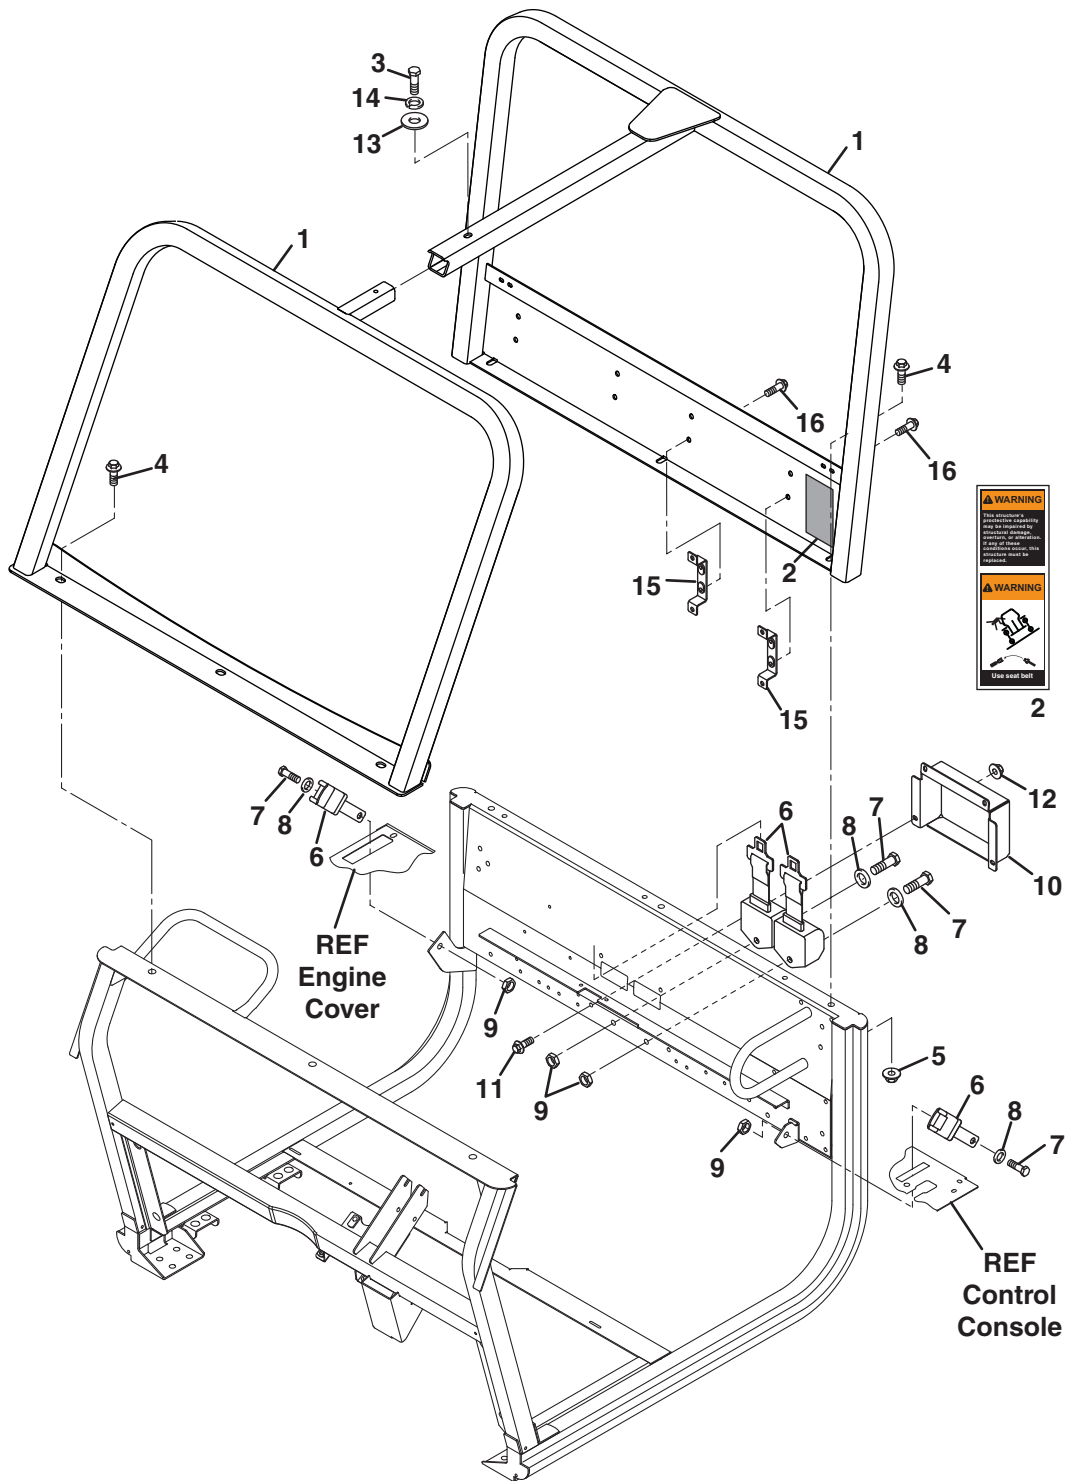


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4205580	1	Four Post ROPS	See 2.1
2		1	• Decal, ROPS Warning	
3	800547	1	• Screw, M10-1.25 x 20 mm Hex Head	
4	452410	6	• Screw, M12-1.75 x 30 mm Flange	
5	450455	3	• Nut, M12-1.75 Hex Flange	
6	4140269	2	• Seat Belt Assembly	
7	N/S	2	• • Screw, 7/16-20 x 1 in. Hex Head	
8	N/S	2	• • Flat Washer, 7/16	
9	N/S	2	• • Nut, 7/16-20 Hex	
10	841799	1	• Guard, Seat Belt	
11	800930	4	• Screw, M8-1.25 x 16 mm Flange	
12	450453	4	• Nut, M8-1.25 Hex Flange	
13	450401	1	• Flat Washer, M10	
14	450412	1	• Lockwasher, M10	
15	893632	4	Support, Backrest	
16	800930	8	Screw, M8-1.25 x 16 mm Flange	

> Change from previous revision

4.1 Upper ROPS

Optional Kit

Serial No. All

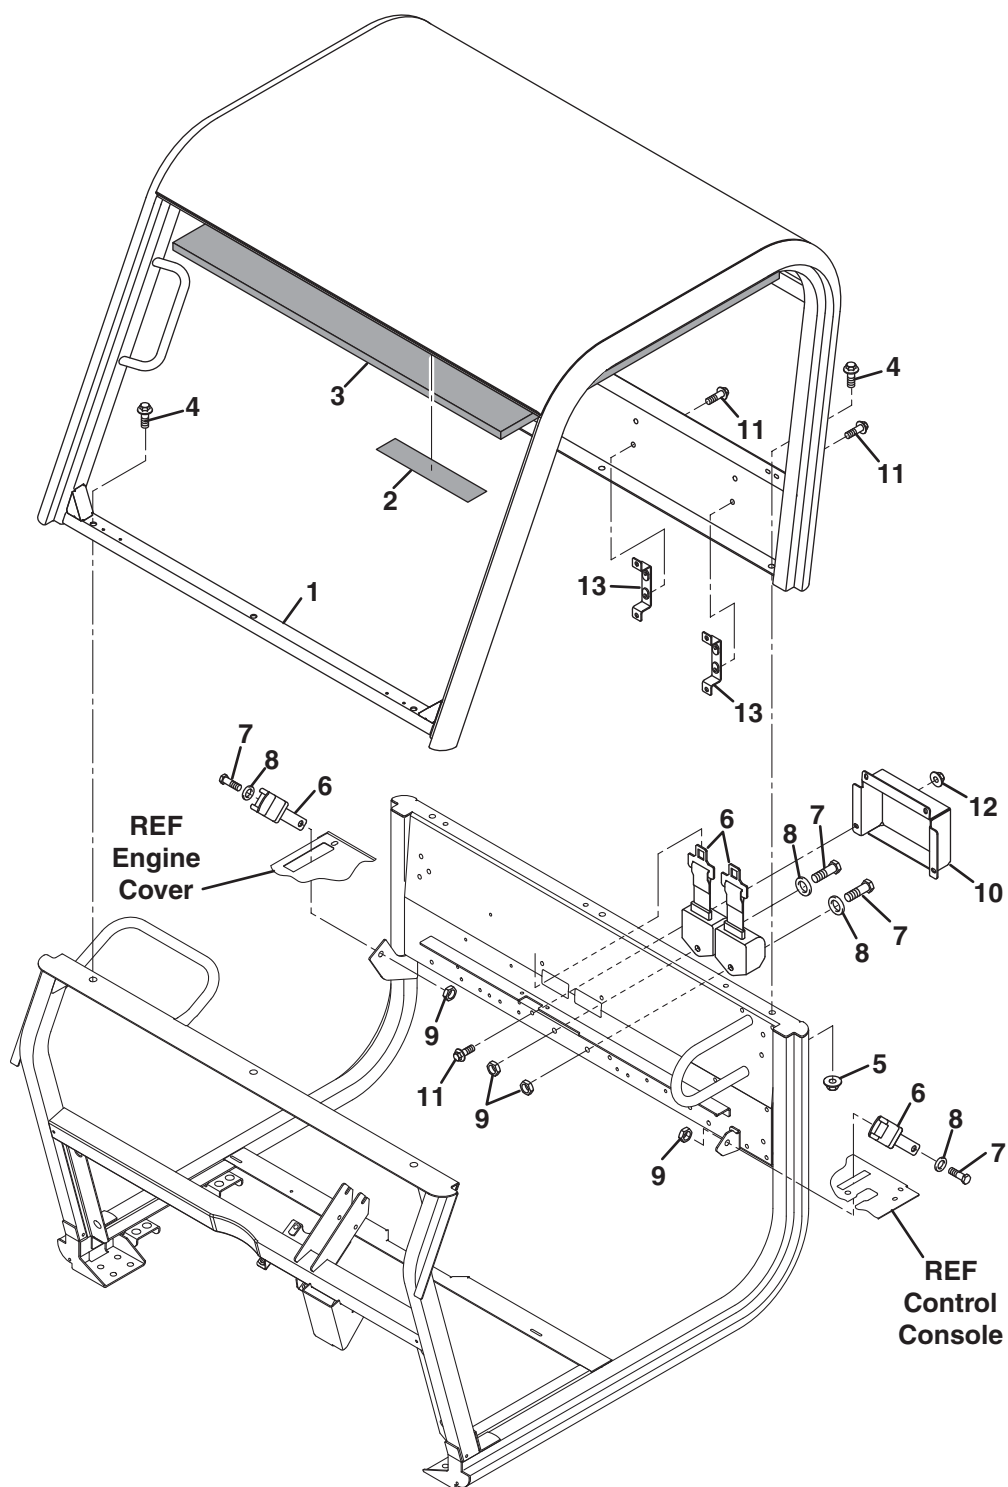


PART NUMBER: 8931-06 Meets SAE: J1040 MAY94
 Only to be used on Goodman truck models
 with matching lower structure
 Manufactured by JACOBSSEN a Tooten Company
 11241 Wilson Blvd., Chantilly, VA 20151
WARNING
 The protection offered by this ROPS will be impaired if it has
 been subjected to any modification or structural damage.
 This ROPS must be replaced after a rollover. Seat belts must
 be worn at all times.
 012200

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4184320	1	Upper ROPS	See 2.1
2	4175340	1	• Decal, Warning and ROPS Cert.	
3	844988	1	Foam, 1/2 in. Perforated ROPS	
4	452411	6	Screw, M12-1.75 x 40 mm Flange	
5	450455	3	Nut, M12-1.75 Hex Flange	
6	4140269	2	Seat Belt Assembly	
7	N/S	2	• Screw, 7/16-20 x 1 in. Hex Head	
8	N/S	2	• Flat Washer, 7/16	
9	N/S	2	• Nut, 7/16-20 Hex	
10	841799	1	Guard, Seat Belt	
11	800930	12	Screw, M8-1.25 x 16 mm Flange	
12	450453	4	Nut, M8-1.25 Hex Flange	
13	893632	4	Support, Backrest	

> Change from previous revision

5.1 Throttle Control

Serial No. All

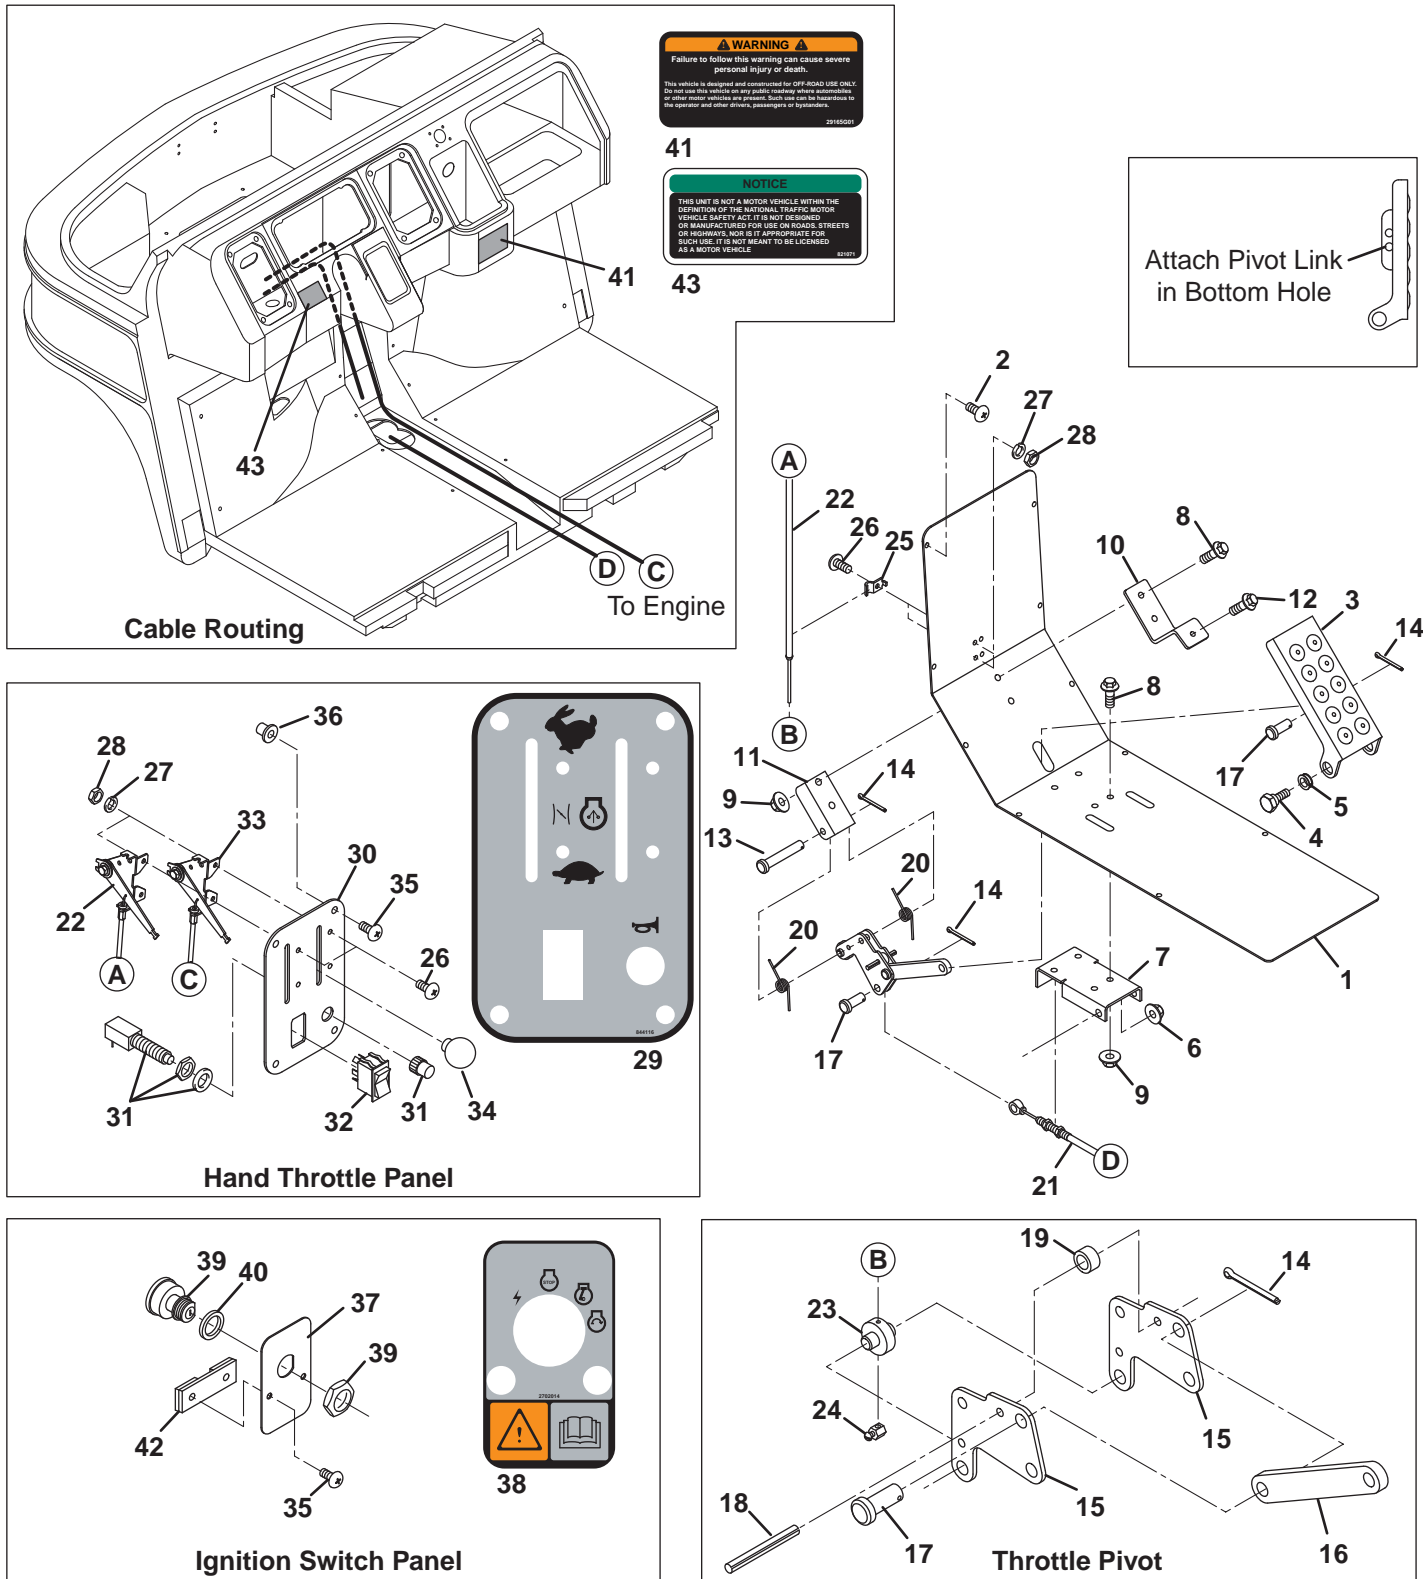


All Views Rotated 90° for Clarity

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	841663	1	Panel, Floor Access	Diesel Vehicles, See 28.1 Gas Vehicles, See 31.1
2	800943	10	Screw, #10-14 x 5/8 in. Self Tapping	
3	894159	1	Pedal, Throttle	
4	524633	2	Bolt, 5/16-18 x 1 in. Shoulder	
5	524643	2	Bearing, Split	
6	548911	2	Nut, 5/16-18 Flange	
7	2703257.7	1	Bracket, Foot Throttle	
8	452378	6	Screw, M6-1 x 20 mm Flange	
9	450452	6	Nut, M6-1 Flange	
10	843997	1	Bracket, Pedal Stop	
11	843562	1	Mount, Channel	
12	452695	1	Screw, M6-1 x 20 mm Self Tapping	
13	830784	1	Clevis Pin, 1/4 x 1-7/8 in.	
14	306328	4	Cotter Pin, 3/32 x 3/4 in.	
15	843563	2	Plate, Pivot	
16	843561	1	Link, Throttle Pivot	
17	806714	3	Clevis Pin, 5/16 x 3/4 in.	
18	844224	2	Roll Pin, 3/16 x 1-3/4 in.	
19	515268	2	Bushing	
20	844223	2	Spring, Torsion	
21	2703683	1	Throttle Cable	
21	2703684	1	Throttle Cable	
22	828049	1	Throttle, Hand	
23	843607	1	Bushing, Throttle Cable	
24	817104	1	Stop, Wire	
25	111898	2	Clamp, Cable	
26	800271	6	Screw, #10-24 x 1/2 in. Pan Head	
27	120052	6	Lockwasher, #10	
28	306531	6	Nut, #10-24 Hex	
29	844116	1	Decal, Speed Control Panel	
30	841264	1	Panel, Speed Control	
31	830366	1	Switch, Horn	
32	843581	1	Switch, Light	
33	844130	1	Cable, Governor Control	
34	827821	2	Knob	
35	800582	6	Screw, 1/4-10 x 3/4 in. Truss Head	
36	2700496	4	Insert, 1/4-20 Threaded	
37	2701850.7	1	Panel, Ignition Switch	
38	2702014	1	Decal, Ignition Switch Panel	
39	837295	1	Ignition Switch	
40	837298	1	Spacer, 3/16 in.	
41	29165G01	1	Decal, Off Road Use	
42	2702012	1	Strap Nut, 1/4-20 x 2 in.	
43	821071	1	Decal, Not Motor Vehicle Notice	

> Change from previous revision


6.1 Control Console

Serial No. All

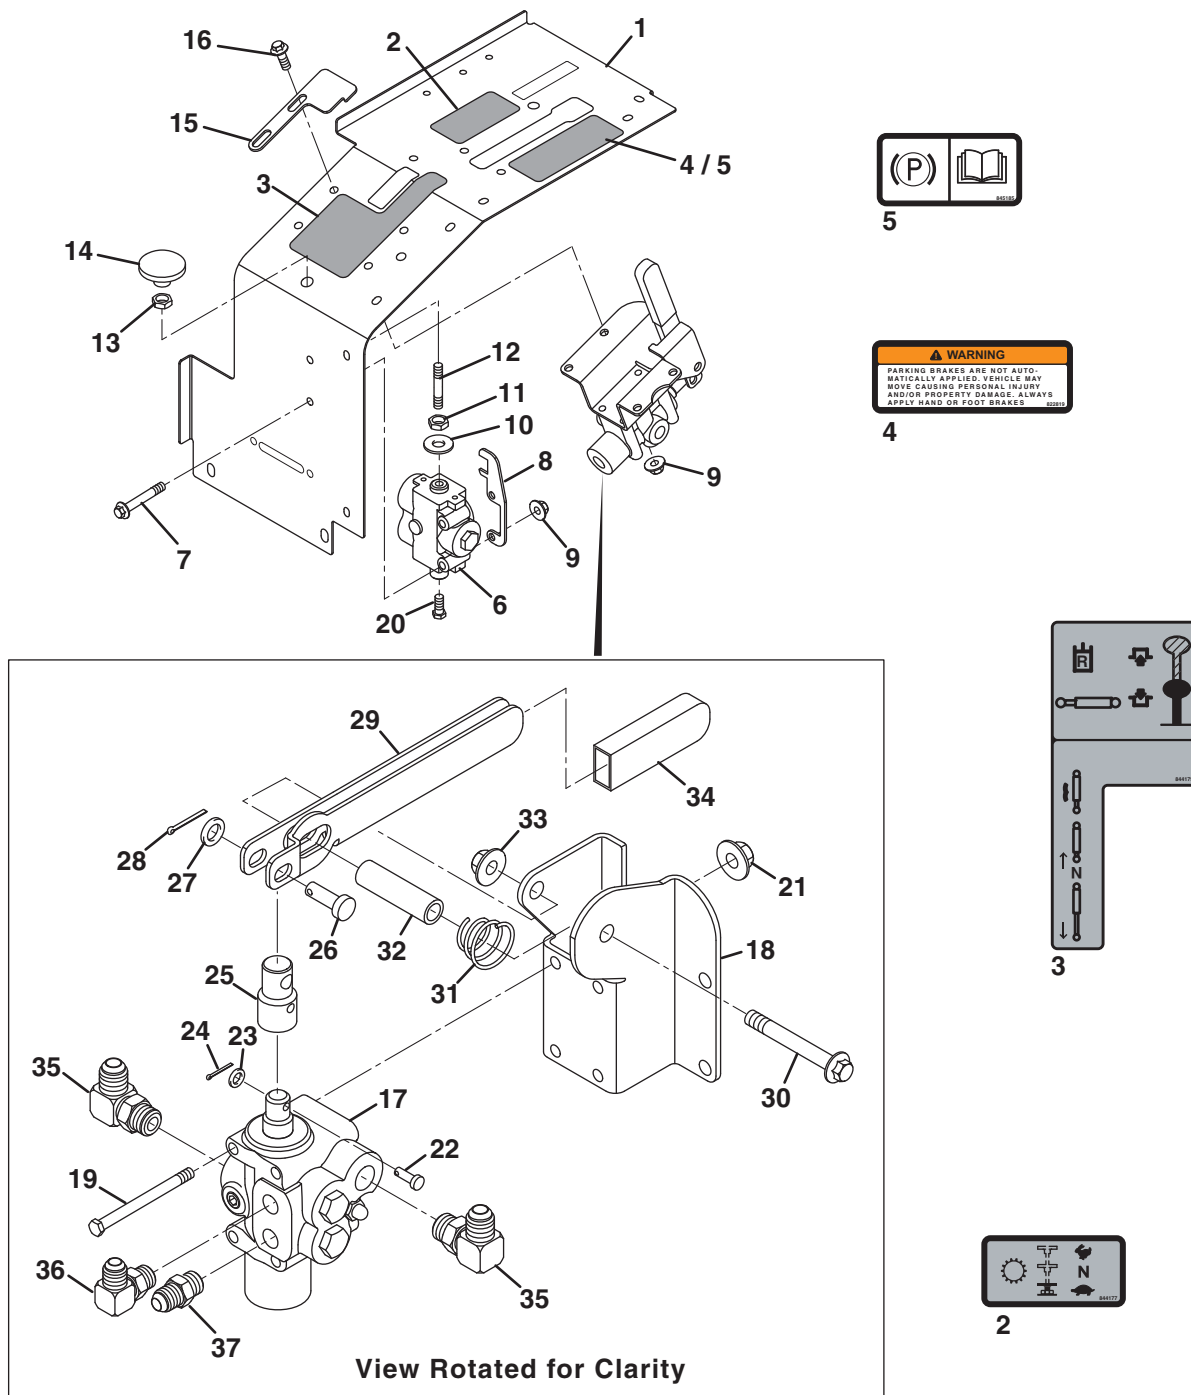

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	2700796	1	Console	Used on all, except 84064
1	2700797	1	Console, EC	Used on 84064 Only
2	844177	1	• Decal, Aux. Transmission	
3	844179	1	• Decal, Hydraulic Controls	
4	822819	1	• Decal, Parking Brake	Used on all, except 84064
5	845185	1	• Decal, EC Parking Brake	Used on 84064 Only
6	894696	1	Valve, Hydraulic Selector	
7	452392	2	Screw, M8-1.25 x 50 mm Flange	
8	832798	1	Plate, Stop	
9	450453	6	Nut, M8-1.25 Hex Flange	
10	822419	1	Washer, 1-5/8 in. Diameter	
11	443810	1	Nut, 3/8-16 Hex Jam	
12	844582	1	Rod, Extension Handle	
13	306388	1	Nut, 3/8-24 Hex Jam	
14	548171	1	Knob	
15	844051	1	Plate, Float Latch	
16	800930	4	Screw, M8-1.25 x 16 mm Flange	
17	886270	1	Valve, Hydraulic Lift Control	Discard Decal included with Valve
18	843355	1	Mount, Lift Control Valve	
19	316907	4	Screw, 1/4-20 x 2-3/4 in. Hex Head	
20	306834	1	Screw, 3/8-16 x 3/4 in. Hex Head	
21	548910	4	Nut, 1/4-20 Hex Flange	
22	823225	1	Clevis Pin, 3/16 x 1 in.	
23	308089	1	Flat Washer, #10	
24	306463	1	Cotter Pin, 1/16 x 1/2 in.	
25	839213	1	Connector, Valve	
26	814079	1	Clevis Pin, 5/16 x 1-1/8 in.	
27	103867	1	Flat Washer, 5/16	
28	306328	1	Cotter Pin, 3/32 x 3/4 in.	
29	843758	1	Handle, Lift Control Valve	
30	452404	1	Screw, M10-1.5 x 70 mm Flange	
31	825538	1	Spring, Compression	
32	843759	1	Bushing, Lift Control Valve	
33	450454	1	Nut, M10-1.5 Hex Flange	
34	521144	1	Cover, Handle	
35	826558	2	Adapter, 90° Fitting	ORB to JIC 37° Flare
36	828057	1	Adapter, 90° Fitting	ORB to JIC 37° Flare
37	823118	1	Adapter, Straight Fitting	ORB to JIC 37° Flare

> Change from previous revision


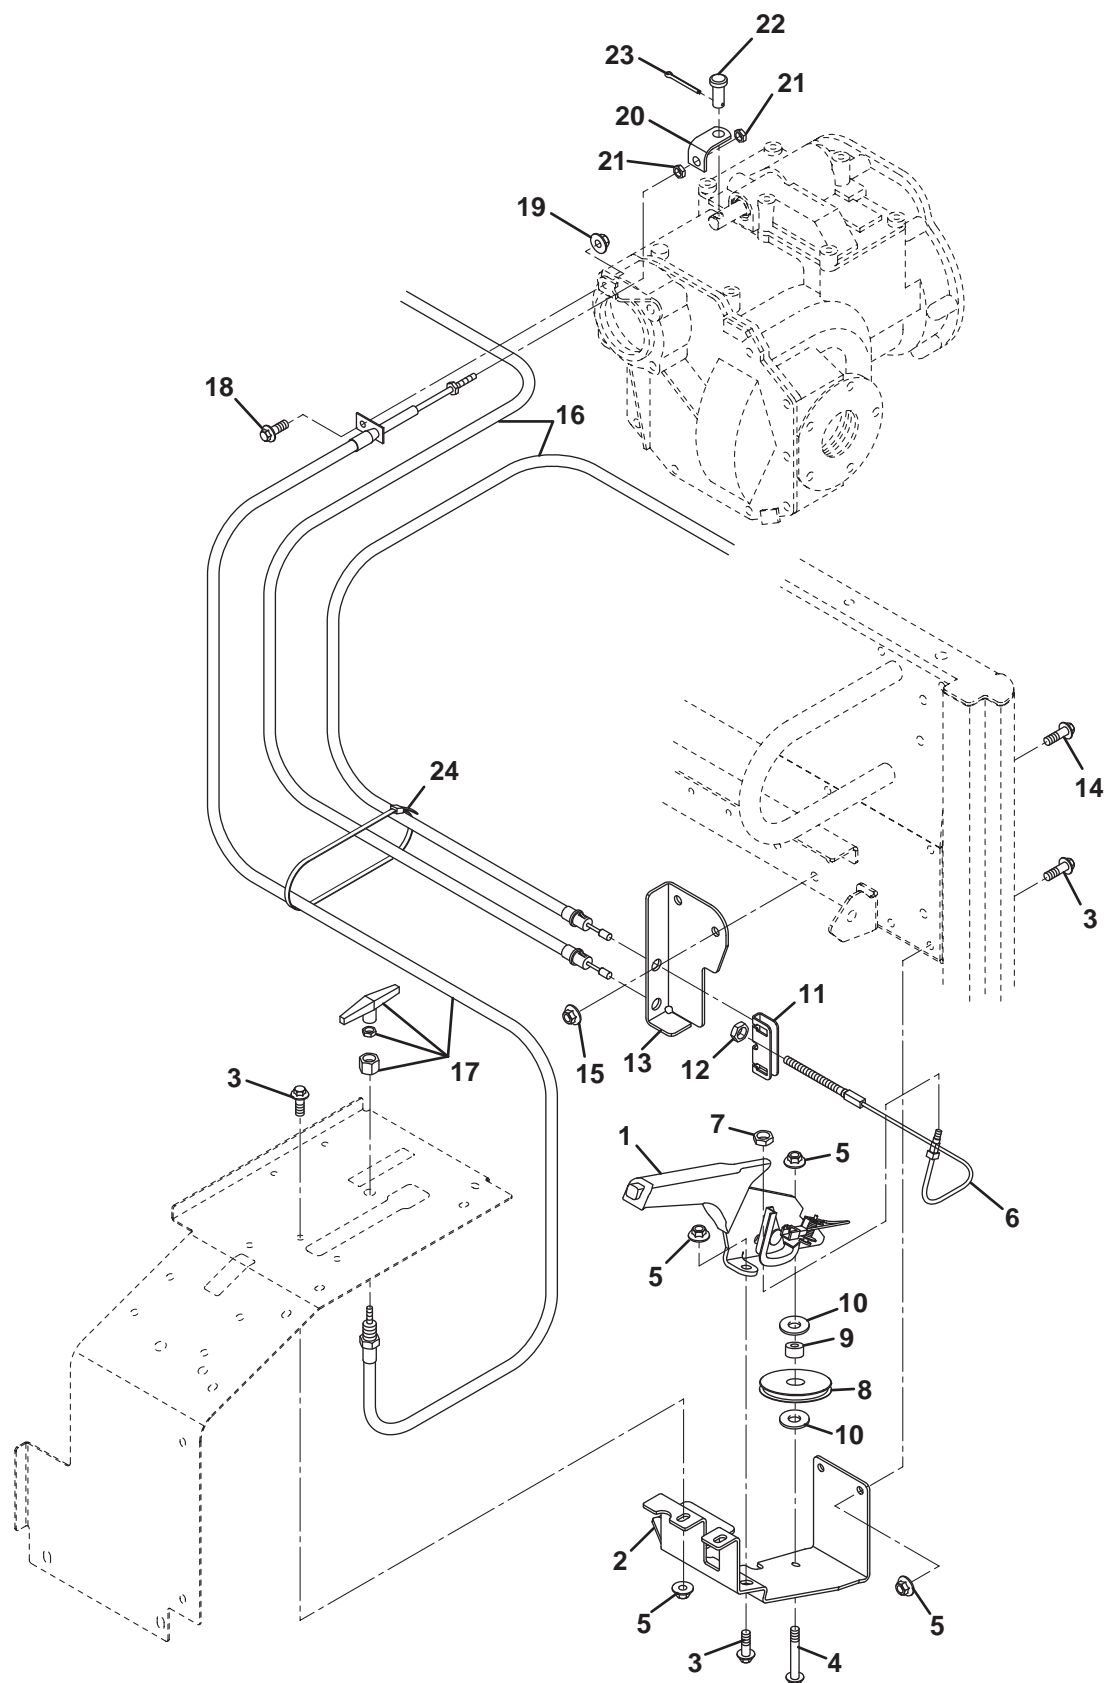


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4202860	1	Lever, Parking Brake	See 44.1 Apply Locktite® 242
2	845134	1	Bracket, Parking Brake Lever	
3	452388	5	Screw, M8-1.25 x 20 mm Flange	
4	452391	1	Screw, M8-1.25 x 40 mm Flange	
5	450453	6	Nut, M8-1.25 Flange	
6	845133	1	Cable, Parking Brake	
7	450377	1	Nut, M6-1 Staytite	
8	827182	1	Pulley, 3 in. Cable	
9	843359	1	Bushing, Pulley	
10	809152	2	Flat Washer, 5/16 x 1-3/16 in.	
11	843356	1	Equalizer, Parking Brake	
12	800446	1	Locknut, 5/16-24	
13	843158	1	Bracket, Parking Brake Cables	
14	452398	2	Screw, M10-1.5 x 20 mm Flange	
15	450454	2	Nut, M10-1.5 Flange	
16	REF	2	Parking Brake Cables	
17	893067	1	Cable, High - Low Speed Control	
18	452378	1	Screw, M6-1 x 12 mm Flange	
19	450452	1	Nut, M6-1 Flange	
20	837043	1	Bracket, High - Low Cable	
21	2702244	2	Nut, #10-32 Hex	
22	806703	1	Clevis Pin, 5/16 x 31/32 in.	
23	306328	1	Cotter Pin, 9/32 x 3/4 in.	
24	320107	1	Cable Tie, 7-1/2 in.	

> *Change from previous revision*

8.1 Brake Pedal

Serial No. All

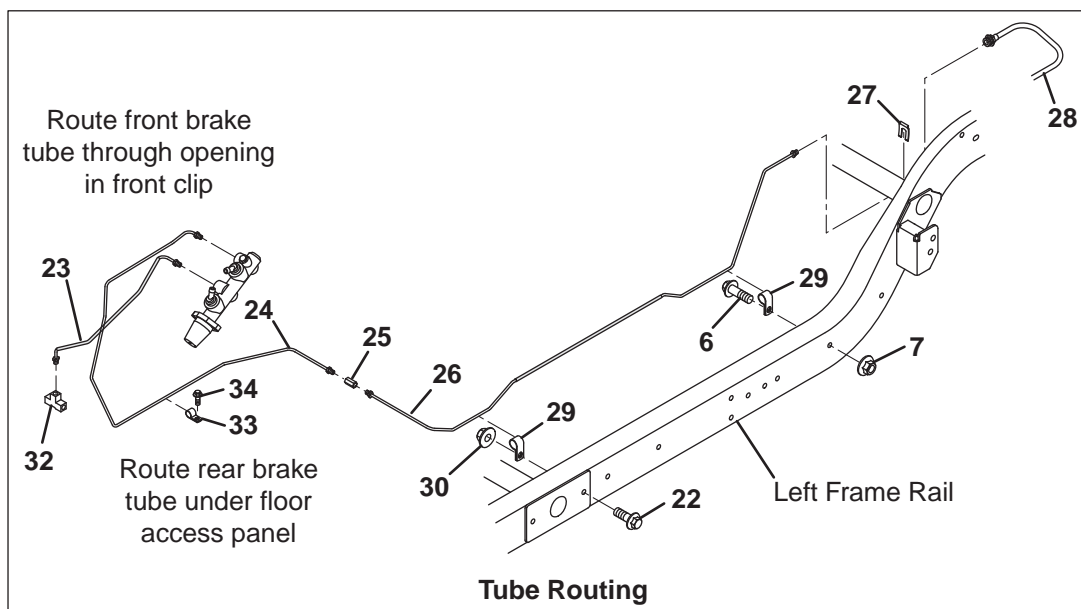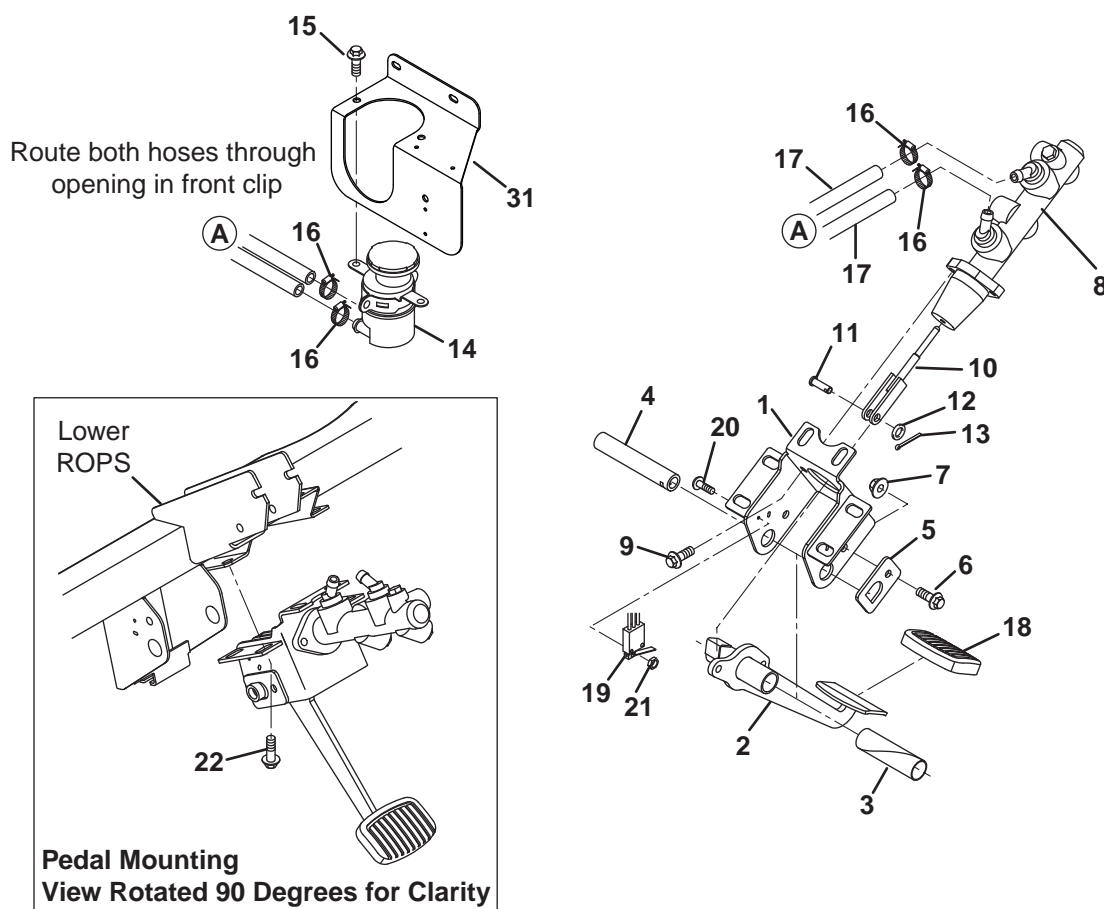

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	2701737.7	1	Bracket, Master Cylinder	
2	892921	1	Pedal, Brake	
3	840726	1	Bearing, Brake Pivot	
4	840725	1	Tube, Brake Pivot	
5	842935	1	Tab, Locking	
6	452388	2	Screw, M8-1.25 x 20 mm Flange	
7	450453	2	Nut, M8-1.25 Flange	
8	895113	1	Master Cylinder	
9	800930	2	Screw, M8-1.25 x 16 mm Flange	
10	894167	1	Rod, Brake	
11	806714	1	Clevis Pin, 5/16 x 15/16 in.	
12	103867	1	Flat Washer, 5/16	
13	306328	1	Cotter Pin, 3/32 x 3/4 in.	
14	894456	1	Reservoir, Brake Fluid	
	894456	1	• Reservoir	
	826006	1	• Electrical Connector, 2 Wire	
	825886	2	• Terminal, 1/4 L Male	
15	800934	2	Screw, M6-1 x 16 mm Flange	
16	832033	4	Clamp, Hose	
17	4194500	2	Hose, 5/16 x 18 in. Brake	
18	810152	1	Pad, Pedal	
19	894308	1	Switch, Brake Micro	
20	450410	2	Screw, M3-0.5 x 20 mm Pan Head	
21	452424	2	Nut, M3-0.5 Hex	
22	452398	7	Screw, M10-1.5 x 20 mm Flange	
23	843021	1	Tube, Front Brake	
24	4194421	1	Tube, Rear Brake	
25	842103	1	Union, M10-1	
26	4194420	1	Tube, Rear Brake Line	
27	809137	1	Clip, Brake Line	
28	REF	1	Rear Brake Hose	
29	810435	2	Clamp, Brake Tube	
30	450454	1	Nut, M10-1.5 Flange	
31	REF	1	Bracket, Reservoir / Horn	
32	REF	1	Tee, M10-1.0 Flare Union	
33	812445	1	Clamp, Tube	
34	800943	1	Screw, #10-14 x 5/8 in. Self Tapping	

See 44.1

See 42.1 and 43.1





See 19.1

> Change from previous revision

TURF TRUCKSTER

9.1 Clutch Pedal Linkage

Serial No. 84063 All
Serial No. 84064 All
Serial No. 84067 All
Serial No. 84069 All

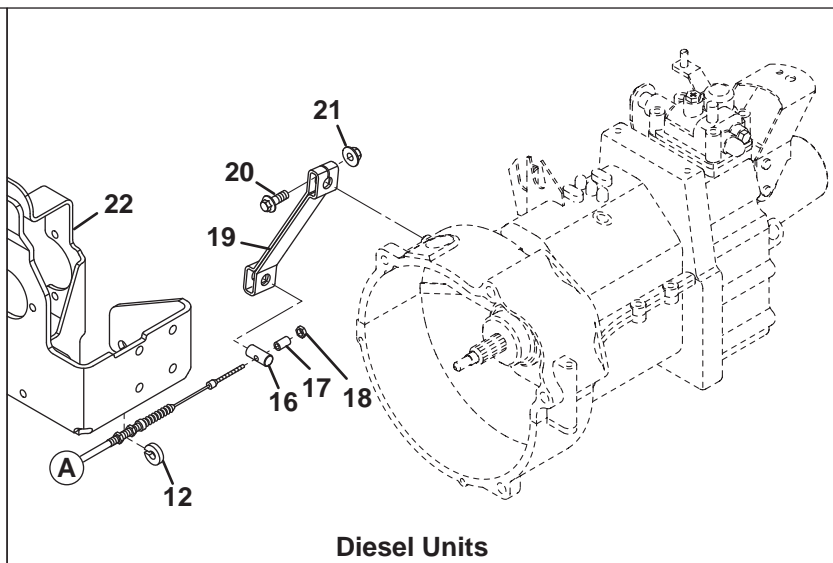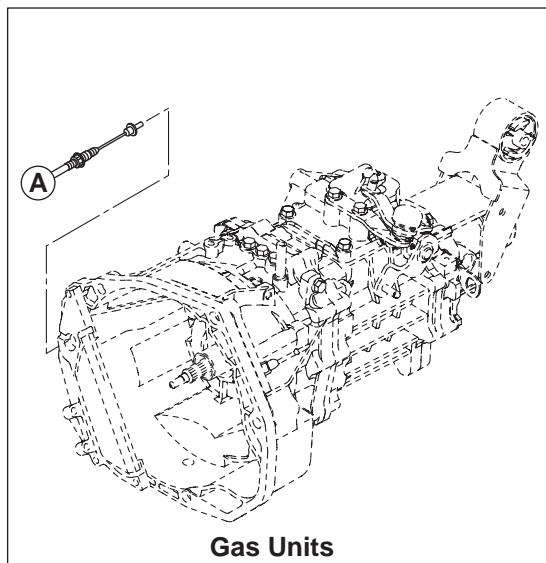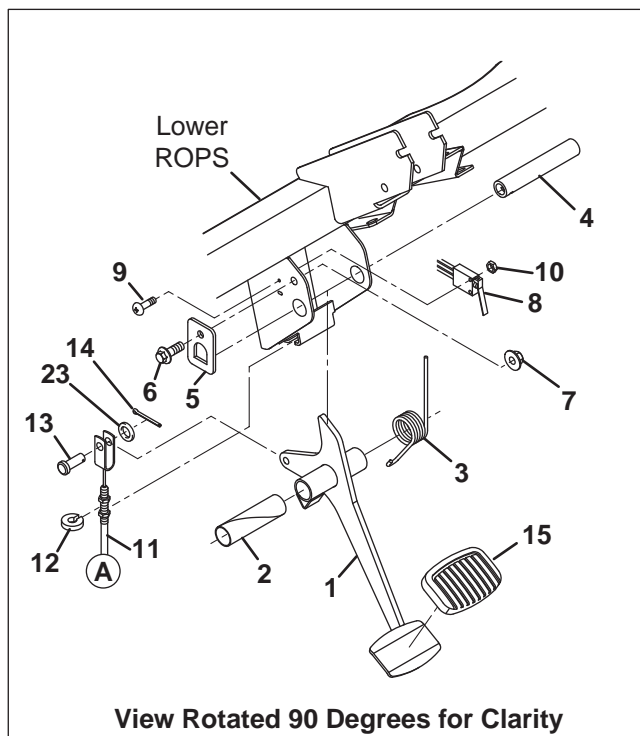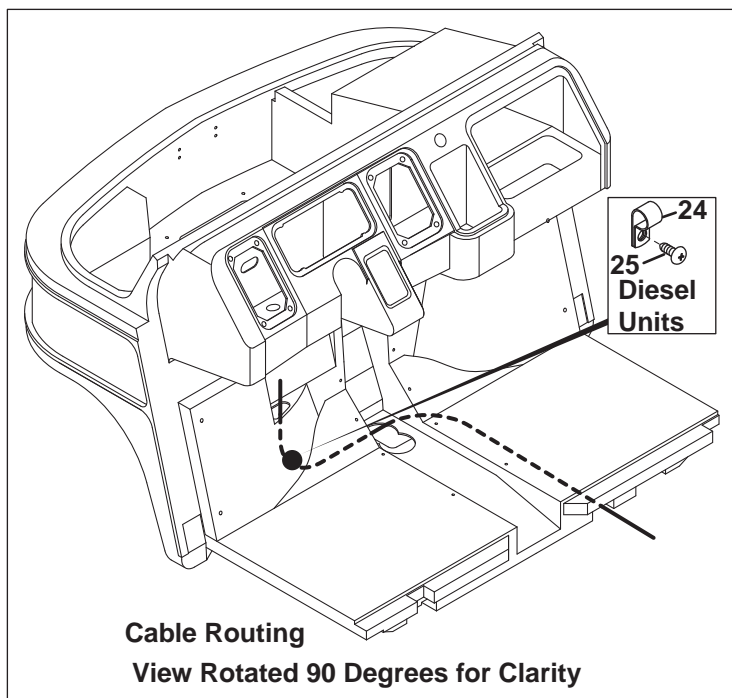




Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	892933	1	Pedal, Clutch	
2	840726	1	Bearing, Brake Pivot	
3	844611	1	Spring, Torsion	
4	840725	1	Tube, Pedal Pivot	
5	842935	1	Tab, Locking	
6	452388	1	Screw, M8-1.25 x 20 mm Flange	
7	450453	1	Nut, M8-1.25 Flange	
8	894308	1	Switch, Clutch Micro	
9	450510	2	Screw, M3-0.5 x 20 mm Pan Head	
10	452424	2	Nut, M3-0.5 Flange	
11	4192281	1	Cable, Clutch	Diesel Units
11	4154481	1	Cable, Clutch	Gas Units
12	844202	2	Washer, Slotted	
13	806703	1	Clevis Pin, 5/16 x 31/32 in.	
14	306328	1	Cotter Pin, 3/32 x 3/4 in.	
15	810152	1	Pad, Pedal	
16	842010	1	Bushing, Clutch Release Arm	Diesel Units Only
17	833273	1	Bushing	Diesel Units Only
18	450377	1	Nut, M6-1 Nylock	Diesel Units Only
19	23266-85002	1	Arm, Clutch Release	Diesel Units Only
20	01550-08353	1	Screw	Diesel Units Only
21	2703002	1	Nut	Diesel Units Only
22	REF	1	Rear Alternator Bracket	Diesel Units Only, See 26.1
23	103867	1	Flat Washer	
24	2700757	1	Clamp, 1-7/16 I.D.	Diesel Units Only
25	452695	1	Screw, M6-1 x 20 mm Taptite	Diesel Units Only

> Change from previous revision

10.1 Manual Transmission Shifter Linkage

Diesel Units

Serial No. 84063 All
Serial No. 84064 All

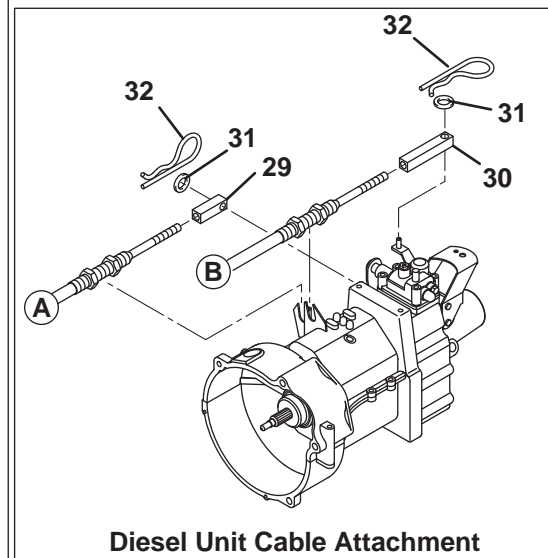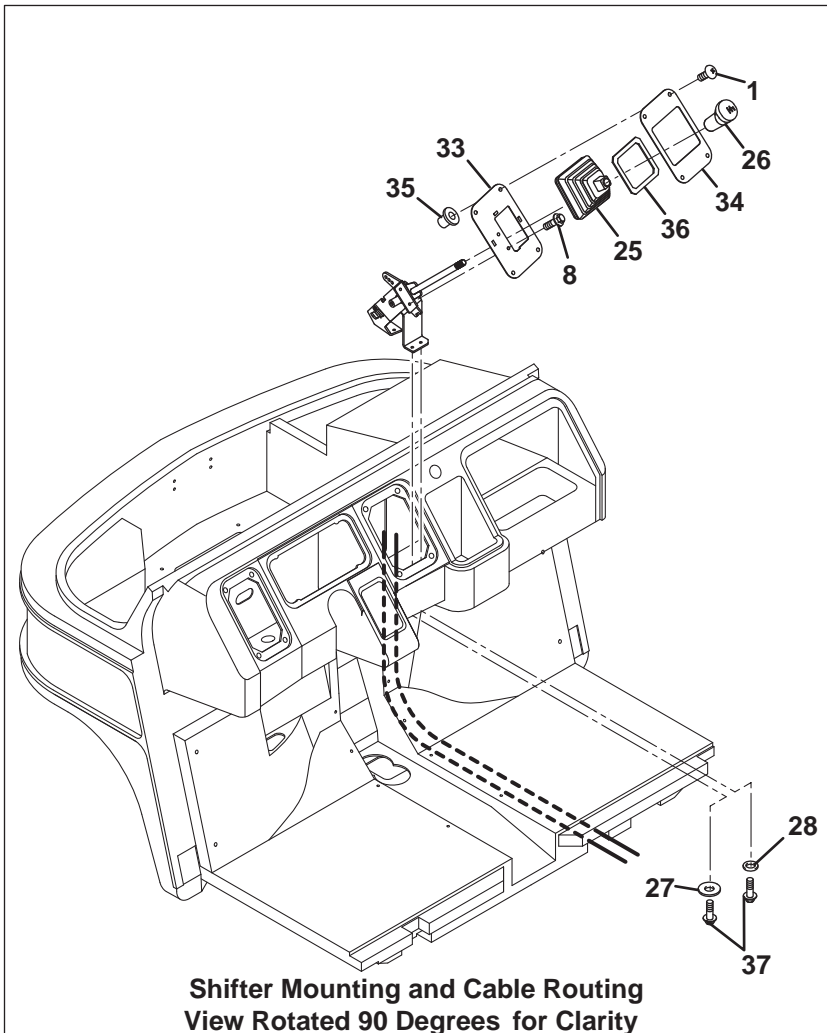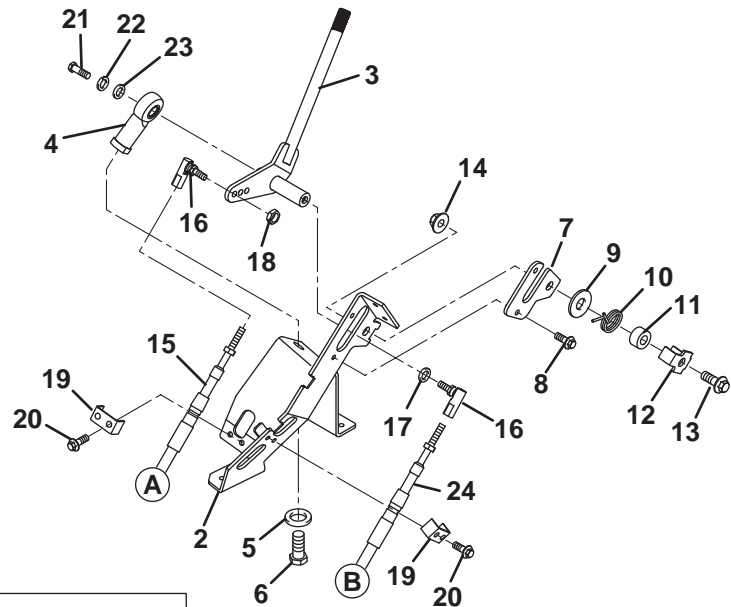




Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	800582	4	Screw, 1/4-20 x 3/4 in. Truss Head	Diesel Units
2	2703956.7	1	Mount, Shifter	
3	2703953	1	Selector, Gear	
4	842773	1	Rod End, 1/2-20	
5	308091	1	Flat Washer, 1/2	
6	311763	1	Screw, 1/2-20 x 2-1/4 in. Hex Head	
7	843679	1	Plate, Wear	
8	452692	4	Screw, M6-1 x 12 mm Self Tap	
9	604174	1	Flat Washer, 3/8 in.	
10	843614	1	Spring, Torsion	
11	843685	1	Bushing, Spring	
12	2703951	1	Tab, Locating	
13	452401	1	Screw, M10-1.5 x 40 mm Flange	
14	450454	1	Nut, M10-1.5 Flange	
15	894179	1	Cable, Shifter	Diesel Units
16	842774	2	Ball Joint, 1/4-28	
17	816307	1	Flat Washer, 1/4	
18	306397	1	Nut, 1/4-28 Hex	
19	843724	2	Clamp, Cable	
20	452695	4	Screw, M6-1 x 20 mm Self Tap	
21	300977	1	Screw, 1/4-28 x 5/8 in. Hex Head	
22	306396	2	Lockwasher, 1/4	
23	308090	1	Flat Washer, 1/4	
24	894179	1	Cable, Shifter	
25	2702696	1	Boot, Control Lever	
26	2702695	1	Knob, Shifter	
27	548175	3	Flat Washer, 1/4 x 1-1/4 in.	
28	308090	1	Flat Washer, 1/4	
29	843778	1	Connector, Shift Cable	
30	2703707	1	Connector, Shift Cable	
31	103867	2	Flat Washer, 5/16	
32	821164	2	Hair Pin	
33	2703964.7	1	Panel, Right Side Dash	
34	843792	1	Plate, Shifter Boot	
35	2700496	4	Insert, 1/4-20 Threaded	
36	2703931.7	1	Ring, Boot Hold Down	
37	452695	4	Screw, M6-1 x 20 mm Self Tap	

> Change from previous revision

11.1 Manual Transmission Shifter Linkage

Gas Units

Serial No. 84067 All
Serial No. 84069 All

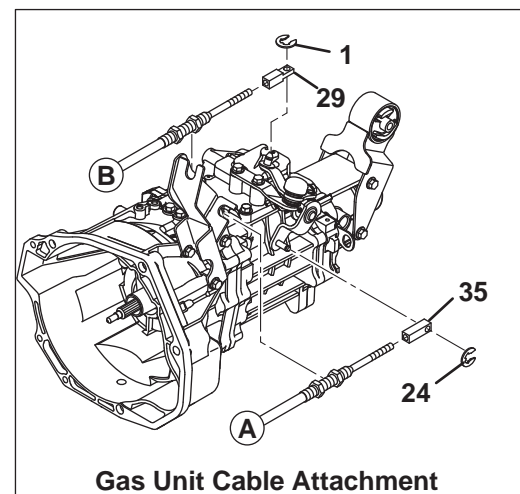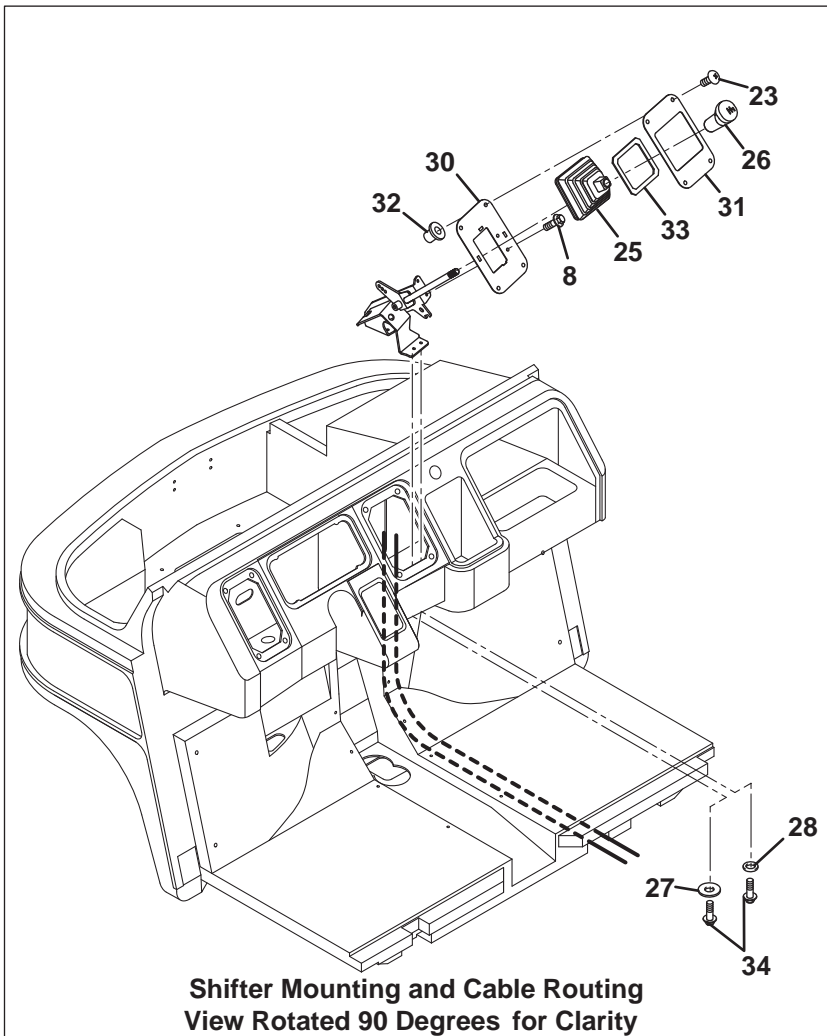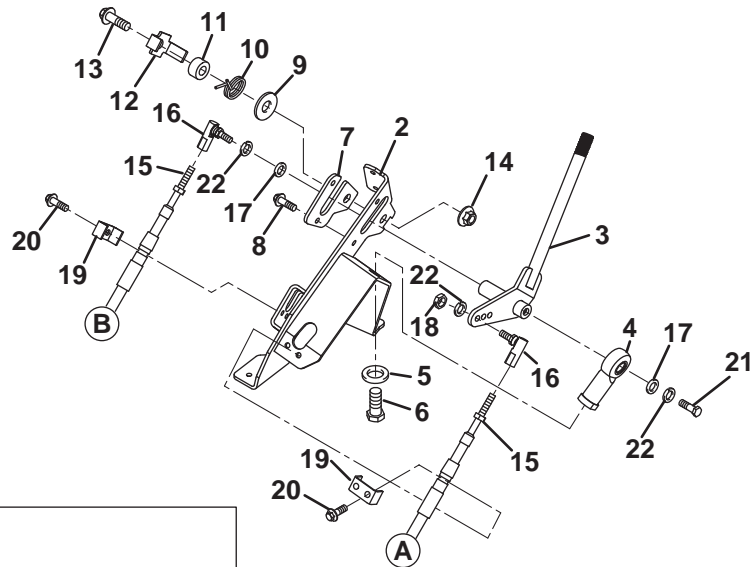


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4146819	1	Retaining Ring M6	
2	4142630	1	Mount, Shifter	
3	4142627	1	Selector, Gear	
4	842773	1	Rod End, 1/2-20	
5	308091	1	Flat Washer, 1/2	
6	311763	1	Screw, 1/2-20 x 2-1/4" Hex Head	
7	843679	1	Plate, Wear	
8	452692	4	Screw, M6-1 x 12 mm Self Tap	
9	604174	1	Flat Washer, 3/8"	
10	843614	1	Spring, Torsion	
11	843685	1	Bushing, Spring	
12	2703951	1	Tab, Locating	
13	452401	1	Screw, M10-1.5 x 40 mm Flange	
14	450454	1	Nut, M10-1.5 Flange	
15	2701273	2	Cable, Shifter	
16	842774	2	Ball Joint, 1/4-28	
17	816307	2	Flat Washer, 1/4	
18	306397	1	Nut, 1/4-28 Hex	
19	843724	2	Clamp, Cable	
20	452695	4	Screw, M6-1 x 20 mm Self Tap	
21	300977	1	Screw, 1/4-28 x 5/8" Hex Head	
22	306396	3	Lockwasher, 1/4	
23	800582	4	Screw, 1/4-20 x 3/4" Truss Head	
24	4146818	1	Retaining Ring M5	
25	2702696	1	Boot, Control Lever	
26	4140431	1	Knob, Shifter	
27	548175	3	Flat Washer, 1/4 x 1-1/4"	
28	308090	1	Flat Washer, 1/4	
29	4142796	1	Connector, Shift Cable	
30	2703964.7	1	Panel, Right Side Dash	
31	843792	1	Plate, Shifter Boot	
32	2700496	4	Insert, 1/4-20 Threaded	
33	2703931.7	1	Ring, Boot Hold Down	
34	452695	4	Screw, M6-1 x 20 mm Self Tap	
35	2701371	1	Connector, Shift Cable	

> Change from previous revision

12.1 Automatic Transmission Shifter


Serial No. 84068 All

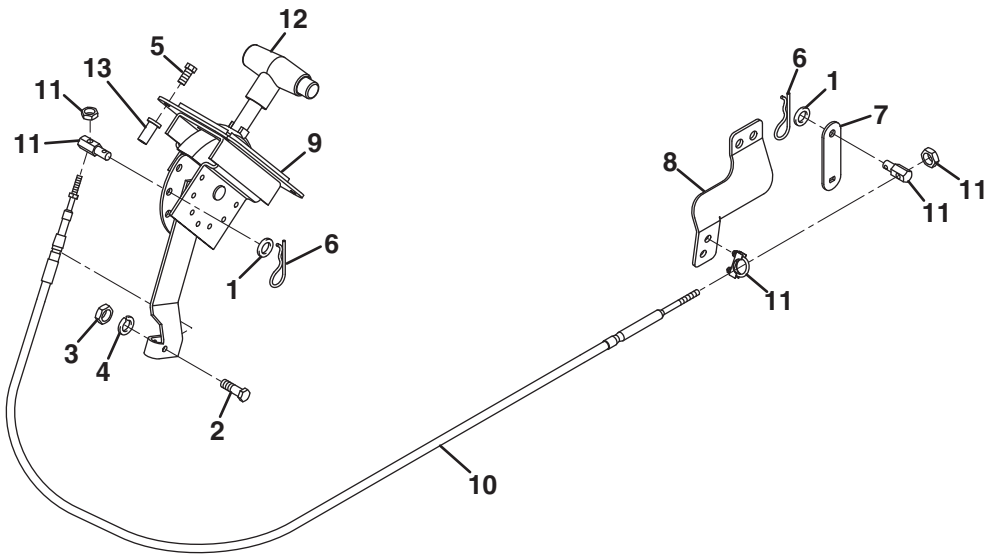

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	103867	2	Flat Washer, 5/16	
2	302030	1	Screw, 1/4-20 x 1-1/4 in.	
3	306375	1	Nut, 1/4-20 Hex	
4	306396	1	Lockwasher, 1/4	
5	800582	4	Screw, 1/4-20 x 3/4 in.	
6	821164	2	Hair Pin, 1/4 x 1-1/8 in.	
7	842740	1	Lever, Shifter	
8	845345.7	1	Bracket, Shifter Cable Mount	
9	894584	1	Shifter with Cable	
10	894508	1	• Cable, Shifter	
11	892164	1	• Kit, Cable Mounting Hardware	
12	869154	1	• Shifter Handle	
13	2700496	4	Insert, 1/4-20	


> Change from previous revision

13.1 Automatic Transmission Oil Cooler

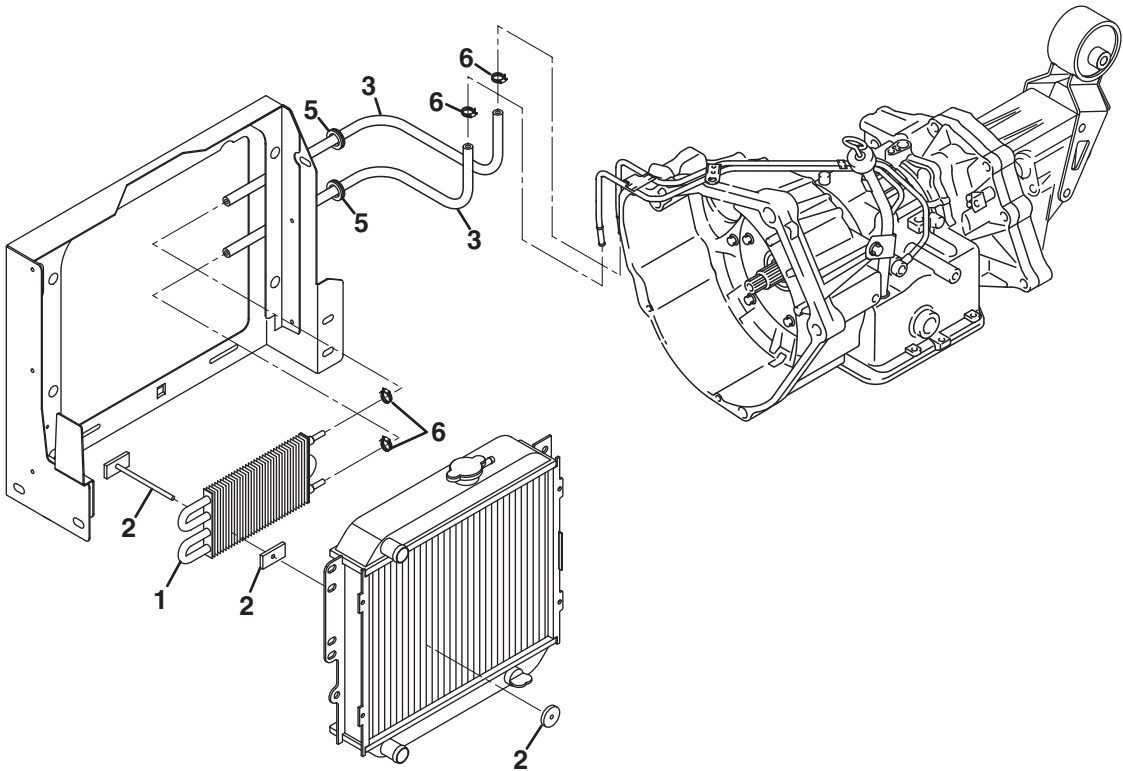


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	838340	1	Oil Cooler	Not Shown
2	800789	1	Kit, Oil Cooler Mounting	
3	826590	AR	Hose, 5/16 I.D.	
4	821893	AR	Trim, Push On	
5	809231	2	Grommet	
6	825624	4	Hose Clamp	

> Change from previous revision

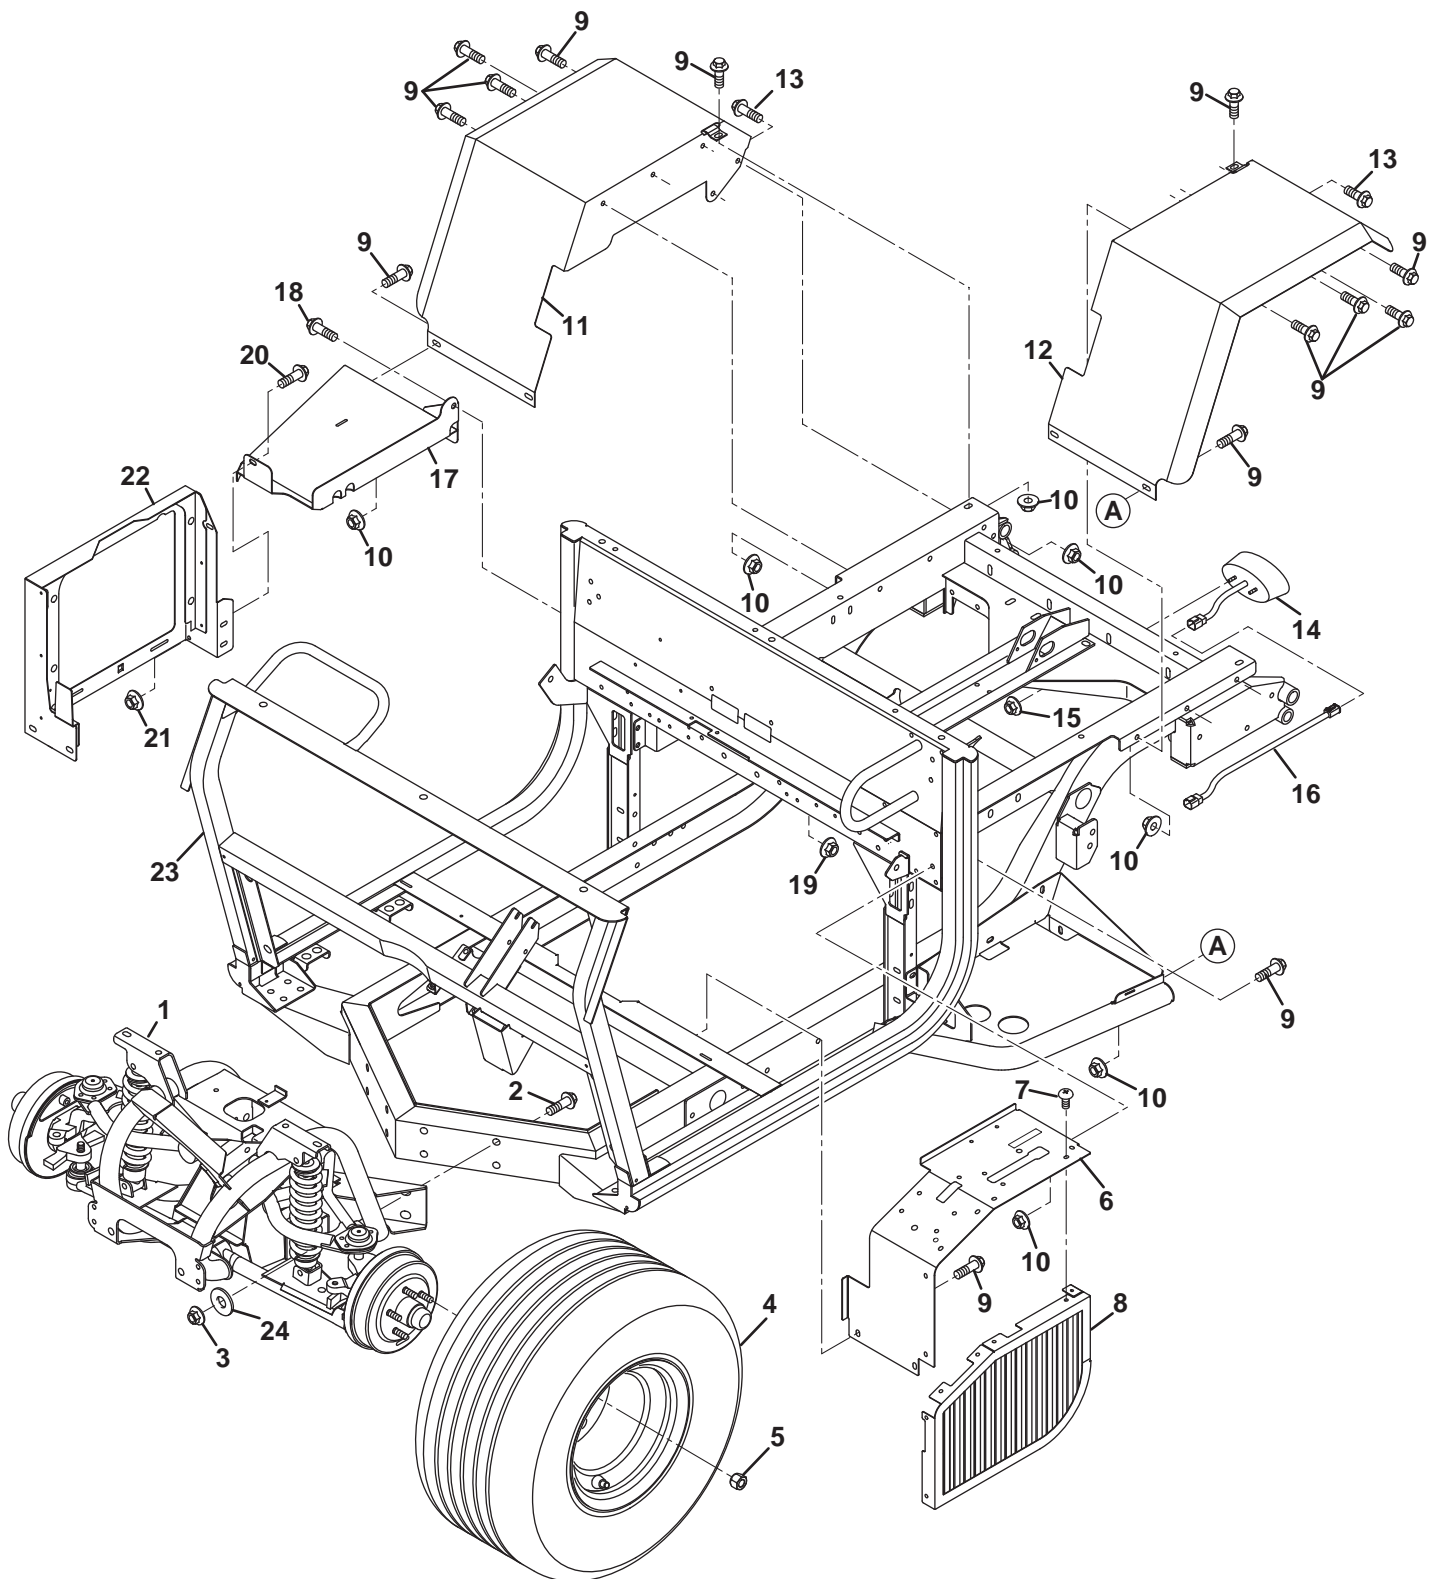

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Front Suspension	See 17.1, 18.1 and 19.1
2	452415	8	Screw, M12-1.75 x 80 mm Flange	
3	450455	8	Nut, M12-1.75 Hex Flange	
4	4243009	2	Wheel and Tire, Straight Rib	
	4243005	1	• Rim, 10.00 x 7 in. Five Bolt	3.94 in. Bolt Circle
	4243004	1	• Tire, 20 x 10.00 - 10 Straight Rib	
	360111	1	• Valve Stem	
5	800909	10	Nut, M12-1.5 Wheel Lug	See 6.1
6	REF	1	Panel, Console	
7	800026	7	Screw, 1/4-20 Truss Head	
8	4179842	1	Cover, Left Side Engine	
9	452398	18	Screw, M10-1.5 x 20 mm Flange	Includes License Illuminator Lens
10	450454	18	Nut, M10-1.5 Hex Flange	
11	893488	1	Fender, Right Side	
12	893487	1	Fender, Left Side	
13	452399	2	Screw, M10-1.5 x 25 mm Flange	
14	893602	1	Stop and Tail Light	
	822049	1	• Bulb, No. 1157	
	312288	2	• Lens, Screw	
	829099	1	• Lens and Gasket	
15	548910	2	Nut, 1/4-20 Serrated Flange	
16	894313	1	Harness, Taillight Wire	
17	4117153.7	1	Support, Fuel Tank	
18	800177	1	Screw, 5/16-18 x 3/4 in. Truss	See 15.1
19	548911	1	Nut, 5/16-18 Hex Flange	
20	800930	1	Screw, M8-1.25 x 16 mm Flange	
21	450453	1	Nut, M8-1.25 Hex Flange	
22	REF	1	Radiator Support	
23	REF	1	Frame, Lower ROPS and Platform	
24	809180	8	Washer, 1/2 x 1-1/8 in.	

> Change from previous revision

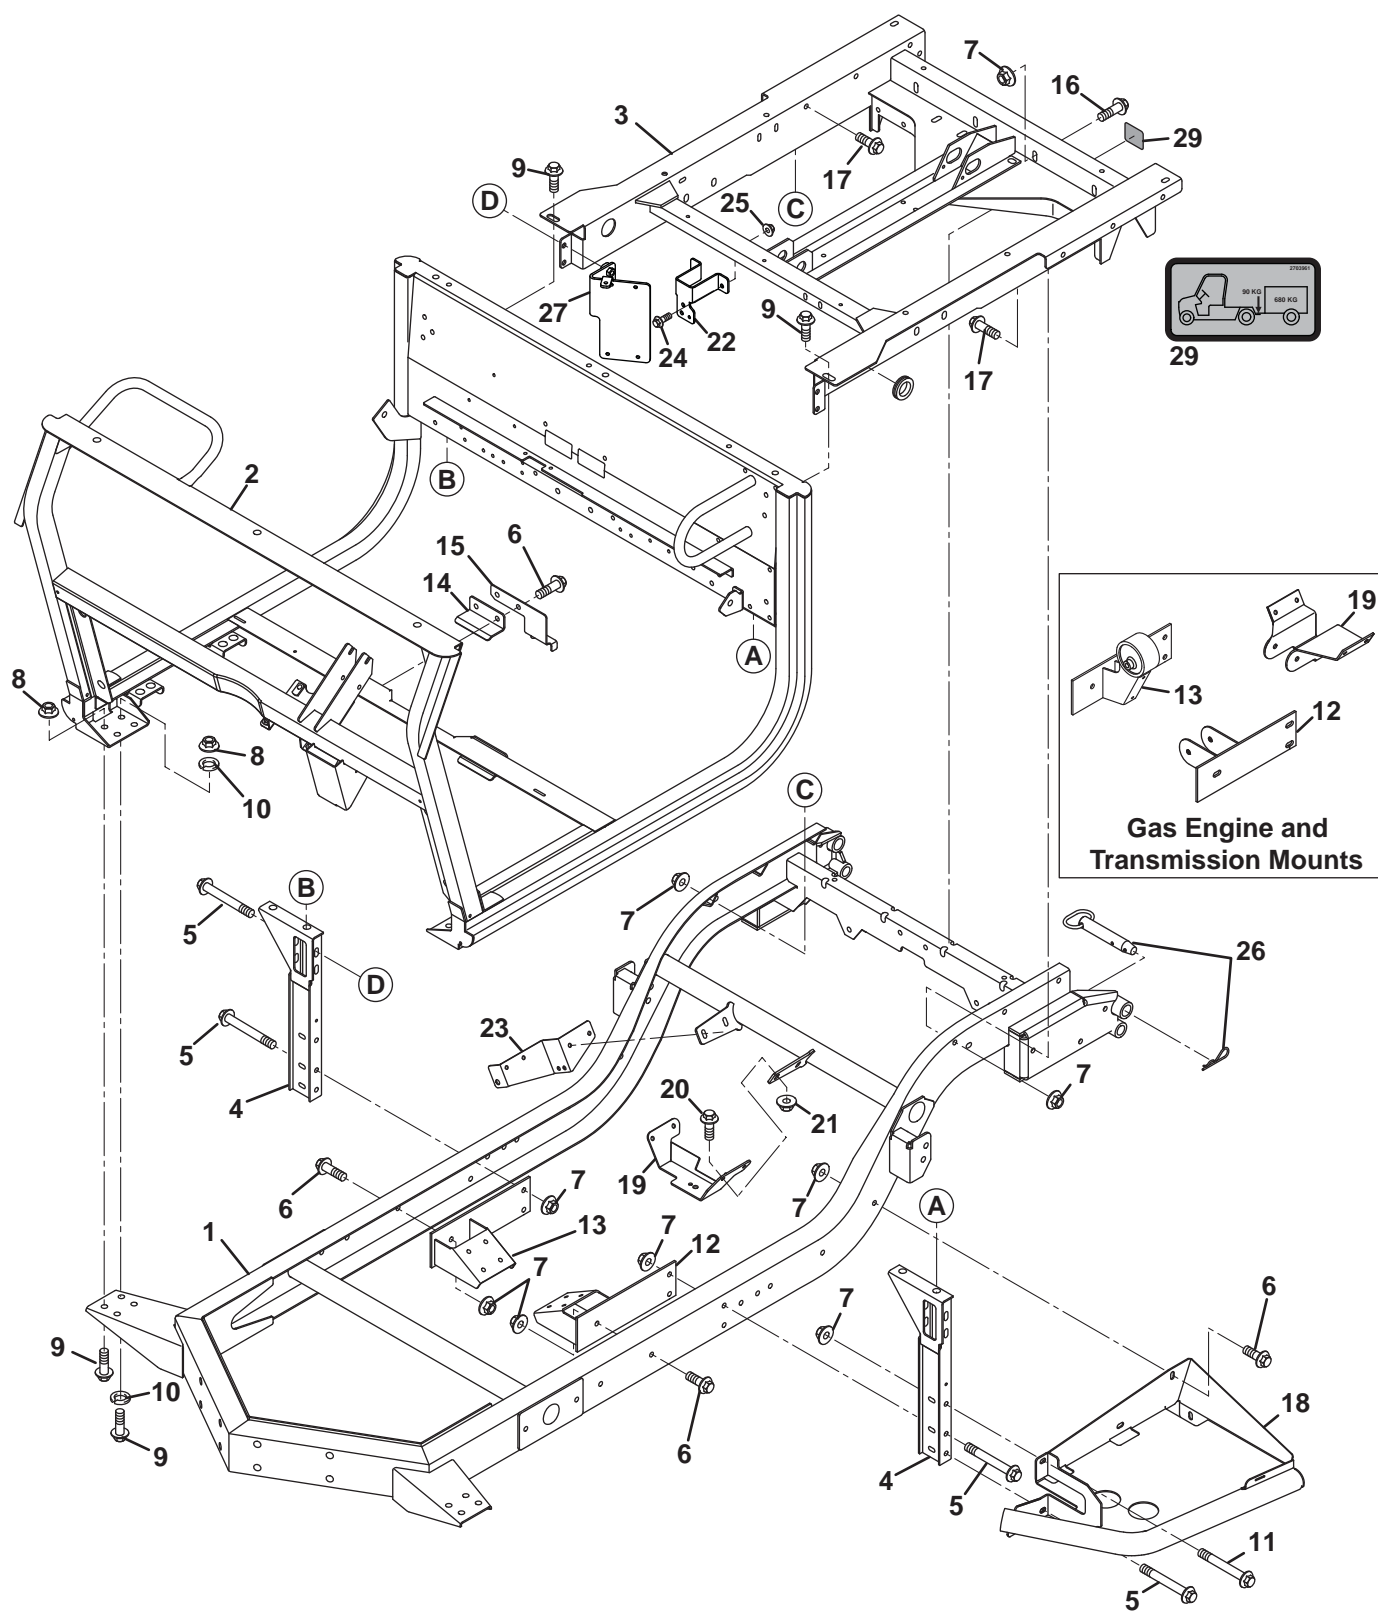


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	N/S	1	Frame, Main 4 Wheel	Standard Frame, Painted Black
1	N/S	1	Frame, Galvanized Main 4 Wheel	Optional Galvanized Frame
2	893145.7	1	ROPS, Lower	
3	893199.7	1	Platform, Truckster	Standard Platform, Painted Black
3	893199G02	1	Platform, Galvanized Truckster	Optional Galvanized Platform
4	893525G01	2	Support, Platform	
5	452406	6	Screw, M10-1.5 x 90 mm Flange	Grade 8.8
6	452398	5	Screw, M10-1.5 x 20 mm Flange	Grade 8.8
7	450454	20	Nut, M10-1.5 Hex Flange	
8	450455	8	Nut, M12-1.75 Hex Flange	
9	452410	12	Screw, M12-1.75 x 30 mm Flange	
10	309067	2	Lockwasher, 1/2 Shakeproof	
11	452405	3	Screw, M10-1.5 x 80 mm Flange	
12	894581	1	Mount, Left Side Diesel Engine	Diesel Units
12	894998.7	1	Mount, Left Side Gas Engine	Gas Units
13	894582	1	Mount, Right Side Diesel Engine	Diesel Units
13	2701697.7	1	Mount, Right Side Gas Engine	Gas Units
14	842870	1	Angle, Support	
15	844647G01	1	Angle, Hold Down	
16	452403	4	Screw, M10-1.5 x 60 mm Flange	
17	452402	6	Screw, M10-1.5 x 50 mm Flange	
18	2703294.7	1	Guard, Hydraulic Tank	
19	4174281	1	Transmission Mount	Diesel Units
19	4179803	1	Transmission Mount	Gas Units
20	452389	4	Screw, M8-1.25 x 25 mm Flange	
21	450453	4	Nut, M8-1.25 Flange	
22	4185540	1	Bracket, Fuel System	Diesel Units
23	2701693.7	1	Bracket, Fuel System	Gas Units
24	452378	2	Screw, M6-1 x 20 mm Hex Flange	
25	450452	2	Nut, M6-1 Hex Flange	
26	882971	2	Pin, Box Pivot	
27	4242482	1	Bracket, ECU Mounting	Gas Units Only
28	821893	4	INTRIM Push-On Black .2 ED	Not Shown
29	2703961	1	Decal, Hitch Capacity	
30	829997	1	Grommet	

> Change from previous revision

16.1 Rear Axle

Serial No. All

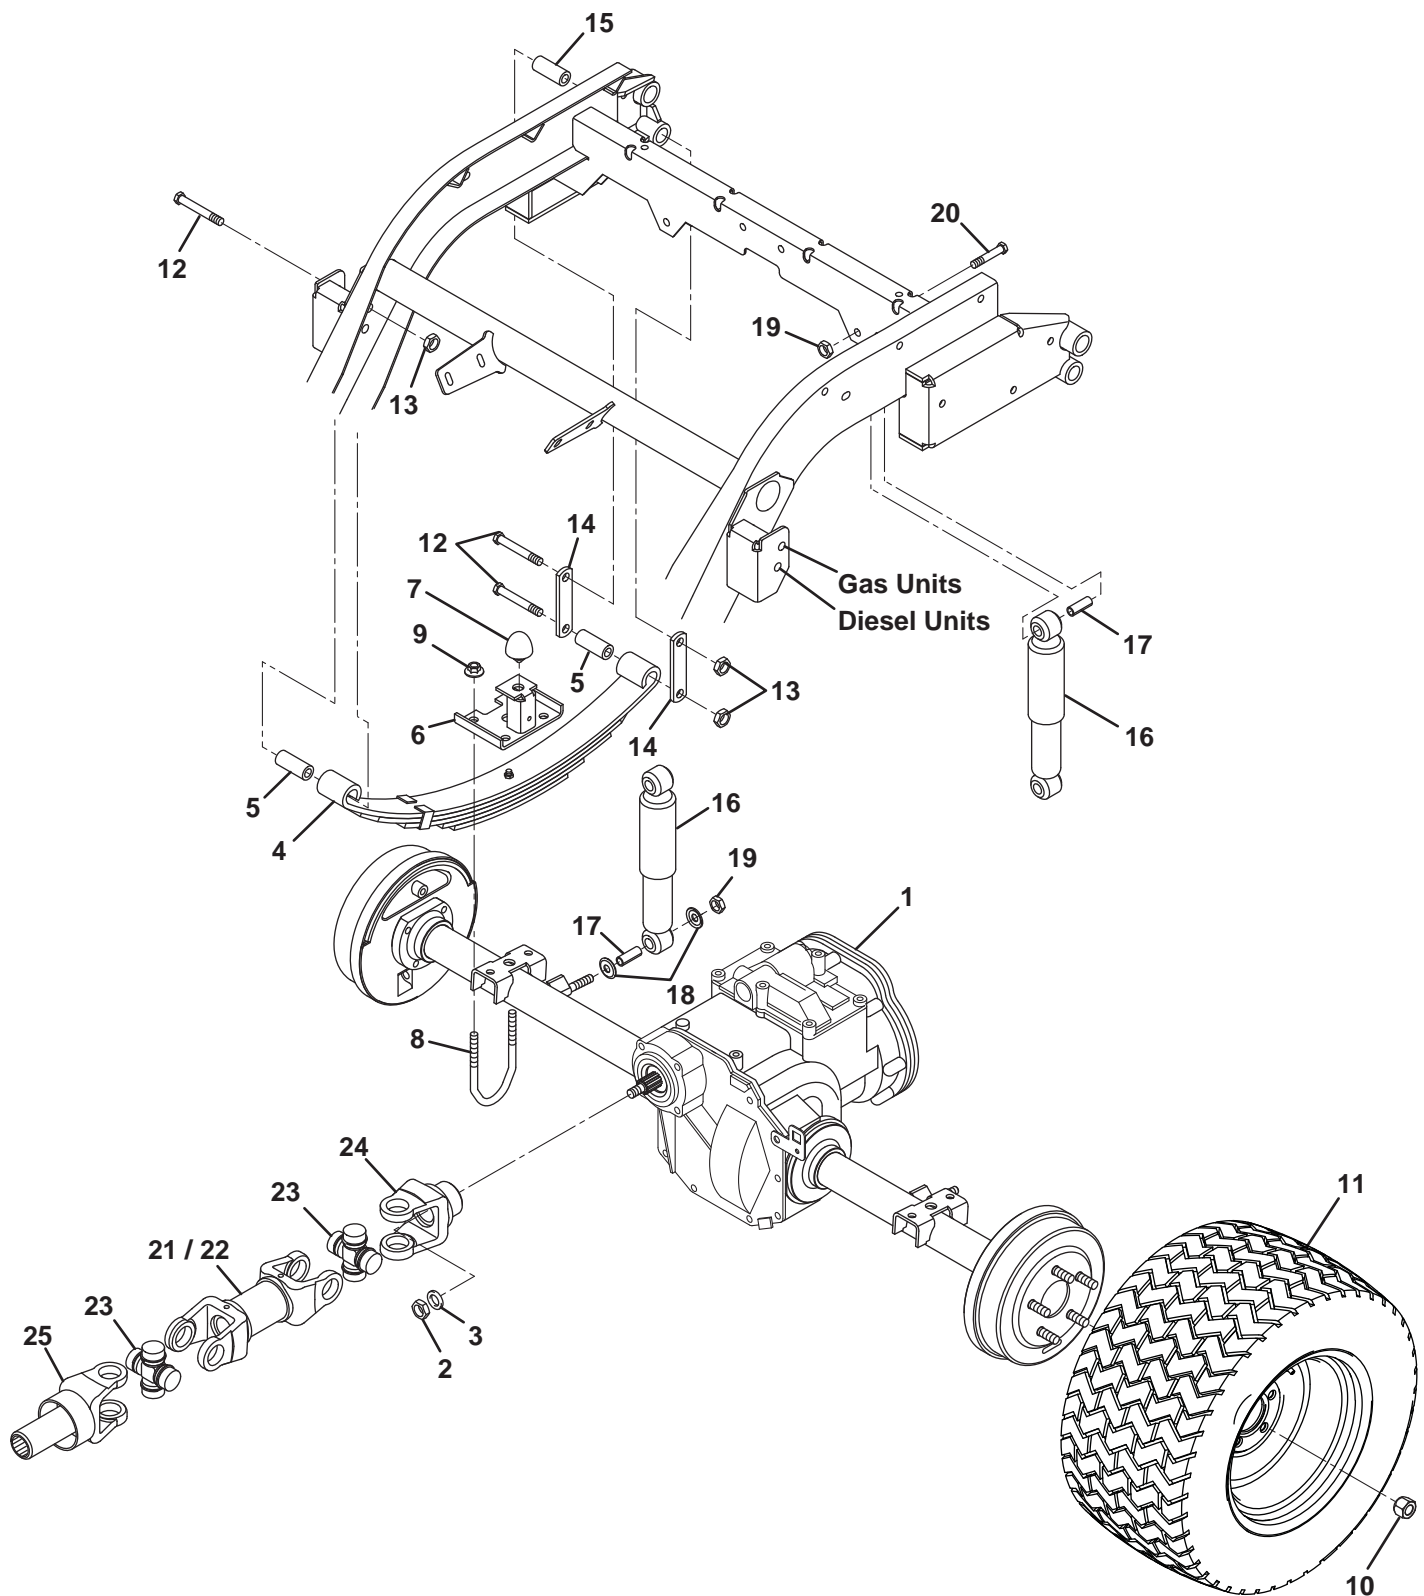


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	894825	1	11.16:1 Rear Differential Assembly	84063, 84064 and 84069, See 44.1 84067 and 84068, See 44.1
1	894826	1	14.21:1 Rear Differential Assembly	
2	800198	1	Locknut, 1/2-20	
3	809180	1	Flat Washer, 1/2	
4	893862	2	Spring, Leaf	
5	843238	2	• Bushing, Nylatron	
6	893613	2	Upstop	
7	813850	2	Bumper, Travel Limiting	
8	887187	4	U-Bolt, 2 x 5-1/4 in.	
9	444730	8	Nut, 7/16-14	
10	800909	10	Nut, M12-1.5 Wheel Lug	
11	4243008	2	Wheel and Tire, Ultra Chevron	Optional Tire
	4243003	1	• Tire, 24 x 13-12 4 Ply	
	4243002	1	• Tire, 24 x 13-12 6 Ply	
	4243006	1	• Rim, 12 x 10.50	
	360111	1	• Stem, Valve	
12	311398	6	Screw, 1/2-13 x 3-1/2 in. Hex Head	Diesel Engine Gas Engine, MT Gas Engine, AT Diesel Engine Gas Engine, MT Gas Engine, AT Includes Grease Fitting Diesel Engine Gas Engine
13	800602	6	Nut, 1/2-13 Nylon Insert	
14	843876	4	Shackle, Rear Spring	
15	843238	2	Bushing, Nylatron	
16	807332	2	Shock Absorber	
17	823621	4	Bushing	
18	825500	4	Washer, 7/16 Cupped	
19	800294	4	Locknut, 7/16-14 Center	
20	311396	2	Screw, 7/16-14 x 2-1/4 in. Hex Head	
21	4174288	1	Driveshaft, Complete	
21	4144334	1	Driveshaft, Complete	
21	4140071	1	Driveshaft, Complete	
22	4174287	1	• Shaft, Drive	
22	4144345	1	• Shaft, Drive	
22	4140067	1	• Shaft, Drive	
23	554663	2	• Cross and Bearing Kit	
24	4140069	1	• Yoke, Differential	
25	4140075	1	• Yoke, Transmission	
25	4140072	1	• Yoke, Transmission	

> Change from previous revision

17.1 Front Control Arms

Serial No. All

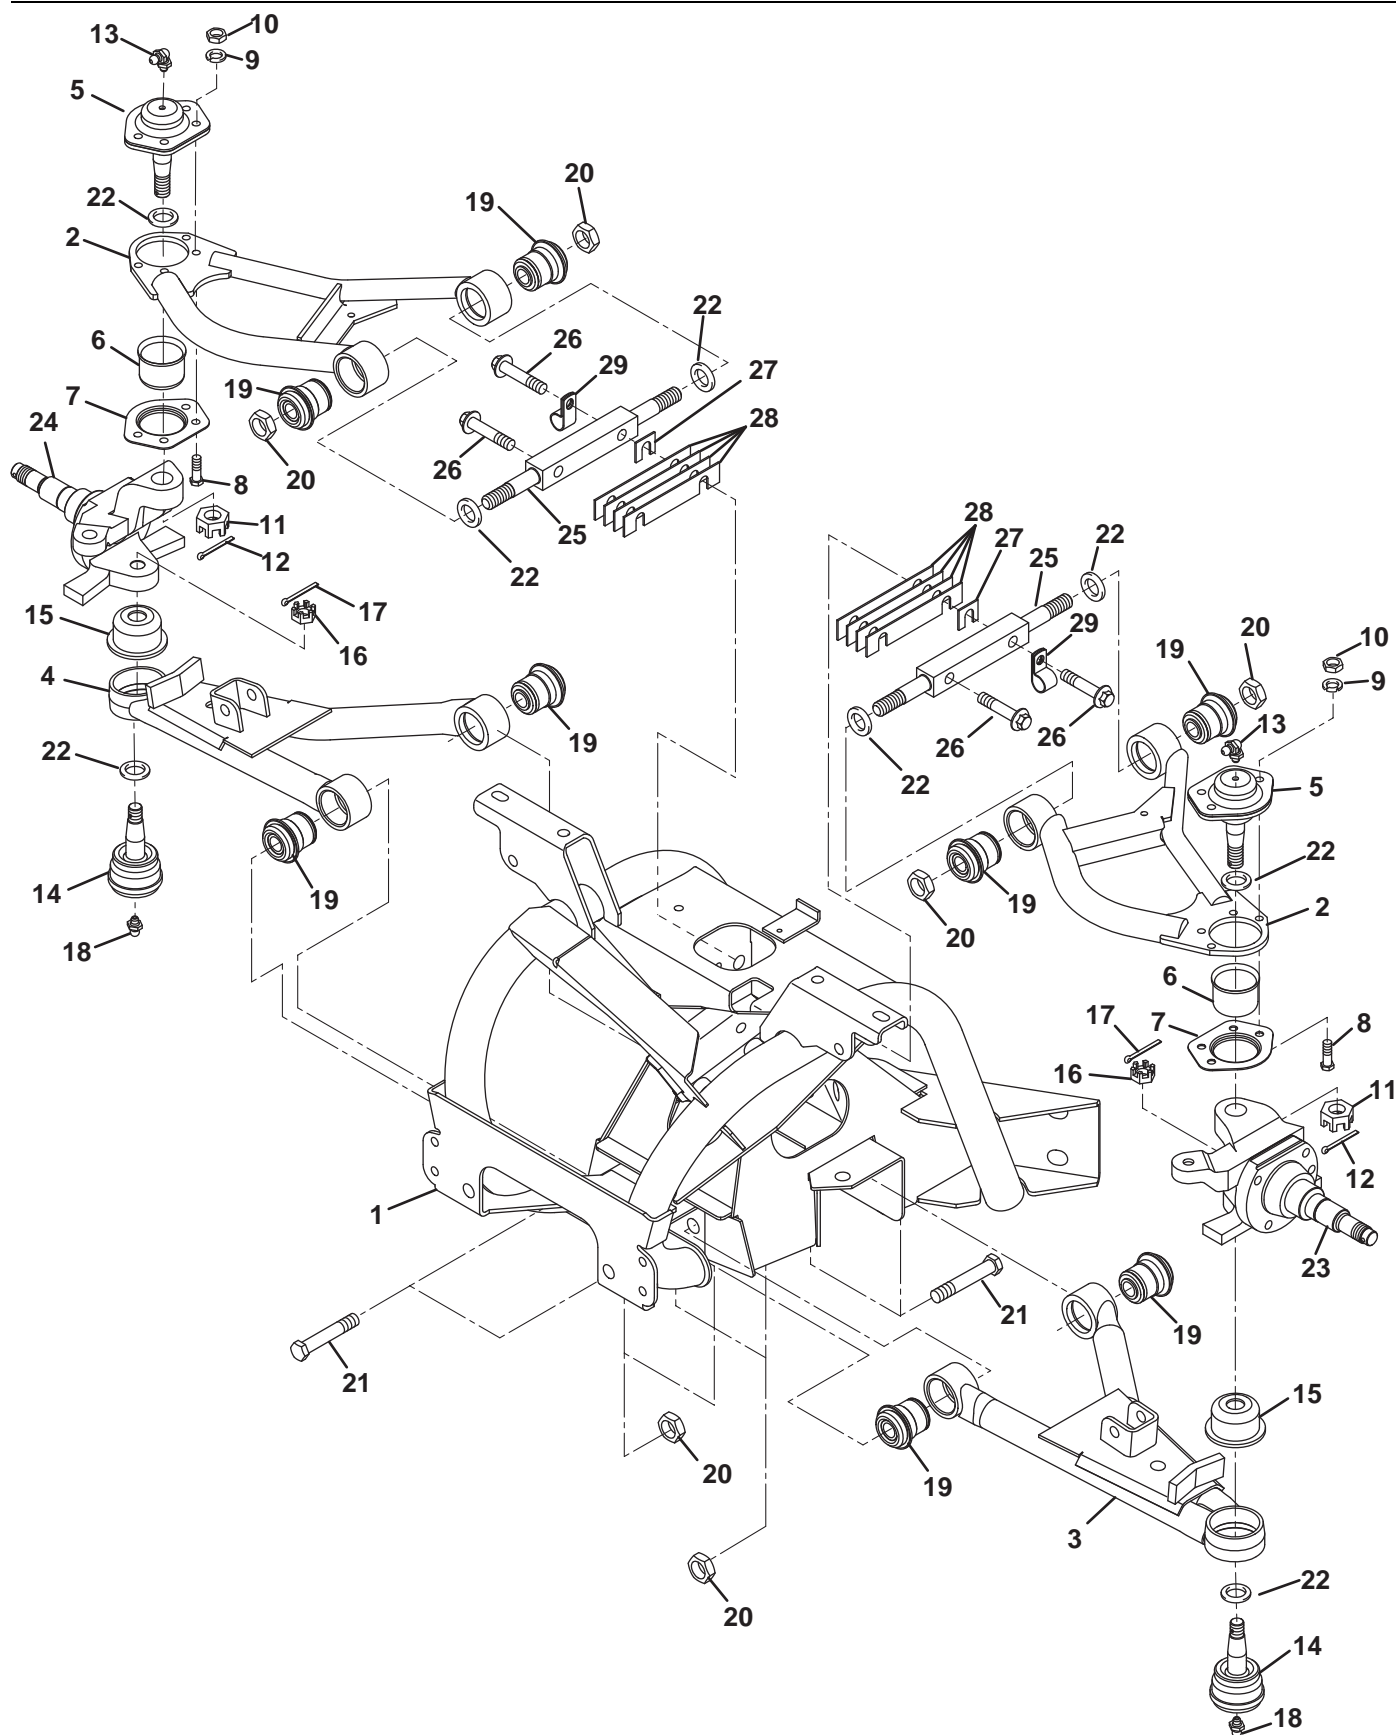


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4120138	1	Frame, 4 Wheel Steering	Black Oxide Finish, Grade 8 Black Oxide Finish Black Oxide Finish
2	893266	2	Upper Control Arm	
3	893233	1	Left Side Lower Control Arm	
4	893234	1	Right Side Lower Control Arm	
5	844148	2	Upper Ball Joint	
6	N/S	1	• Boot	
7	N/S	1	• Boot Retainer	
8	N/S	4	• Screw, 5/16-24 x 1 in. Hex Head	
9	N/S	4	• Lockwasher, 5/16	
10	548079	4	• Nut, 5/16-24 Hex	
11	306839	1	• Nut, 5/8-18 Slotted Hex	
12	460030	1	• Cotter Pin, 1/8 x 1-1/4 in.	
13	471221	1	• Grease Fitting, 1/4-28 90°	
14	841429	2	Lower Ball Joint	
15	N/S	1	• Boot	Special Drive Thread
16	800861	1	• Nut, 9/16-18 Slotted Hex	
17	460030	1	• Cotter Pin, 1/8 x 1-1/4 in.	
18	548224	1	• Grease Fitting, 1/4-28 Straight	
19	841167	8	Bushing, Silentbloc	
20	450382	8	Nut, M16-2 Locking Insert	
21	450077	4	Bolt, M16-2 x 90 mm Hex Head	
22	450393	8	Washer, M16	
23	894573	1	Knuckle, Left Side Steering	
24	894574	1	Knuckle, Right Side Steering	
25	841630	2	Trunnion, Control Arm	Grade 10.9
26	800945	4	Bolt, M12-1.75 x 60 mm Hex Head	
27	841738	AR	Shim, .024 in. Thick	Add or remove shims as required to adjust CASTER angle.
28	841737	AR	Shim, .060 in. Thick	Add or remove shims as required to adjust CAMBER angle.
29	810437	2	Clamp	

> *Change from previous revision*

18.1 Steering Linkage

Serial No. All

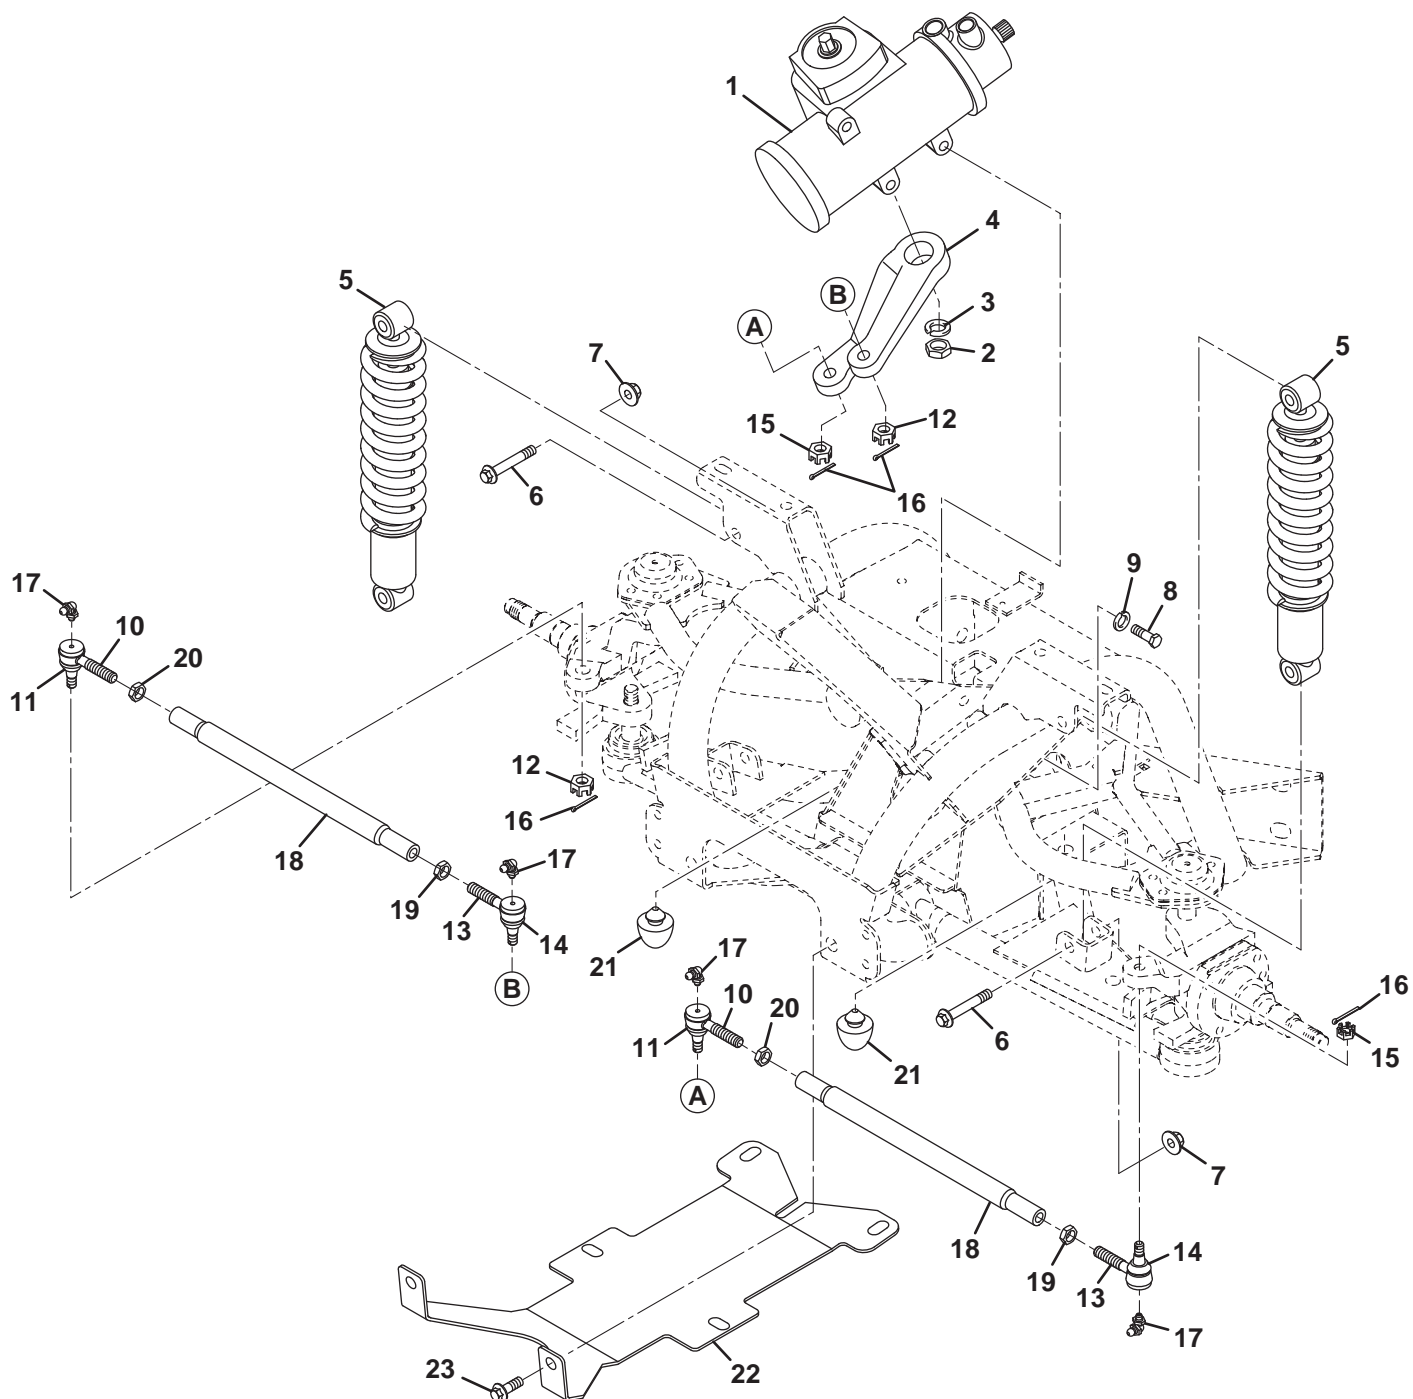


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	841255	1	Steering Gear	Grade 10.9
2	305134	1	• Nut, 7/8-14 Hex Jam	
3	308008	1	• Lockwasher, 7/8	
4	841336	1	Arm, Pitman	
5	894635	2	Strut Assembly	
6	800945	4	Screw, M12-1.75 x 60 mm Hex Head	
7	450455	4	Nut, M12-1.75 Hex Flange	
8	311392	3	Screw, 7/16-14 x 2 in. Hex Head	
9	303269	3	Lockwasher, 7/16	
10	889681	2	End, Left Hand Thread Tie Rod	
11	816586	1	• Retainer, Grease	
12	306825	1	• Nut, 7/16-20 Castle	
13	887512	2	End, Right Hand Thread Tie Rod	
14	816586	1	• Retainer, Grease	
15	306825	1	• Nut, 7/16-20 Castle	
16	304636	4	Cotter Pin, 1/8 x 1-1/8 in.	
17	831405	4	Grease Fitting	
18	841404	2	Tie Rod	
19	800485	1	Nut, 9/16-18 Left Hand Thread Jam	
20	302944	2	Nut, 9/16-18 Right Hand Thread Jam	
21	813850	2	Bumper, Travel Limiting	
22	842033	1	Plate, Skid	
23	452408	6	Screw, M10-1.75 x 20 mm	Grade 10.9

> Change from previous revision


19.1 Front Brakes

Serial No. All

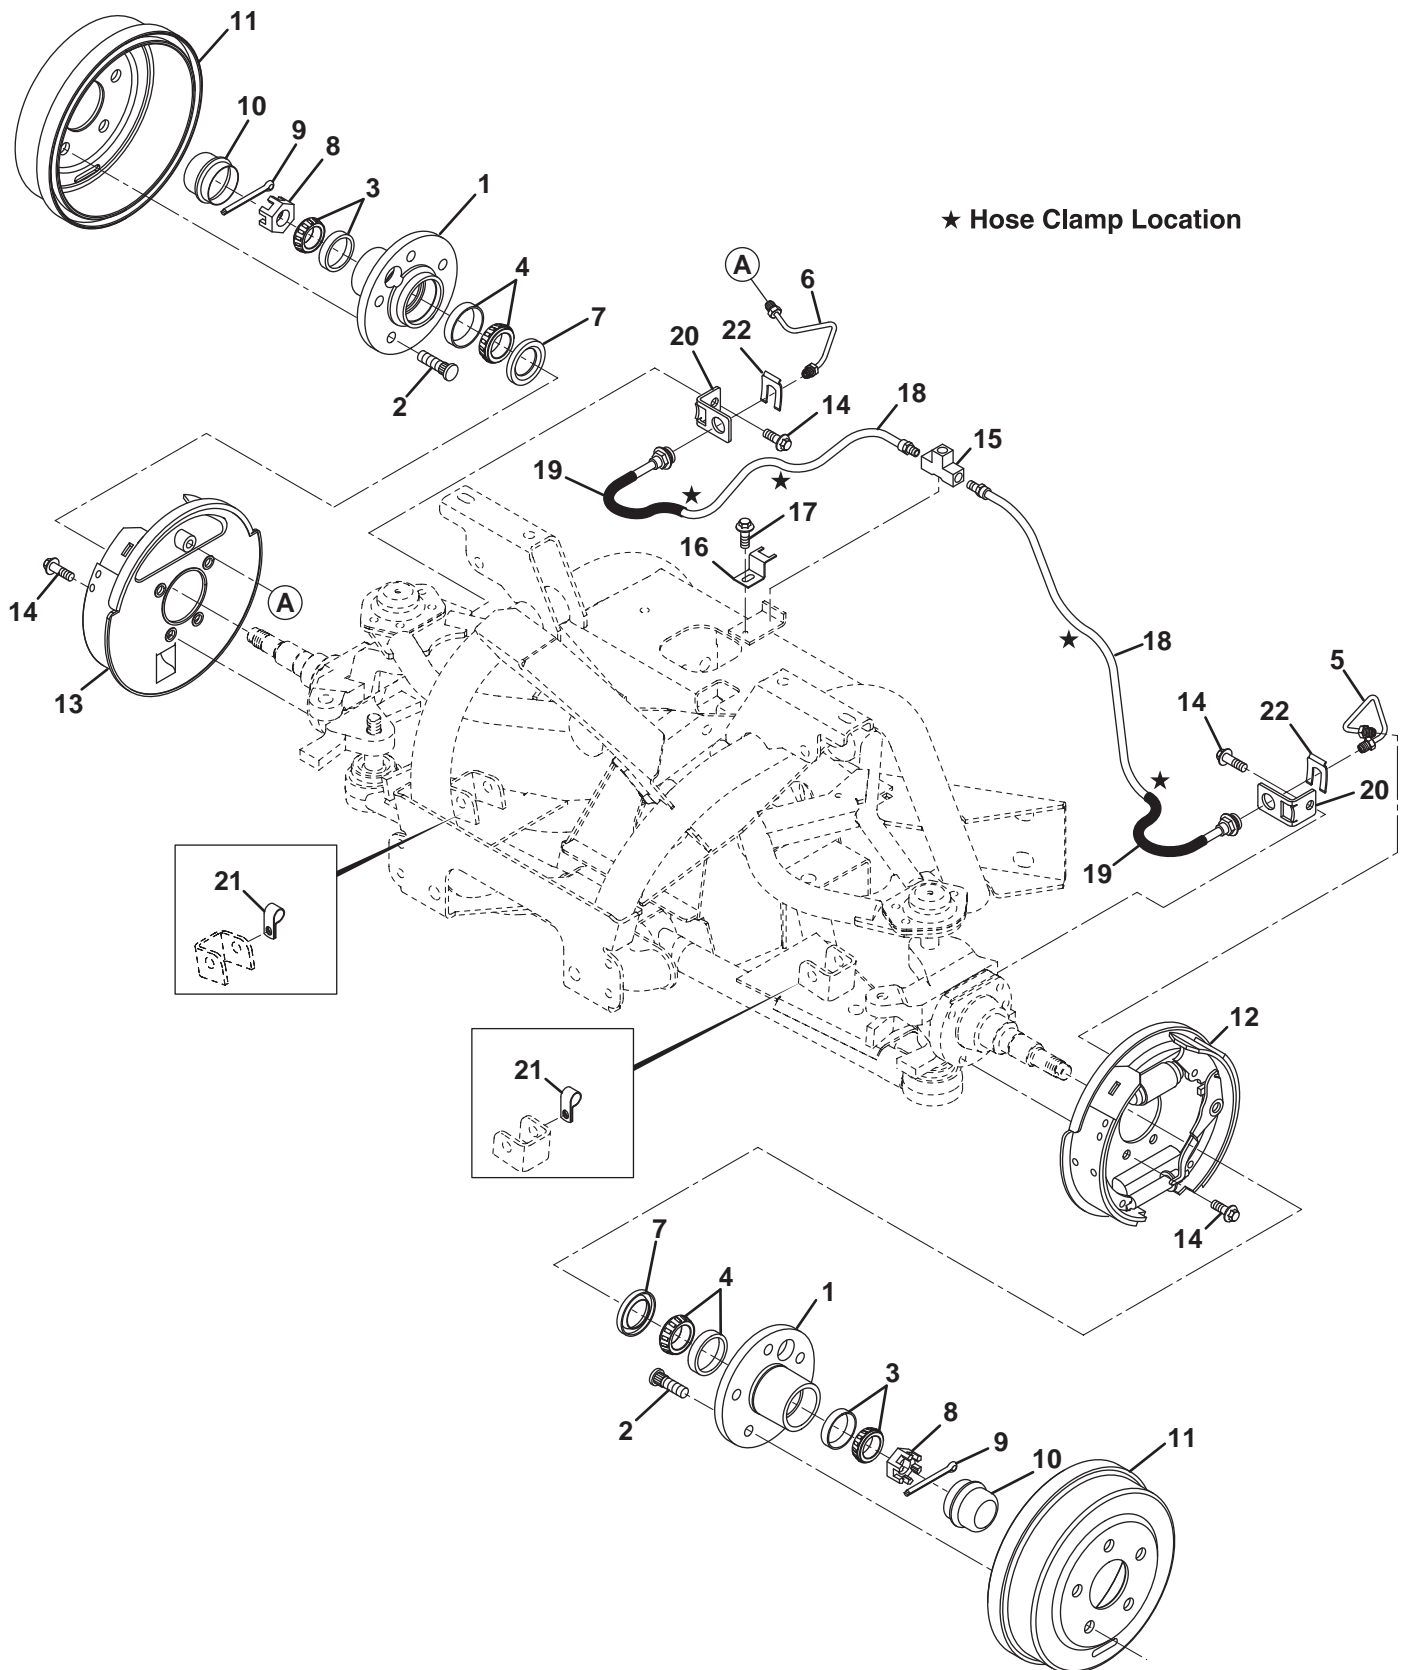

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	2702257.7	2	Front Hub	Includes cup portion of Items 3 & 4
2	800908	4	• Bolt, M12-1.5 x 42 mm Wheel	
3	500534	2	Outer Bearing Cup and Cone	
4	500596	2	Inner Bearing CUp and Cone	
5	2702217	1	Tube, Left Front Brake	
6	841839	1	Tube, Right Front Brake	
7	817928	2	Seal, Grease	
8	2702247	2	Nut, 3/4-16 Castle	
9	304636	2	Cotter Pin, 1/8 x 1-1/8 in.	
10	817250	2	Cap, Grease	
11	841430	2	Brake Drum	
12	893585	1	Front Left Side Brake Assembly	Replacement of Cylinder Repair of Cylinder Includes Left and Right sides
	894930	1	• Kit, Brake Cylinder	
	894931	1	• Kit, Brake Cylinder Repair	
	2701253	1	• Kit, Brake Shoe	
	894933	1	• Kit, Left Side Spring	
	894935	1	• Kit, Left Side Adjuster Repair	
13	893586	1	Front Right Side Brake Assembly	Replacement of Cylinder Repair of Cylinder Includes Left and Right sides
	894930	1	• Kit, Brake Cylinder	
	894931	1	• Kit, Brake Cylinder Repair	
	2701253	1	• Kit, Brake Shoe	
	894934	1	• Kit, Right Side Spring	
	894936	1	• Kit, Right Side Adjuster Repair	
14	452398	10	Screw, M10-1.5 x 20 mm Hex Flange	Grade 8.8
15	841842	1	Tee, M10-1.0 Flare Union	
16	843418	1	Clamp, Tee	
17	452692	1	Screw, M6-1.0 x 12 mm Taptite	
18	841841	2	Hose, Brake	
19	2703081	2	Protector, Brake Hose	
20	842104	2	Bracket, Brake Tube	
21	810437	2	Clamp, Hose	
22	809137	2	Clip, Brake Hose Retaining	

> Change from previous revision

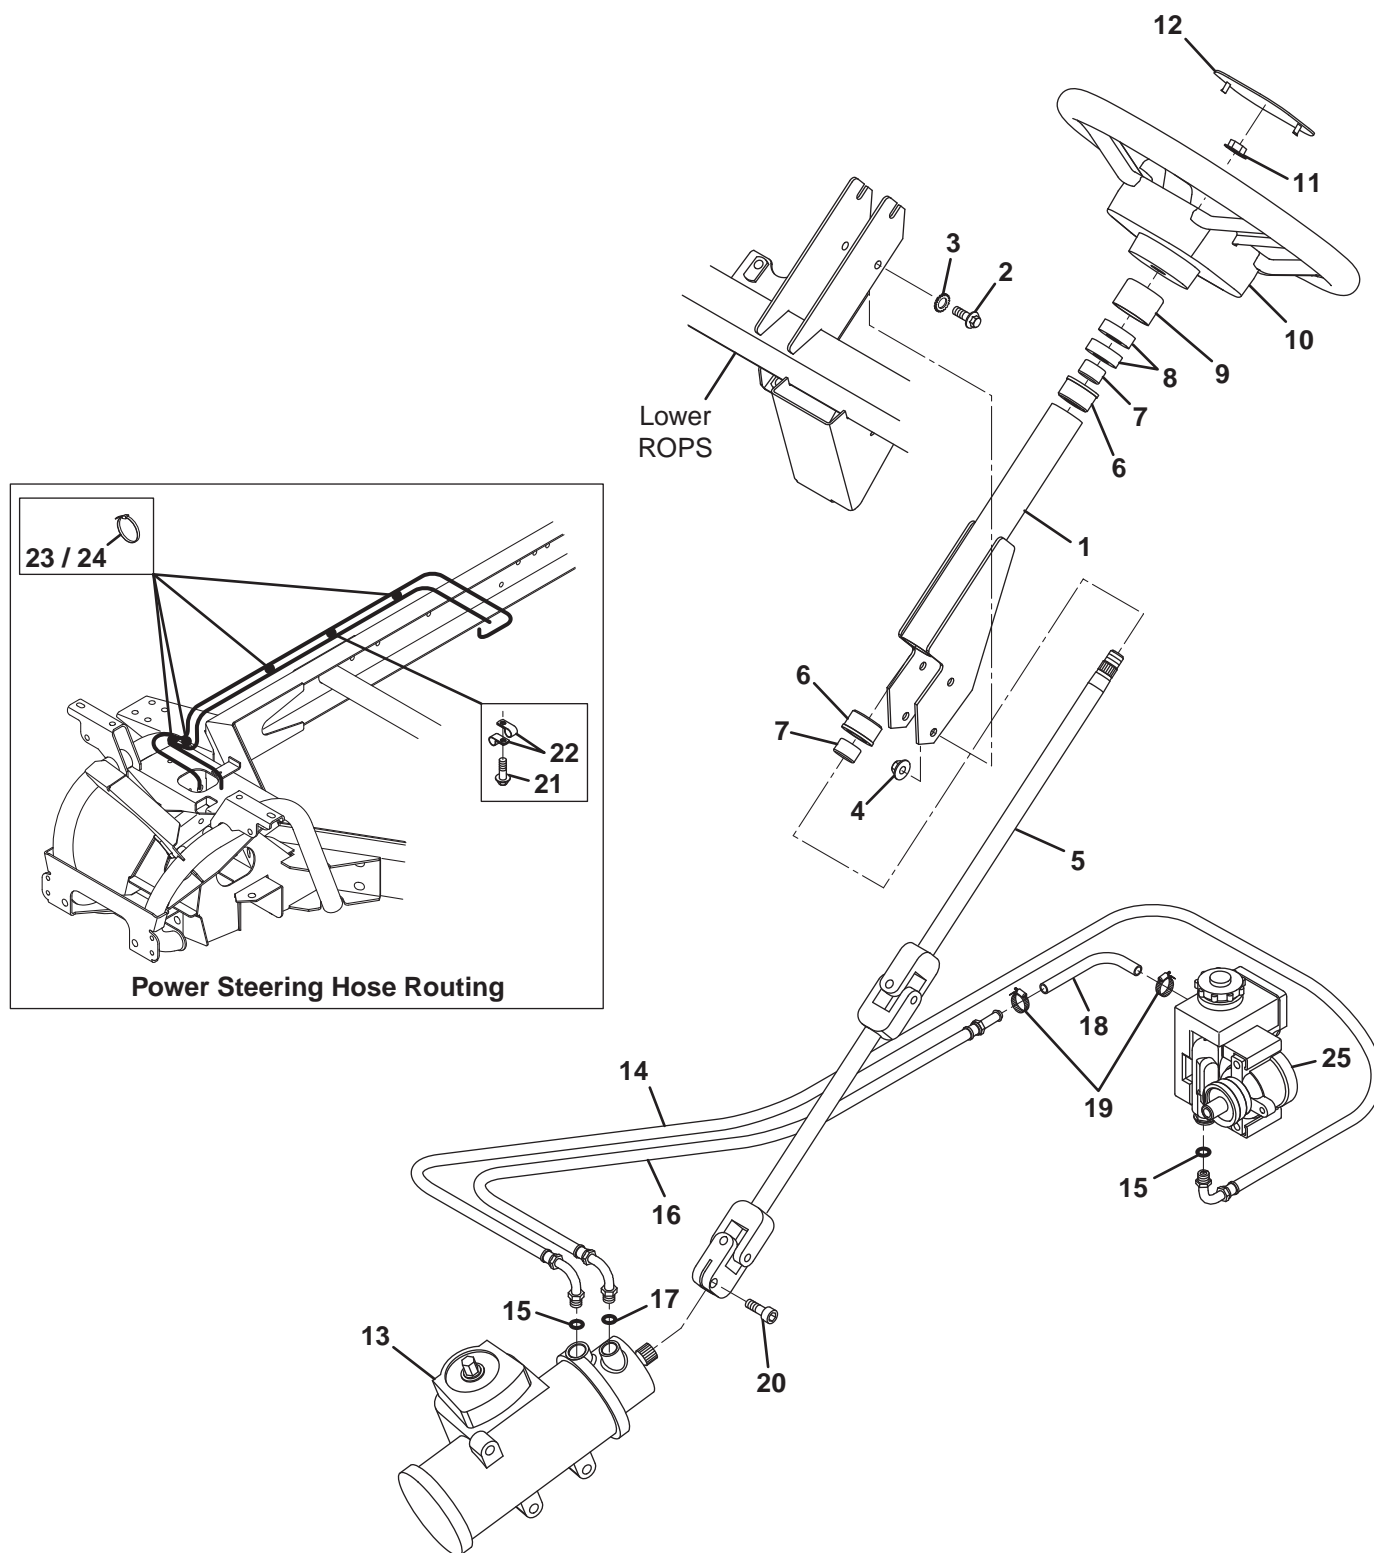


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	893571	1	Tube, Steering Mount	See 18.1
2	800930	4	Screw, M8-1.25 x 16 mm Flange	
3	306799	4	Lockwasher, 5/16 External Tooth	
4	450453	4	Nut, M8-1.25 Flange	
5	893344	1	Shaft, Steering	
	887259	2	Bearing Assembly	
6	828590	1	• Housing, Bearing	
7	808060	1	• Bearing, Needle	
8	819923	2	Collar, Foam	
9	2700453	1	Cover, Steering Tube	
10	892228	1	Steering Wheel	
11	450457	1	Nut, M16-2 Flange	
12	892486	1	Cover, Steering Wheel	
13	841255	1	Gear, Steering	
14	843767	1	Hose, Power Steering Pressure	
15	111838	2	• O-Ring	
16	843768	1	Hose, Power Steering Return	
17	111838	1	• O-Ring	
18	840222	1	Hose, Formed	
19	830930	2	Clamp, Hose	
20	450739	1	Screw, M10-1.5 x 30 mm Socket	
21	800943	1	Screw, #10-14 x 5/8 in. Self Tapping	
22	809092	2	Clamp, Tube	
23	320107	3	Cable Tie, 7-1/2 in.	Secure hoses together
24	473142	4	Cable Tie, 15-1/2 in.	Secure Hoses to Frame
25	REF	1	Power Steering Pump with Reservoir	See 26.1 or 27.1

> Change from previous revision

21.1 Diesel Radiator

Serial No. 84063 All
Serial No. 84064 All

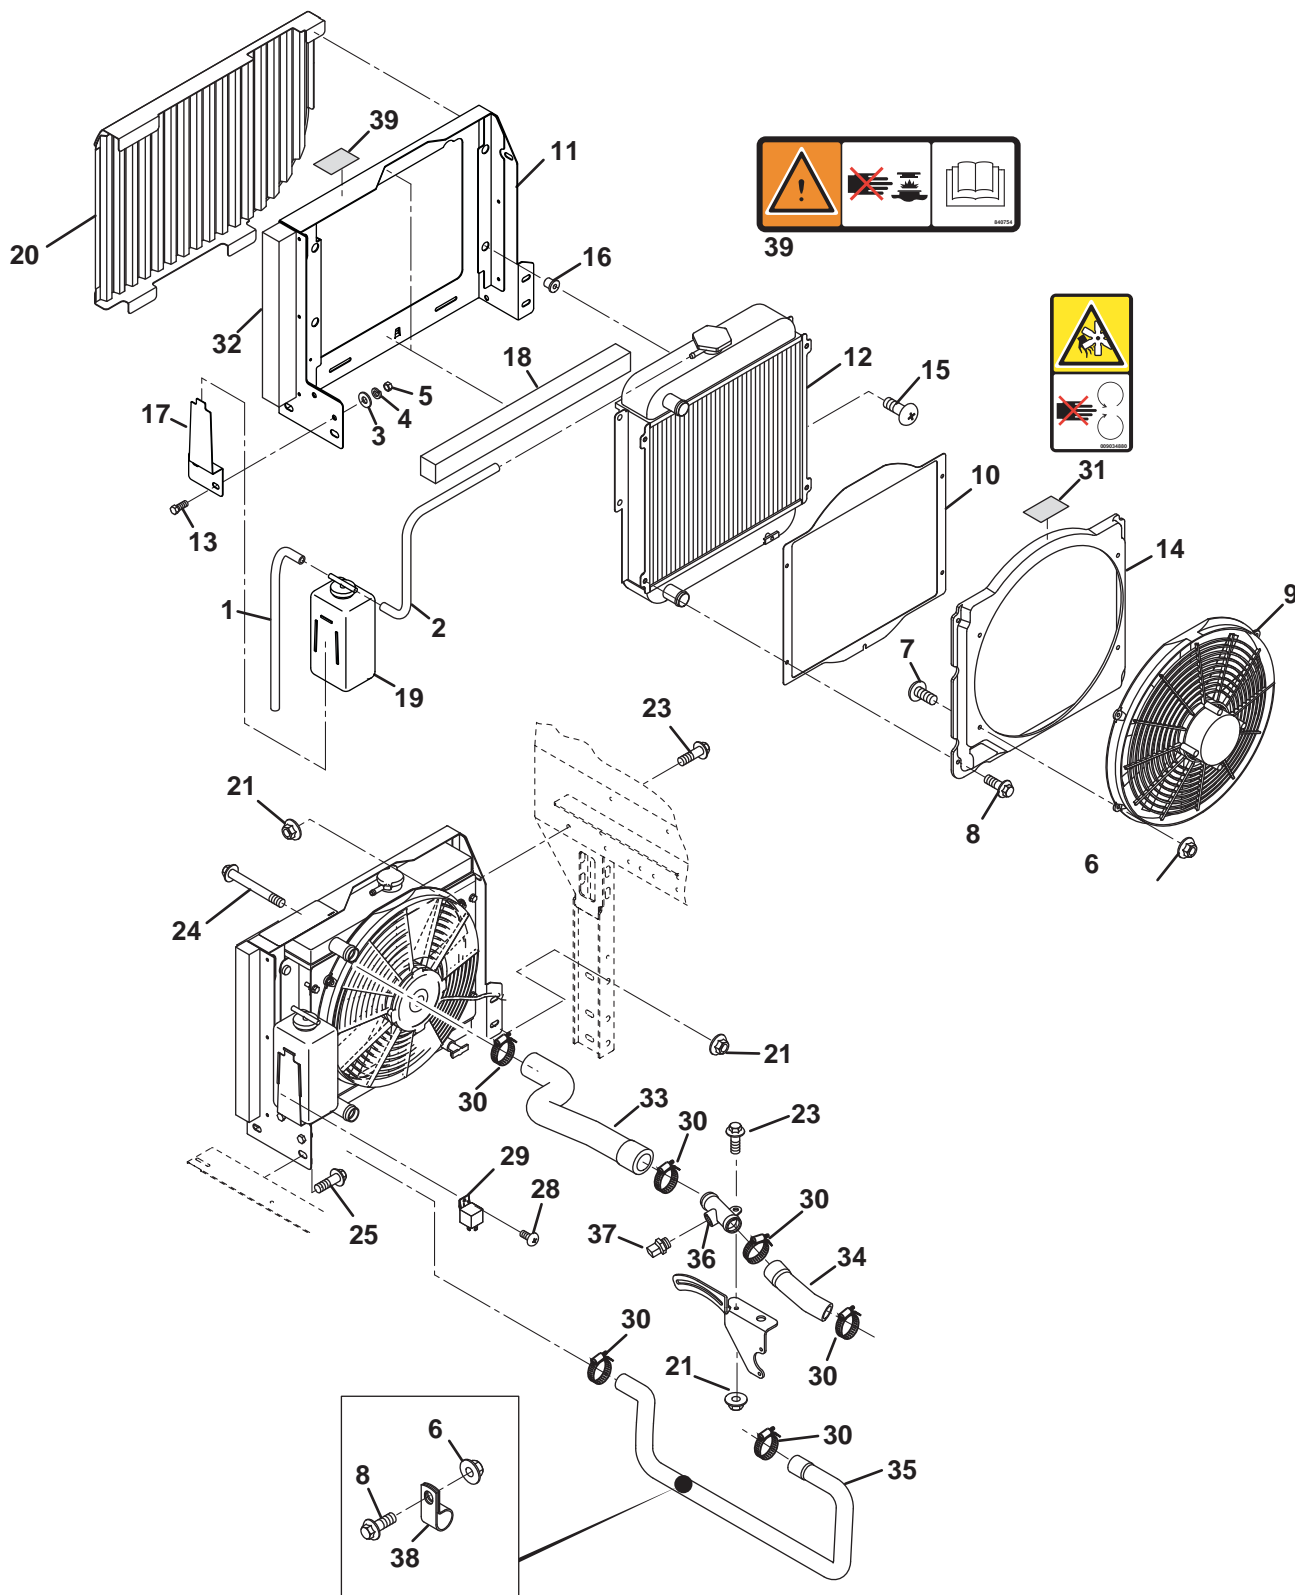


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	843862	AR	Tube, 1/4 in. I.D. Clear Vinyl	10 Foot Length, Cut to 12 in.
2	835805	AR	Hose, Radiator Overflow	
★ 3	452006	2	Flat Washer, 5/16	
★ 4	446134	2	Lockwasher, 5/16	
★ 5	443106	2	Nut, 5/16-18 Hex	
6	450452	6	Nut, M6-1 Hex Flange	
7	450541	4	Screw, M6-1 x 16 mm Hex Flange	
8	452378	6	Screw, M6-1 x 20 mm Hex Flange	
9	4176887	1	Fan, 12 in. Hi-Perf Puller	
10	600992	1	Panel, Shroud	
★ 11	4238927	1	Frame, Radiator	
12	601592	1	Radiator	
13	400184	2	Screw, 5/16-18 x 3/4" Hex Head	
14	4177253	1	Shroud, 12 in. Fan	
15	800177	4	Screw, 5/16-18 x 3/4 in.	
16	831846	4	Nut, Isolation	
★ 17	4238925	1	Bracket, Radiator Bottle	
18	833512	2	Seal, Radiator Foam	
★ 19	553926	1	Overflow Bottle	
20	4175402	1	Screen, Right Side	
21	450453	3	Nut, M8-1.25 Hex Flange	Not Shown, See 55.1
22	4179800	1	Harness, Oil Cooler Fan Wiring	
23	452388	2	Screw, M8-1.25 x 20 mm Hex Flange	
24	452395	1	Screw, M8-1.25 x 80 mm Hex Flange	
25	452398	2	Screw, M10-1.5 x 20 mm Hex Flange	Not Shown, See 55.1
26	4179801	1	Harness, Radiator Fan Wiring	
27	4174321	1	Harness, Kubota Engine Wiring	Not Shown, See 55.1
28	800146	1	Screw, #10 x 3/4 Thread Cutting	
29	4221100	1	Relay, 12V 70A	
30	820889	6	Clamp, Hose	
31	009034880	1	Decal, Fan Warning	
32	4140090	1	Foam 1.25 x 1.00 x 13.50	
33	4174820	1	Hose, Upper Radiator	
34	4174660	1	Hose, Upper	
35	4174563	1	Hose, Lower Radiator	
36	894348	1	Tube, Fan Switch	
37	17680-50F70	1	Switch, Fan	
38	825884	2	Clamp, Hose	
39	840754	1	Decal, Radiator Pressure Warning	
★	Update kit 4239742 is required to update vehicles with the following serial numbers: 8406301651 ~ 8406301856 8406401651 ~ 8406401860			

> Change from previous revision

22.1 Gas Radiator

Serial No. 84067 All
Serial No. 84068 All
Serial No. 84069 All

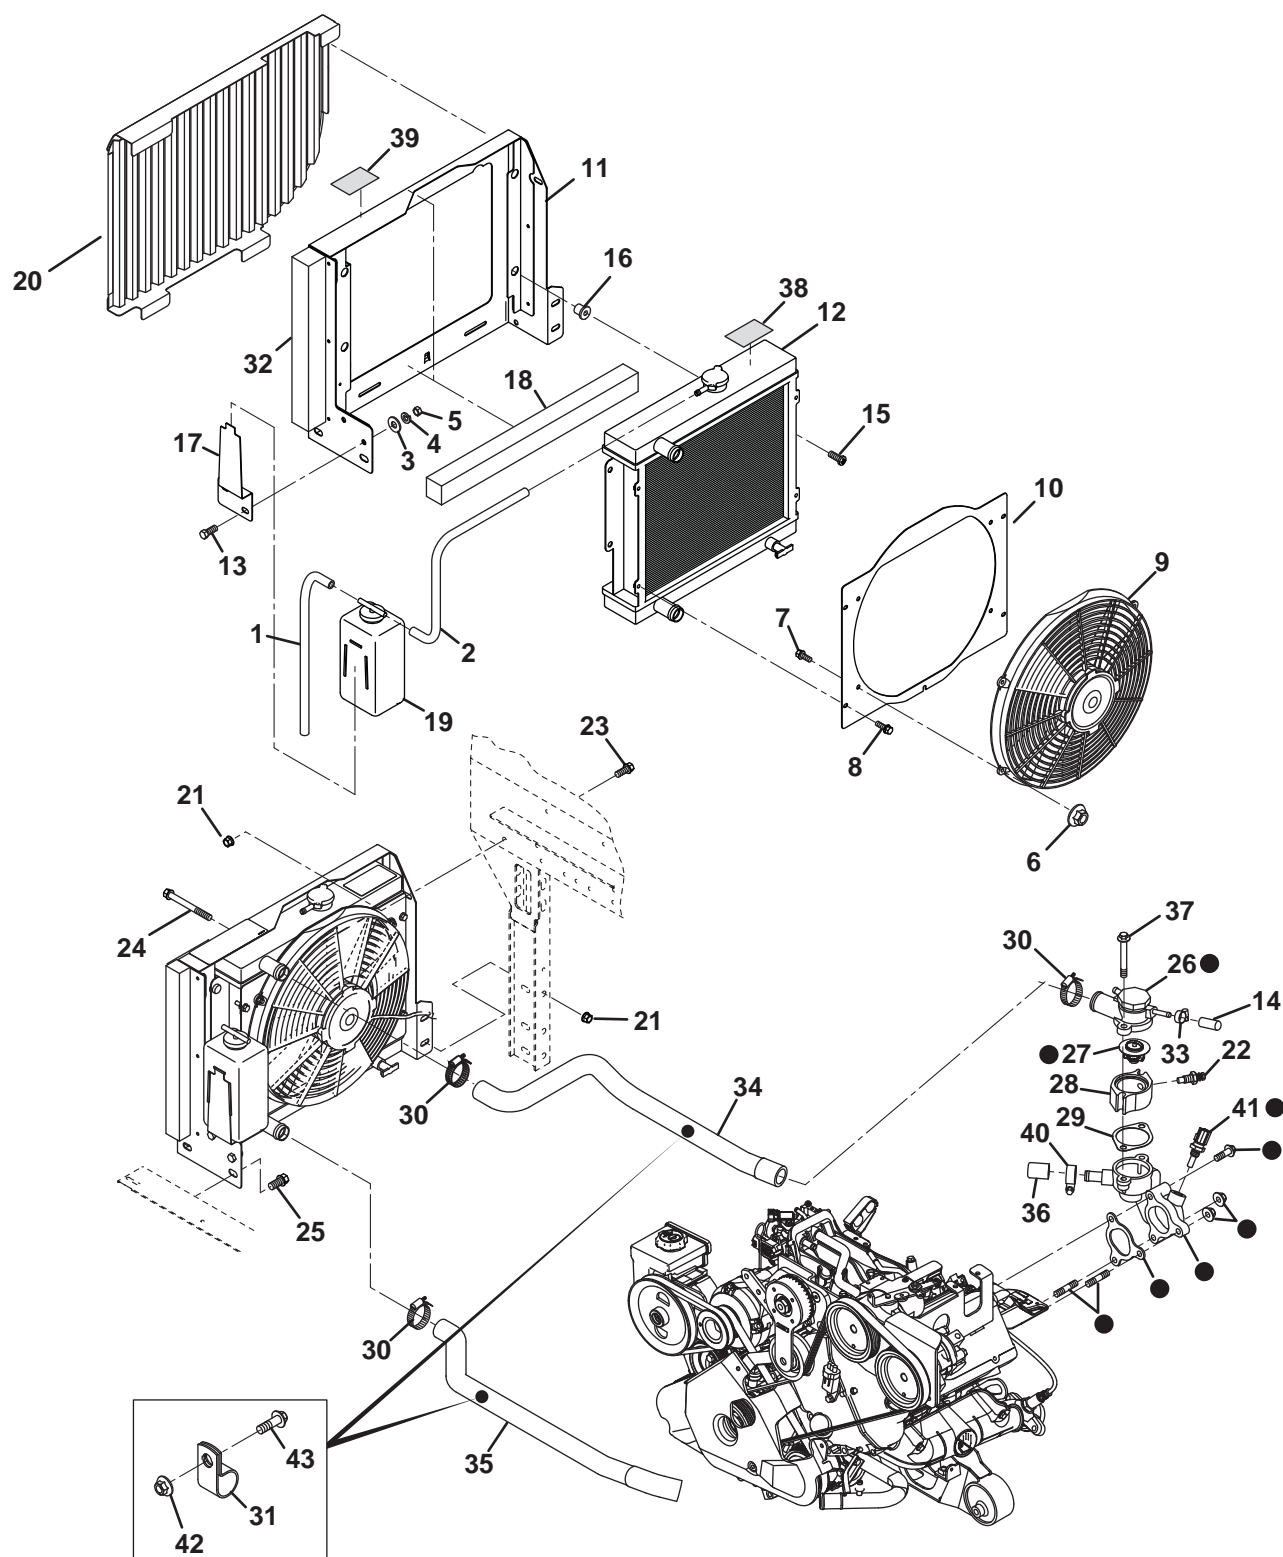


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	843862	AR	Tube, 1/4 in. I.D. Clear Vinyl	10 Foot Length, Cut to 12"
2	835805	AR	Hose, Radiator Overflow	
3	452006	2	Flat Washer, 5/16	
4	446134	2	Lockwasher, 5/16	
5	443106	2	Nut, 5/16-18 Hex	
6	450452	4	Nut, M6-1 Hex Flange	
7	450541	4	Screw, M6-1 x 16 mm Hex Flange	
8	452378	4	Screw, M6-1 x 20 mm Hex Flange	
9	4115033	1	Fan, 13 in. Radiator	
10	4241843	1	Panel, Fan Mounting	
11	4238927	1	Frame, Radiator	
12	601592	1	Radiator	
13	400184	2	Screw, 5/16-18 x 3/4" Hex Head	
14	845224	1	Cap, 1/4 x 1 in.	
15	800177	4	Screw, 5/16-18 x 3/4 in.	
16	831846	4	Nut, Isolation	
17	4238925	1	Bracket, Radiator Bottle	
18	833512	2	Seal, Radiator Foam	
19	553926	1	Overflow Bottle	
20	4175402	1	Screen, Right Side	
21	450453	2	Nut, M8-1.25 Hex Flange	
22	843857	1	Sender, Temperature	
23	452388	2	Screw, M8-1.25 x 20 mm Hex Flange	
24	452395	1	Screw, M8-1.25 x 80 mm Hex Flange	
25	452398	2	Screw, M10-1.5 x 20 mm Hex Flange	
● 26	4120076	1	Cap, Water Thermostat	
● 27	4148206	1	Thermostat, 88° C	
28	2701442	1	Housing, Temperature Sender	
29	2701513	1	Gasket, Thermostat	
30	820889	4	Clamp, Hose	
31	2701108	2	Clamp, Hose	
32	4140090	1	Foam, 1-1/4 x 1 x 13 in.	
33	11391G4	1	Clamp, 1/4 to 5/8 in. Worm Drive	
34	4139442	1	Hose, Upper	
35	4115400	1	Hose, Lower Radiator	
36	833715	1	Plug, Tube	
37	452392	2	Screw, M8-1.25 x 50 mm Flange	
38	009034880	1	Decal, Fan Warning	
39	840754	1	Decal, Radiator Pressure Warning	
40	832033	1	Clamp, Hose	
● 41	4148150	1	Sensor, Water Temperature	
42	548910	2	Nut, 1/4-20 Hex Flange	
43	548827	2	Screw, 1/4-20 x 1/2 in. Hex Flange	

> Change from previous revision

23.1 Diesel Engine and Transmission Mounting

Serial No. 84063 All
Serial No. 84064 All

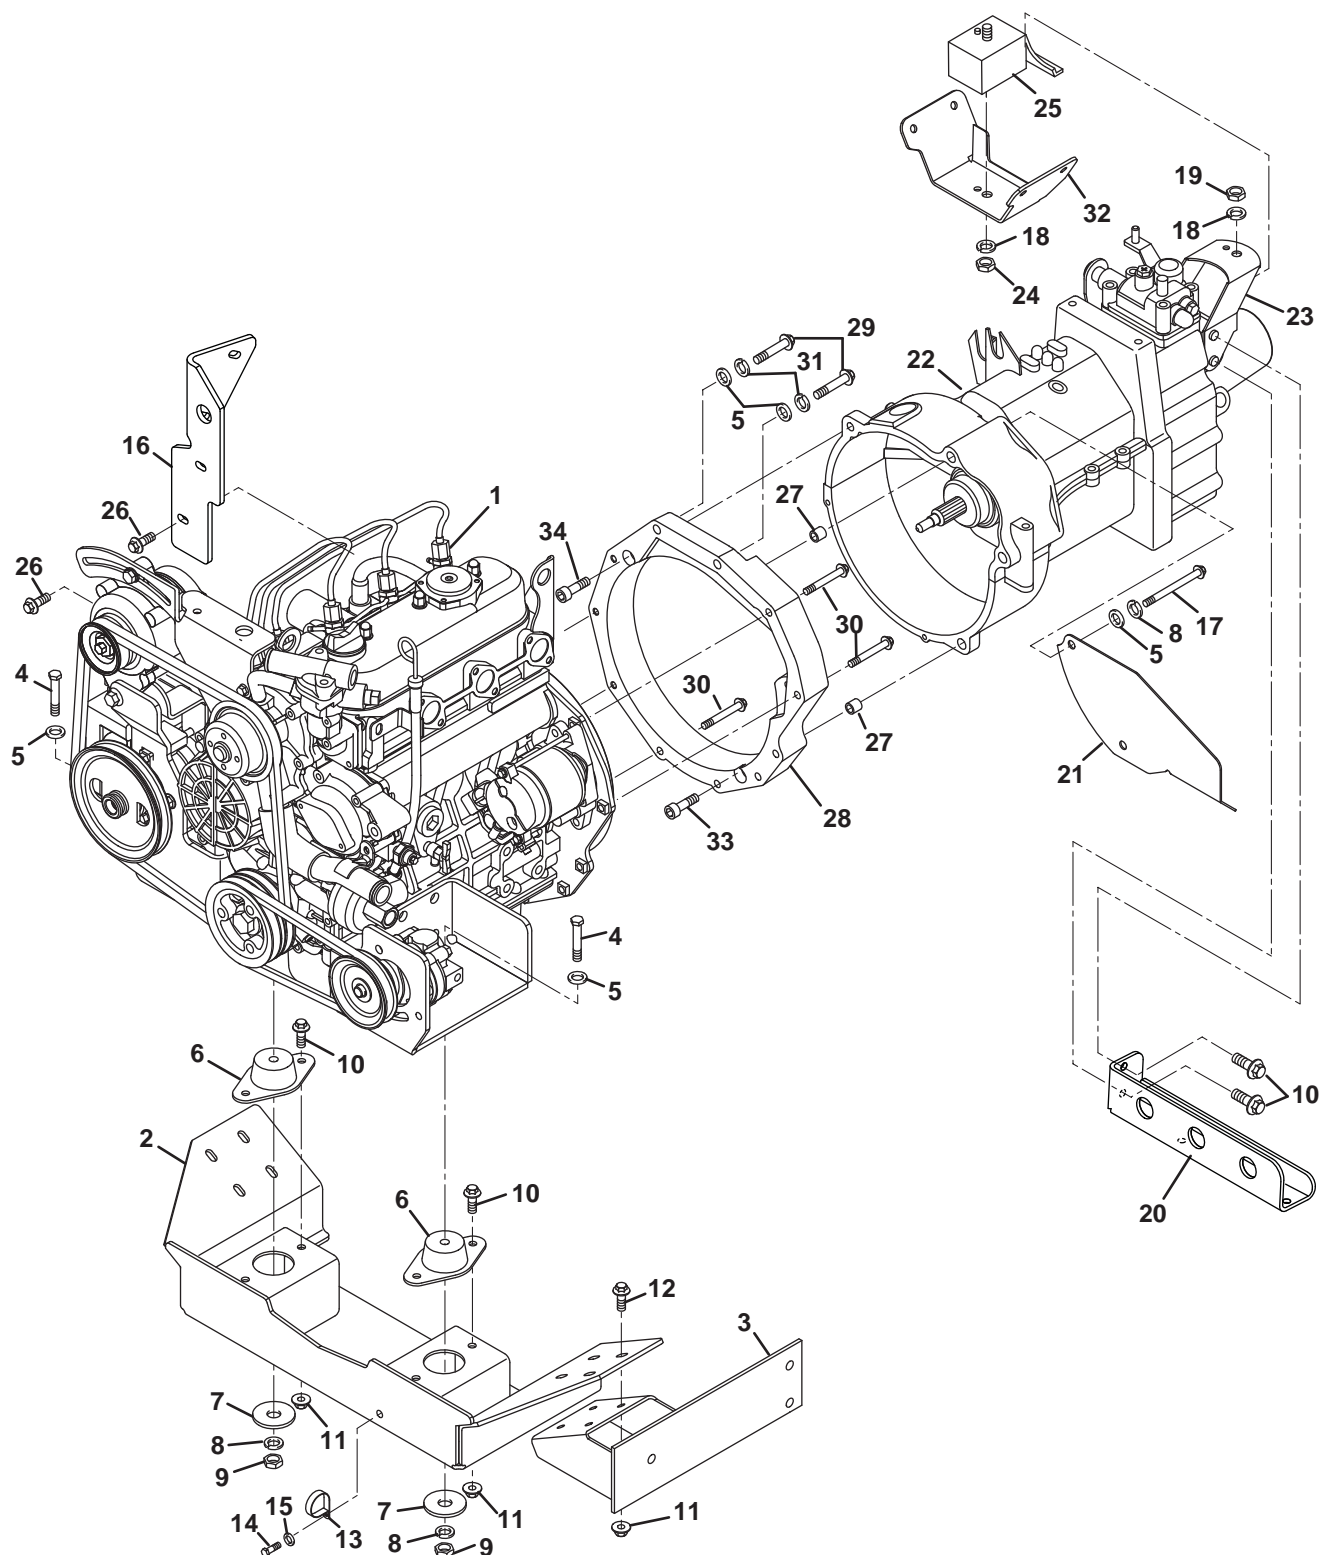


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Engine and Clutch	See 26.1
2	4192125	1	Frame, Engine Mount	
3	REF	1	Mount, Engine	See 14.1, Left shown, right similar
4	306836	2	Screw, 3/8-16 x 2-1/4 in. Hex Head	
5	306981	6	Flat Washer, 3/8	
6	841885	2	Mount, Engine Isolation	
7	809174	2	Washer, Isolator	
8	120177	4	Lockwasher, 3/8	
9	306562	2	Nut, 3/8-16 Hex	
10	452388	6	Screw, M8-1.25 x 20 mm Flange	
11	450453	12	Nut, M8-1.25 Flange	
12	452389	8	Screw, M8-1.25 x 25 mm Flange	
13	825884	1	Clamp	
14	400108	1	Screw, 1/4-20 x 1" Hex Head	
15	452004	1	Flat Washer, 1/4	
16	4174285	1	Bracket, Air Filter Mount	
17	548849	2	Screw, 3/8-16 x 4-3/4 in. Hex Head	
18	450412	2	Lockwasher, M10	
19	800571	1	Nut, M10-1.25 Hex	
20	4191140	1	Bracket, Muffler	
21	4174286	1	Cover, Starter Hole	
22	894066	1	Transmission, Suzuki MT5	Includes Clutch Disc and Cover
23	11741-85200	1	• Support, Transmission	
24	08310-00103	1	• Nut	
25	11710-77100	1	• Bracket, Rear Mount	
26	452390	3	Screw, M8-1.25 x 30 mm Flange	
27	842961	2	Sleeve, Alignment	
28	4173062	1	Adapter, Transmission	
29	838602	2	Screw, M10-1.5 x 50 mm Hex Head	
30	452393	5	Screw, M8-1.25 x 60 mm Flange	
31	303269	2	Lockwasher, 7/16	
32	4174281	1	Mount, Transmission	See 14.1
33	800949	1	Screw, M10-1.25 x 50 mm Socket	
34	800948	1	Screw, M10-1.25 x 35 mm Socket	

> Change from previous revision

24.1 Gas Engine and MT Mounting

Serial No. 84067 All
Serial No. 84069 All

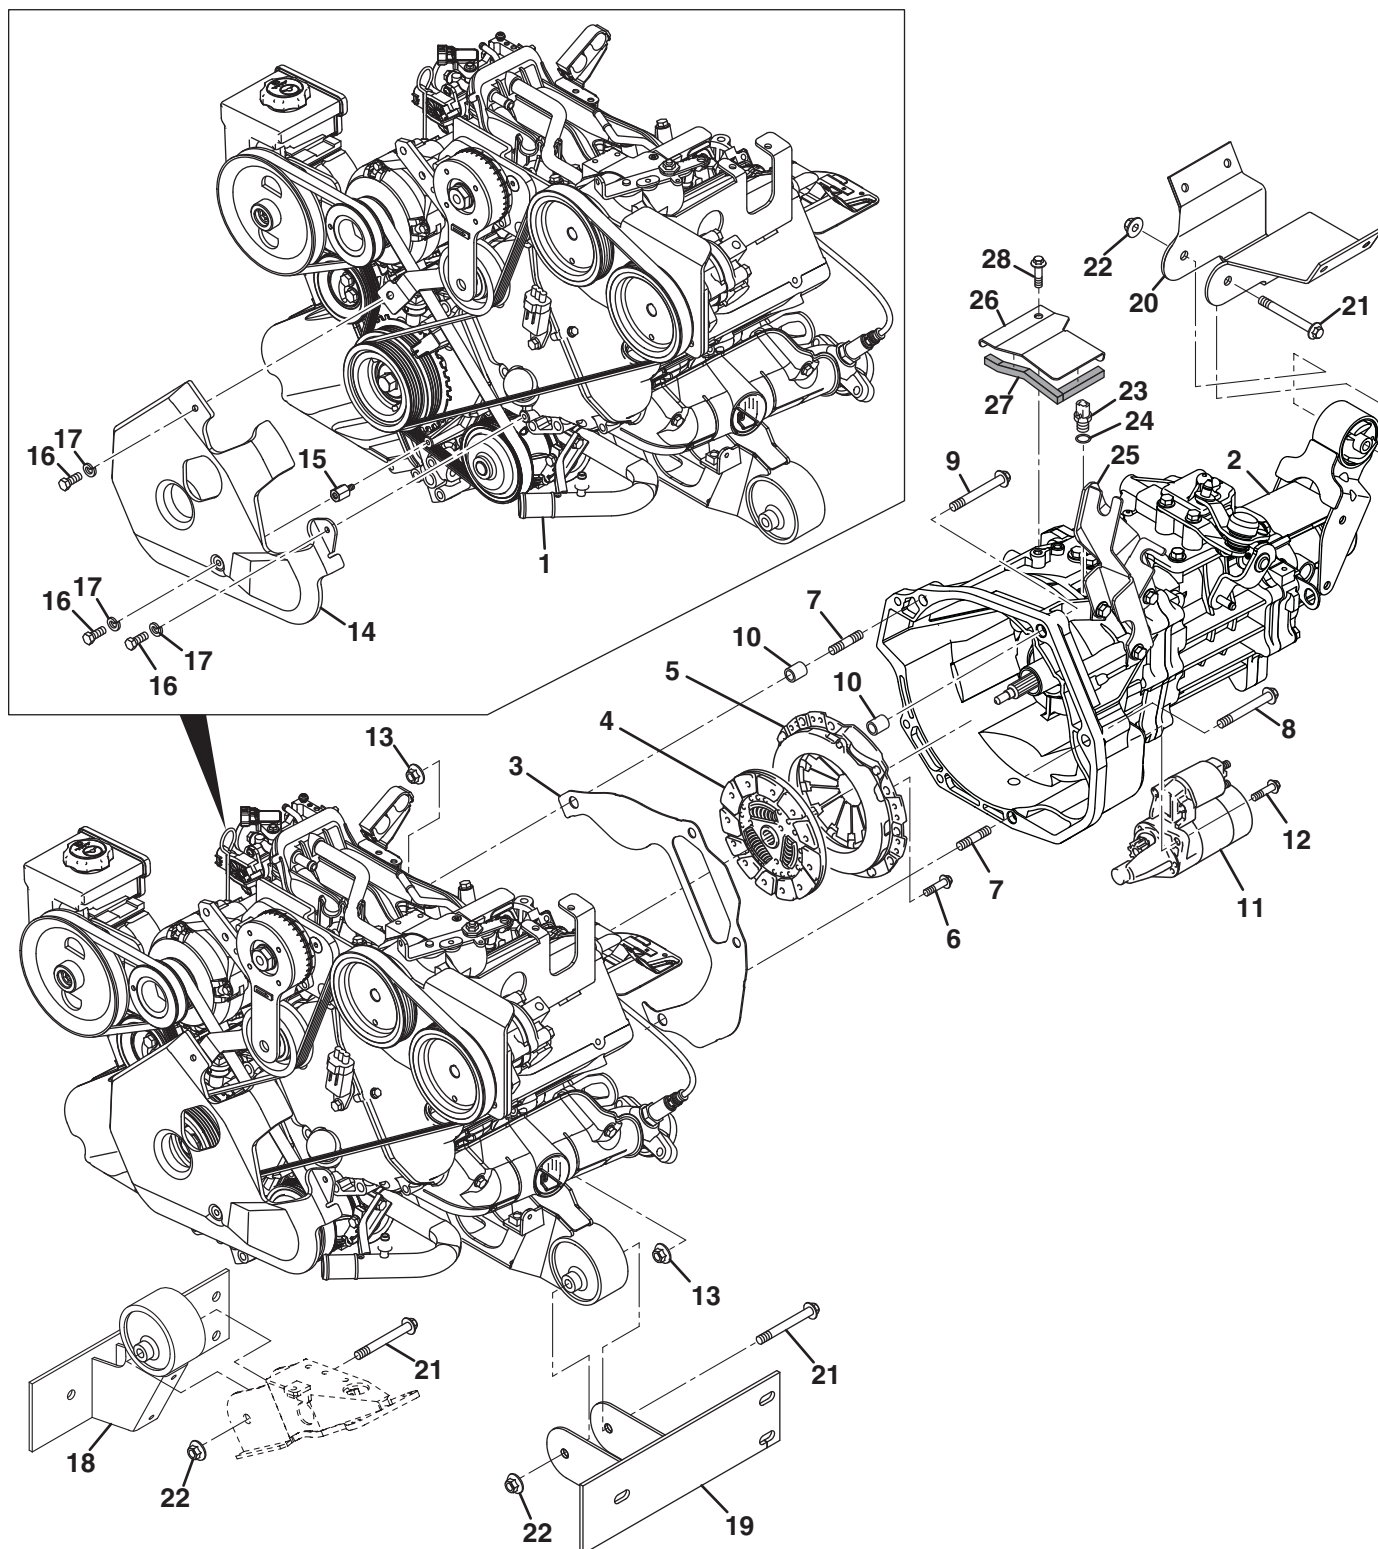


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Engine Assembly	See 27.1
2	N/S	1	Manual Transmission	Order with engine
3	4140899	1	Plate, Clutch Housing	Limited Availability
4	2702548	1	Clutch Disc and Pressure Plate Set	
5	4117900	1	• Pressure Plate	
6	2702547	6	Screw, M8-1.25 x 16 mm Lockwasher	
7	2702688	2	Stud, M10-1.25 x 65 mm	
8	2702687	1	Screw, M10-1.25 x 75 mm Flange	
9	2702686	1	Screw, M10-1.25 x 55 mm Flange	
10	2702690	2	Alignment Pins	
11	4148360	1	Starter, Manual Transmission	
12	2702470	2	Screw, M8-1.25 x 30 mm Hex Flange	
13	2702689	2	Nut, M10-1.25 Hex Flange	
14	4233440	2	Cover, Belt	
15	4235369	1	Standoff, M6-1 x 25 mm	
16	450169	3	Screw, M6-1 x 14 mm Hex Head	
17	450410	3	Lockwasher, M6	
18	894998.7	1	Left Engine Mount	See 14.1
19	2701697.7	1	Right Engine Mount	See 14.1
20	4179803	1	Transmission Mount	See 14.1
21	452405	3	Screw, M10-1.5 x 80 mm Flange	Cut into two pieces. One 4-1/2 in. (114 mm), one 2-1/4 in. (57 mm)
22	450454	3	Nut, M10-1.5 Hex Flange	
23	4138391	1	Switch, Reverse	
24	4148082	1	O-Ring	
25	4142772	1	Bracket, Cable Mounting	
26	4203381	1	Cover, Vent Hole	
27	4203360	1	Seal	
28	452389	1	Screw, M8-1.25 x 25 mm Hex Flange	

> Change from previous revision

25.1 Gas Engine and AT Mounting

Serial No. 84068 All

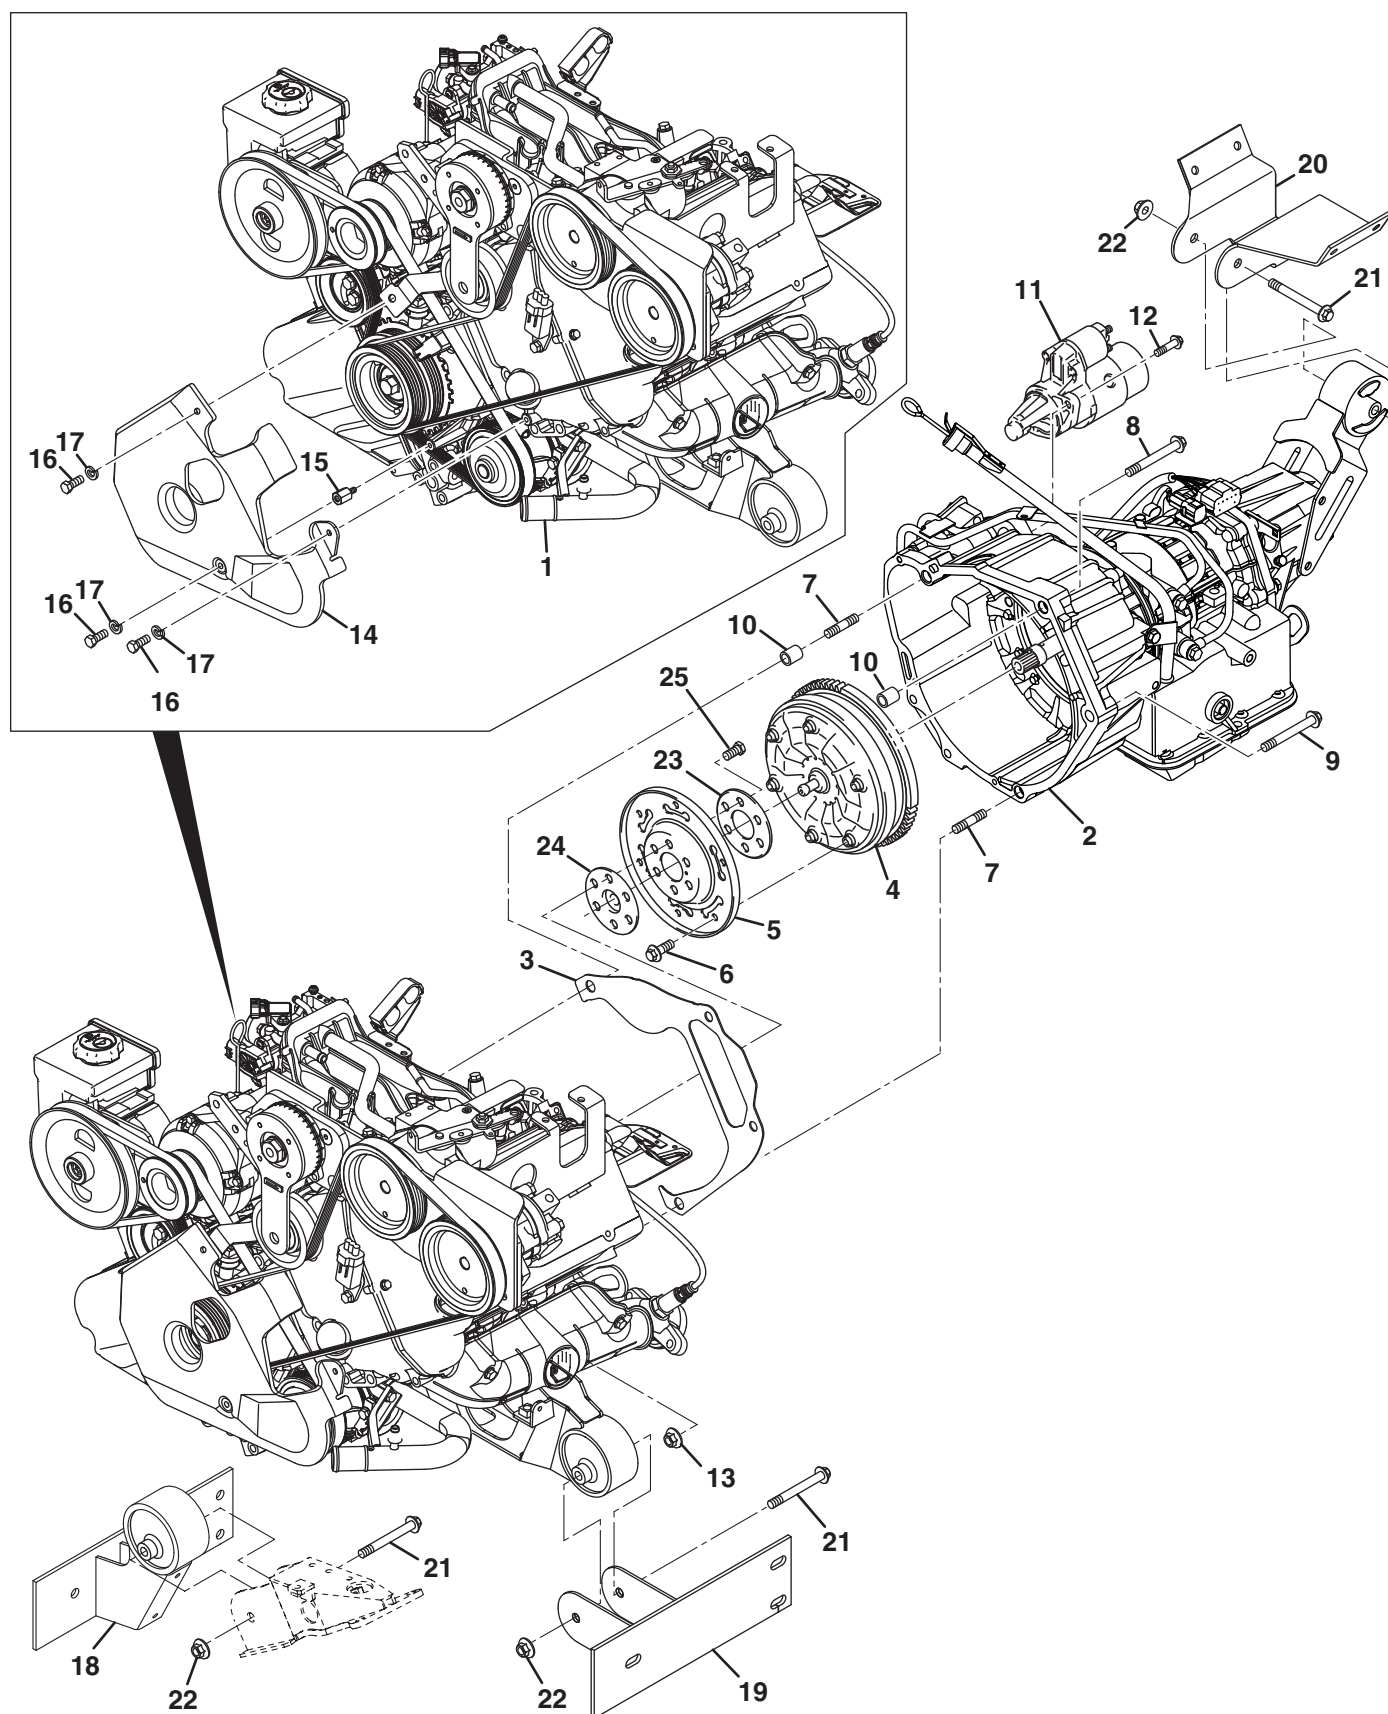


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Engine Assembly	See 27.1
2	4148212	1	Automatic Transmission	
3	4140900	1	Plate, Transmission Housing	
4	4148213	1	Torque Converter	
5	4120097	1	Plate, Drive	
6	4148065	6	Screw, M8-1.25 x 9.5 mm Flange	
7	2702688	2	Stud, M10-1.25 x 65 mm	
8	2702686	1	Screw, M10-1.25 x 55 mm Flange	
9	2702756	1	Screw, M10-1.25 x 50 mm Flange	
10	2702690	2	Alignment Pins	
11	4148361	1	Starter, Automatic Transmission	
12	2702470	2	Screw, M8-1.25 x 30 mm Hex Flange	
13	2702689	2	Nut, M10-1.25 Hex Flange	
14	4233440	2	Cover, Belt	
15	4235369	1	Standoff, M6-1 x 25 mm	
16	450169	3	Screw, M6-1 x 14 mm Hex Head	
17	450410	3	Lockwasher, M6	
18	894998.7	1	Left Engine Mount	See 14.1
19	2701697.7	1	Right Engine Mount	See 14.1
20	4179803	1	Transmission Mount	See 14.1
21	452405	3	Screw, M10--1.5 x 80 mm Flange	
22	450454	3	Nut, M10-1.5 Hex Flange	
23	4120098	1	Plate, Rear Drive	
24	4120096	1	Flange, Drive Plate	
25	4119955	6	Screw, M10-1.25 x 18.5 mm	

> Change from previous revision

26.1 Diesel Engine and Clutch

Serial No. 84063 - 1651~xxxx
Serial No. 84064 - 1651~xxxx

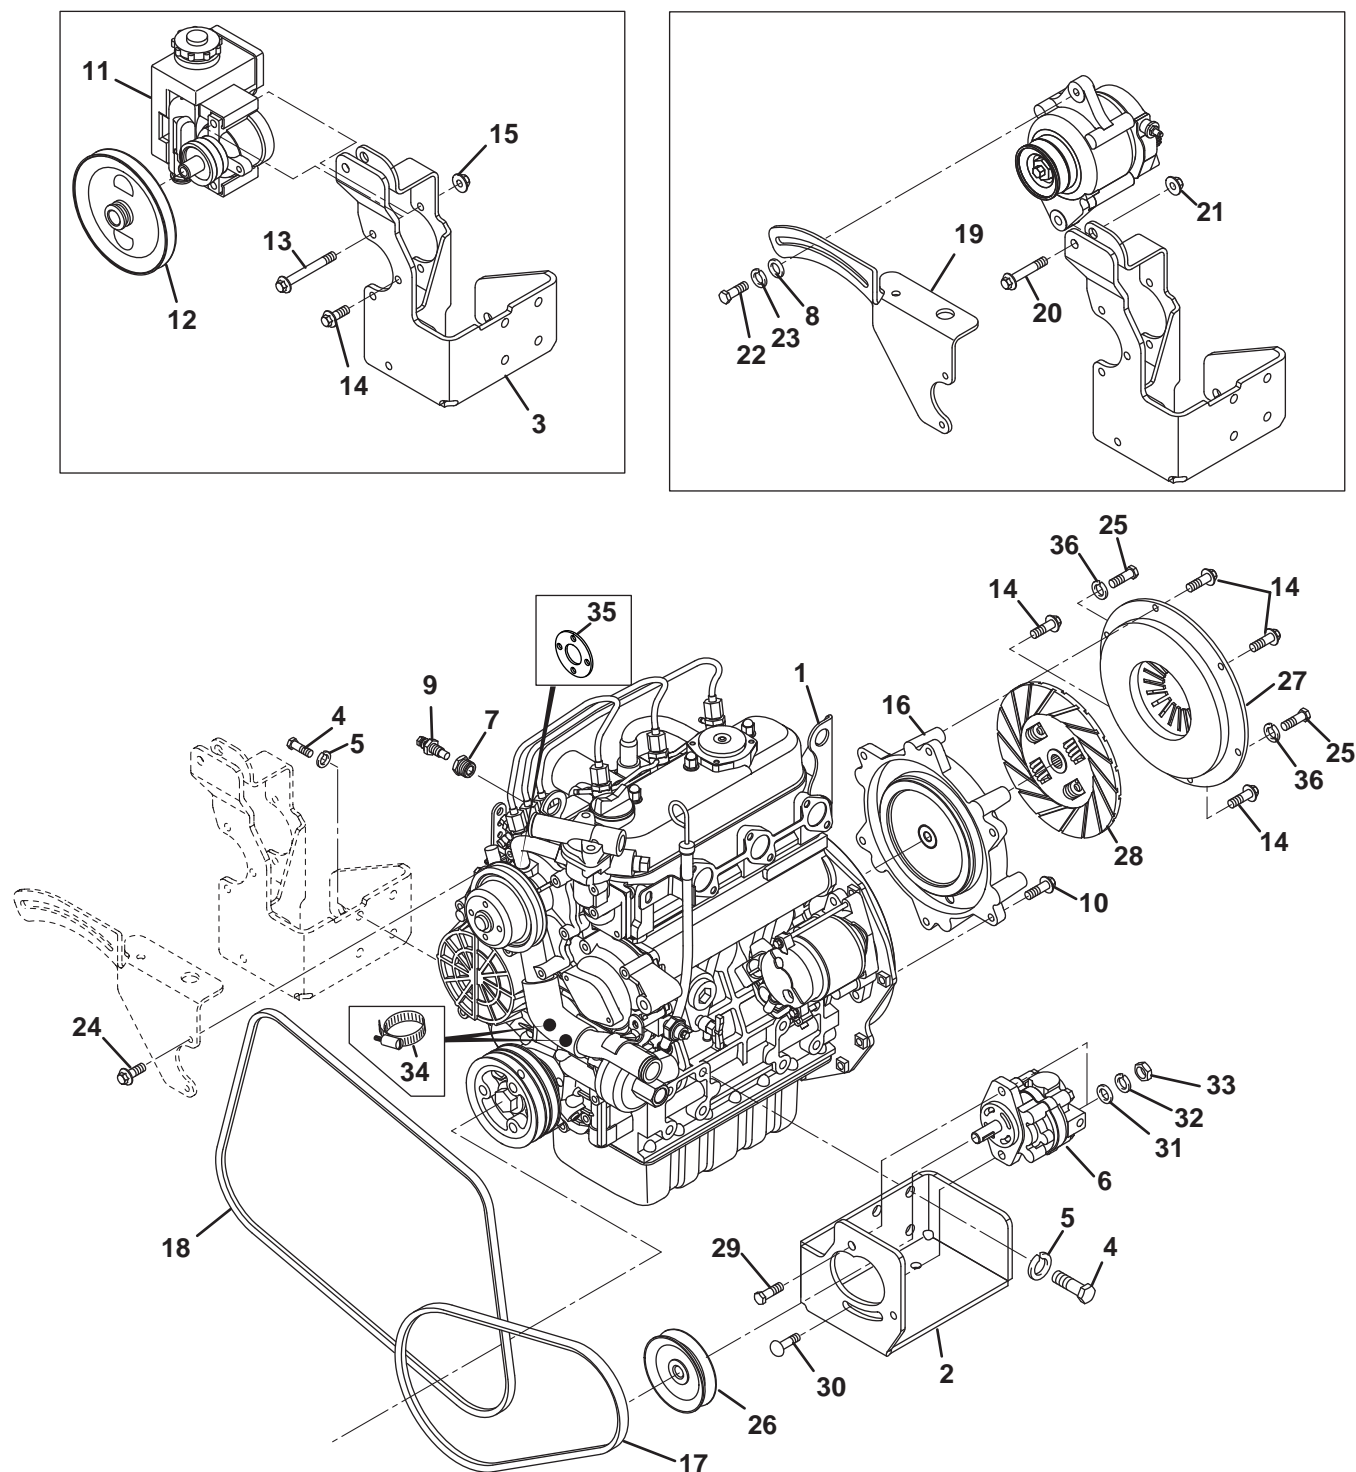


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4173201	1	Engine, Kubota D1105 E3B	
	4113986	1	• Engine Oil Filter	
	4183623	1	• Alternator	
2	4174200	1	Bracket, Hydraulic Pump	
3	4174440	1	Mount, Right Side Engine	
4	800547	8	Screw, M10-1.25 x 20 mm Flange	
5	303269	8	Lockwasher, 7/16	
6	887994	1	Pump, Hydraulic	See 40.1
7	4174260	1	Reducer, 3/8 NPSF to 1/8 BPT	
8	103867	1	Flat Washer, 5/16	
9	843857	1	Temperature Sender	
10	452389	9	Screw, M8-1.25 x 25 mm Flange	
11	892534	1	Pump, Power Steering	See 20.1
12	600993	1	Pulley, 5.8 in. Power Steering	
13	452395	2	Screw, M8-1.25 x 80 mm Flange	
14	452388	5	Screw, M8-1.25 x 20 mm Flange	
15	450453	2	Nut, M8-1.25 Flange	
16	4173262	1	Ring, Pressure Plate	
17	4117092	1	Belt, Hydraulic Pump	
18	4175560	1	Belt, Alternator - Power Steering	
19	4174282	1	Bracket, Alternator Adjusting	
20	452402	1	Screw, M10-1.5 x 50mm Flange	
21	450454	1	Nut, M10-1.5 Flange	
22	361005	1	Screw, M8-1.25 x 25 mm Hex Head	
23	306325	3	Lockwasher, 5/16	
24	2500917	2	Screw, M6-1 x 25 mm Flange	Included with Engine
25	09111-08035	2	Screw, M8-1.25 Special	Included with Transmission
26	4173980	1	Pulley, Hydraulic Pump Drive	
27	22100-85200	1	Cover, Clutch	Included with Transmission
28	22400-85141	1	Disc, Clutch	Included with Transmission
29	306835	1	Screw, 3/8-16 x 1-1/4 in. Hex Head	
30	800073	1	Carriage Bolt, 3/8-16 x 1-1/4 in.	
31	306981	2	Flat Washer, 3/8	
32	120177	2	Lockwasher, 3/8	
33	306562	2	Nut, 3/8-16 Hex	
34	820899	2	Clamp, Hose	Used to protect hose from belt
35	4186780	1	Plate, Spacer	Located behind water pump pulley
36	450422	2	Lockwasher, M8	

> *Change from previous revision*

26.2 Diesel Engine and Clutch

Serial No. 84063 - xxxx and Up
Serial No. 84064 - xxxx and Up

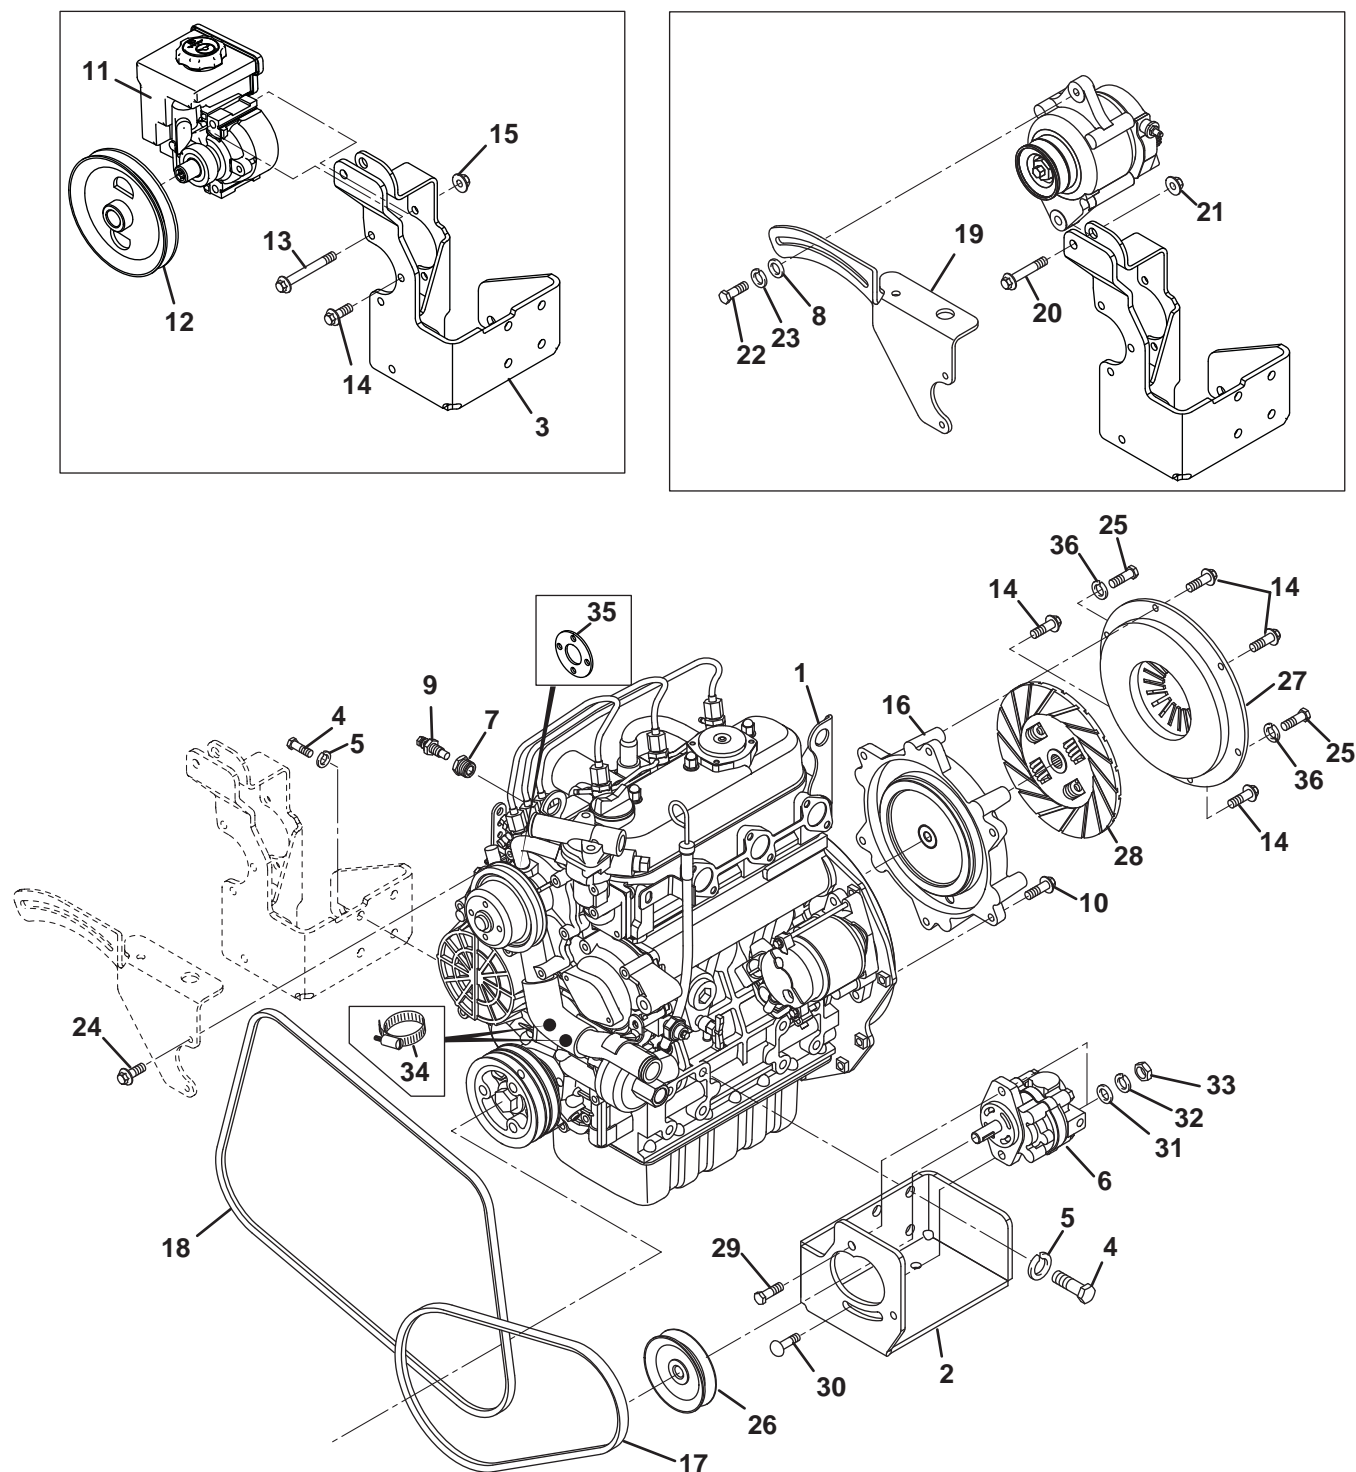

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4173201	1	Engine, Kubota D1105 E3B	See 40.1
	4113986	1	• Engine Oil Filter	
	4183623	1	• Alternator	
2	4174200	1	Bracket, Hydraulic Pump	
3	4209665	1	Mount, Right Side Engine	
4	800547	8	Screw, M10-1.25 x 20 mm Flange	
5	303269	8	Lockwasher, 7/16	
6	887994	1	Pump, Hydraulic	
7	4174260	1	Reducer, 3/8 NPSF to 1/8 BPT	
8	103867	1	Flat Washer, 5/16	
9	843857	1	Temperature Sender	See 20.1
10	452389	9	Screw, M8-1.25 x 25 mm Flange	
11	4216305	1	Pump, Power Steering	
12	4210205	1	Pulley, 5.8 in. Power Steering	
13	452395	2	Screw, M8-1.25 x 80 mm Flange	
14	452388	5	Screw, M8-1.25 x 20 mm Flange	
15	450453	2	Nut, M8-1.25 Flange	
16	4173262	1	Ring, Pressure Plate	
17	4117092	1	Belt, Hydraulic Pump	
18	4175560	1	Belt, Alternator - Power Steering	Included with Engine Included with Transmission Included with Transmission Included with Transmission Used to protect hose from belt Located behind water pump pulley
19	4174282	1	Bracket, Alternator Adjusting	
20	452402	1	Screw, M10-1.5 x 50mm Flange	
21	450454	1	Nut, M10-1.5 Flange	
22	361005	1	Screw, M8-1.25 x 25 mm Hex Head	
23	306325	3	Lockwasher, 5/16	
24	2500917	2	Screw, M6-1 x 25 mm Flange	
25	09111-08035	2	Screw, M8-1.25 Special	
26	4173980	1	Pulley, Hydraulic Pump Drive	
27	22100-85200	1	Cover, Clutch	
28	22400-85141	1	Disc, Clutch	
29	306835	1	Screw, 3/8-16 x 1-1/4 in. Hex Head	
30	800073	1	Carriage Bolt, 3/8-16 x 1-1/4 in.	
31	306981	2	Flat Washer, 3/8	
32	120177	2	Lockwasher, 3/8	
33	306562	2	Nut, 3/8-16 Hex	
34	820899	2	Clamp, Hose	
35	4186780	1	Plate, Spacer	




> Change from previous revision

27.1 Suzuki Gas Engine

Serial No. 84067 All



Serial No. 84068 All

Serial No. 84069 All

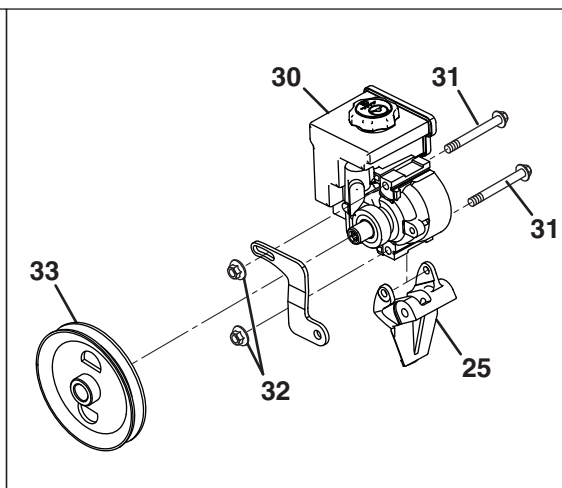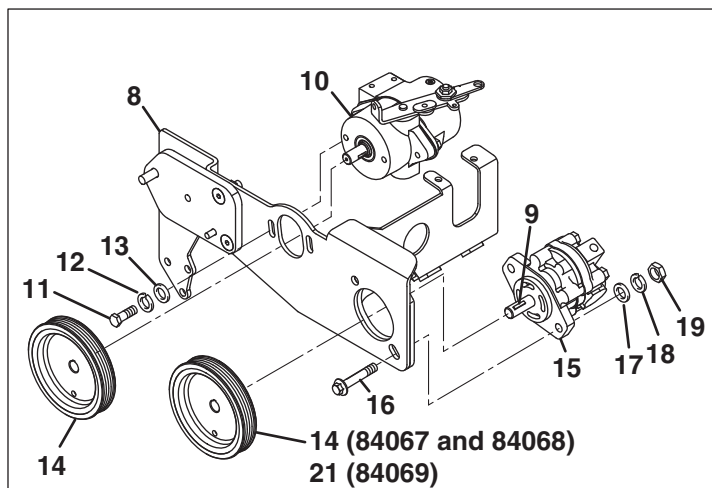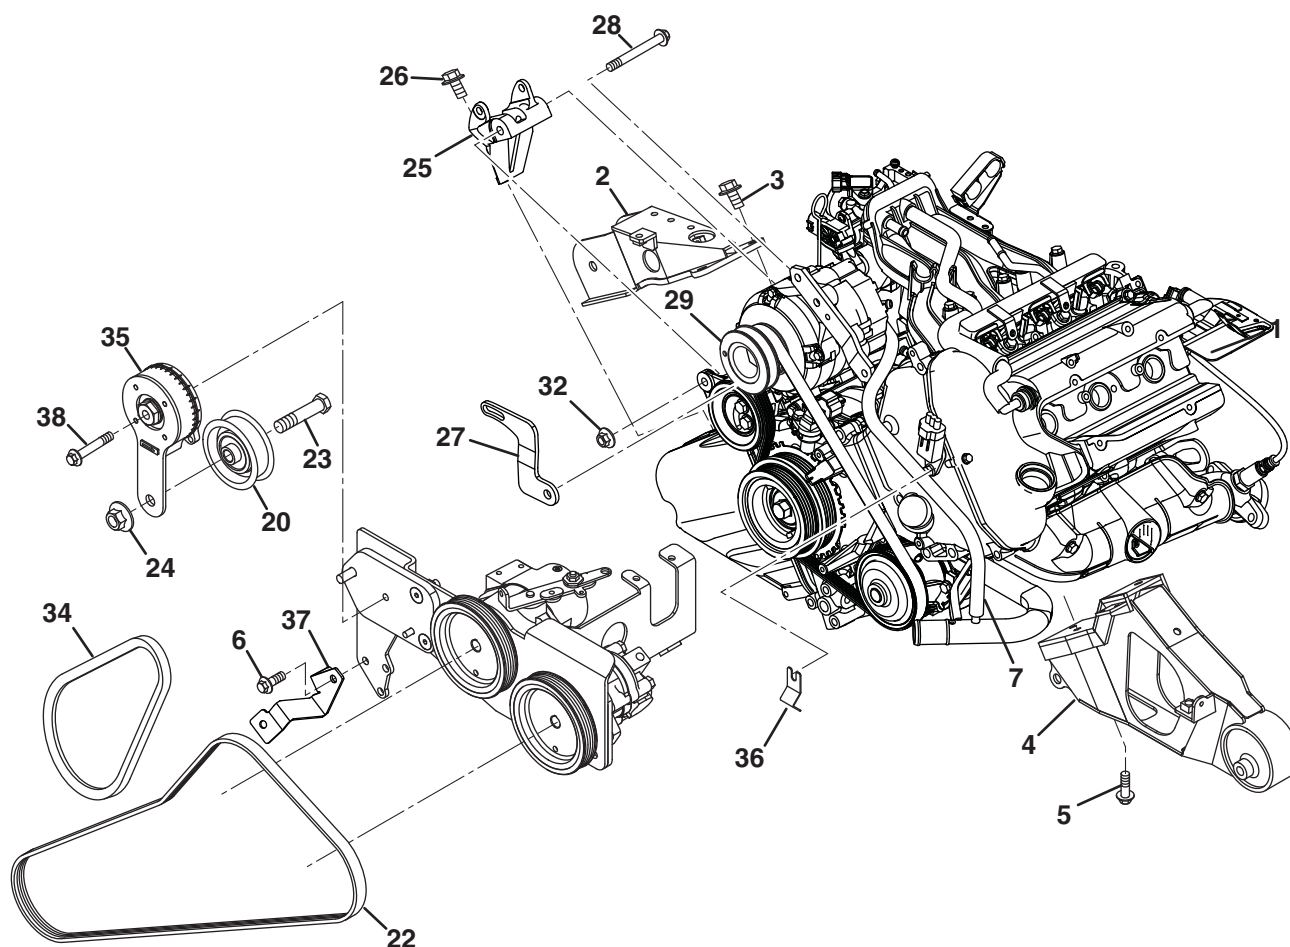

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	N/S	1	Suzuki K6 Engine	See Engine Parts Manual
	2701908	1	• Oil Filter	
	4140919	1	• Belt, Water Pump and Alternator	
2	4120017	1	• Right Side Engine Mount	
3	4140905	3	• Bolt, Right Side Engine Mount	
4	4120018	1	• Left Side Engine Mount	
5	2701827	4	• Bolt, Left Side Engine Mount	
6	2702469	3	• Bolt	
7	830425	AR	Fuel Hose, 1/4 in.	25 Foot Roll, Cut to 24 Inches
8	4188387	1	Bracket, Governor	See 34.1
9	2702249	1	Key, Woodruff 1/8 x 1/2 in.	
10	4141425	1	Governor	See 32.1
11	306450	2	Screw, 5/16-18 x 3/4 in. Hex Head	
12	306325	2	Lockwasher, 5/16	
13	548155	2	Flat Washer, 5/16	
14	4139288	AR	Pulley, 4 Groove Micro-V 4.4 in. Dia.	Includes two set screws
15	887994	1	Pump, Hydraulic	See 40.1
16	13437G5	2	Screw, 3/8-16 x 1-1/2 in. Whizlock	
17	306981	2	Flat Washer, 3/8	
18	120177	2	Lockwasher, 3/8	
19	306562	2	Nut, 3/8-16 Hex	
20	4144332	1	Pulley, 2-3/4" Idler	
21	4144005	1	Pulley, 4 Groove Micro-V 4.06 in. Dia.	Used on 84069 Only
22	4139351	1	Belt, 52.8 in. Micro-V	Used on 84067 and 84068
22	4144006	1	Belt, 52.5 in. Micro-V	Used on 84069
23	312176	1	Screw, 1/2-13 x 1-3/4 in. Hex Head	
24	800602	1	Nut, 1/2-13 Nylon Insert	
25	4231362	1	Bracket, Power Steering Pump	
26	452378	1	Screw, M6-1 x 20 mm Hex Flange	
27	4231600	1	Bracket, Power Steering Adjuster	Mounts using lower alternator bolt
28	452396	1	Screw, M8-1.25 x 90 mm Hex Flange	
29	4149901	1	Pulley, Alternator	
30	4216305	1	Pump, Power Steering	See 20.1
31	452395	2	Screw, M8-1.25 x 80 mm Hex Flange	
32	450453	3	Nut, M8-1.25 Hex Flange	
33	4210205	1	Pulley, 5.80 in. Diameter	
34	4235370	1	Belt, 7/16 x 26-1/2 in. V	Alternator and Power Steering
35	4143072	1	Tensioner, Rotary	
36	4146490	1	Plate, Hose Clamp	
37	4234080	1	Bracket, Belt Cover	
38	4150138	1	Screw, 3/8-16 x 2-1/4 in. Hex Flange	

> Change from previous revision

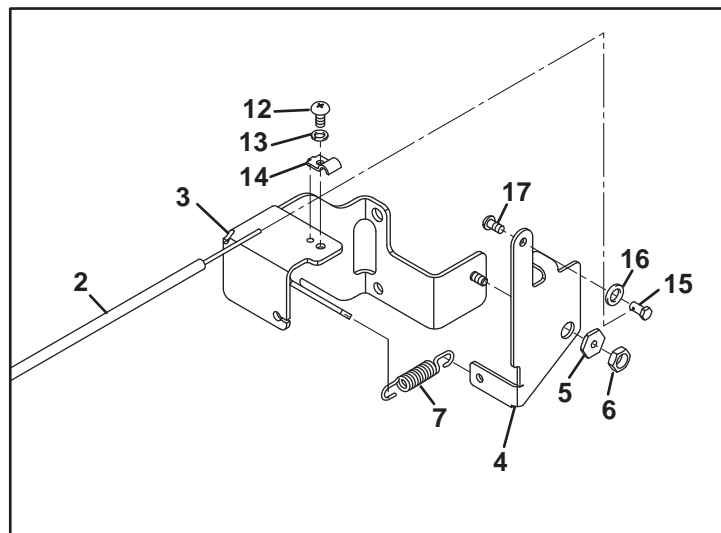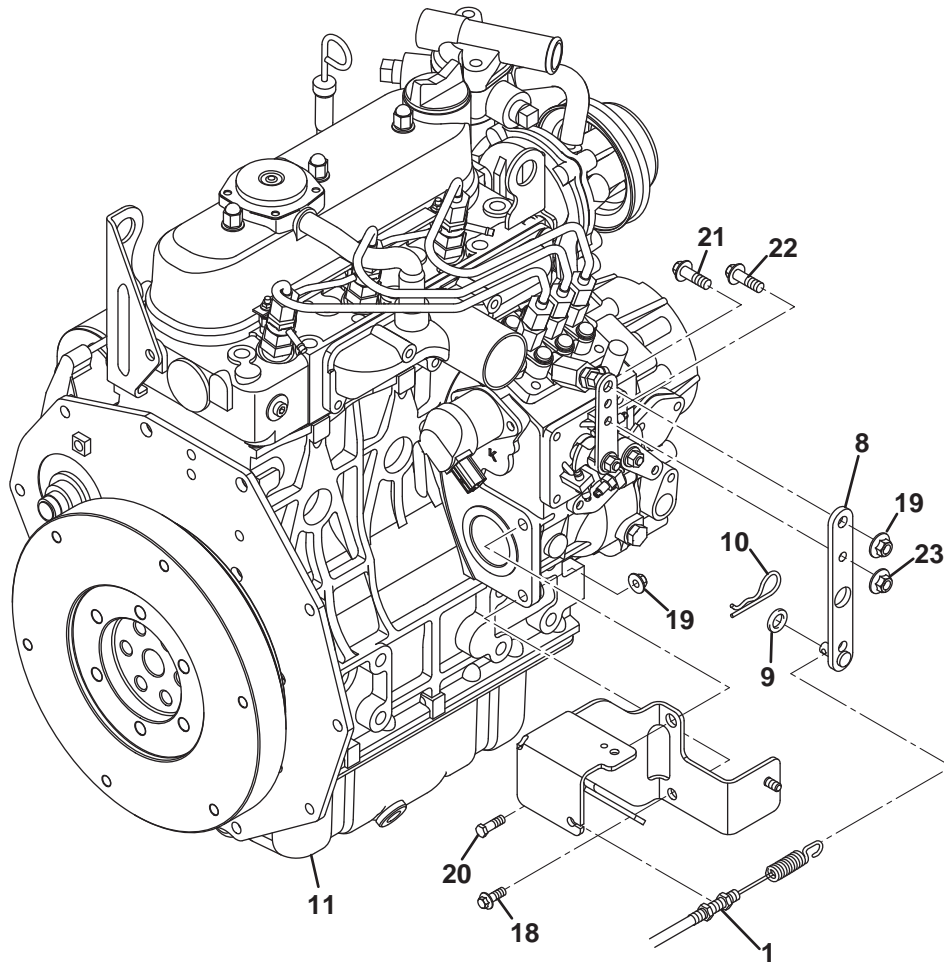


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	2703683	1	Throttle Cable	See 5.1 for other end of cable
2	844130	1	Cable, Governor Control	See 5.1 for other end of cable
3	4174720	1	Bracket, Throttle	
4	4174662	1	Lever, Governor	
5	835271	1	Nut, 1/4-20 Lever Pivot	
6	130728	1	Nut, 1/4-20 Hex Jam	
7	840473	1	Spring, Governor Lever	
8	4175021	1	Lever, Throttle	
9	103867	1	Flat Washer, 5/16	
10	821164	1	Hair Pin	
11	REF	1	Kubota Diesel Engine	See 26.1
12	800271	1	Screw, #10-24 x 1/2 in. Pan Head	
13	120052	1	Lockwasher, #10	
14	111898	1	Clamp, Cable	
15	831888	1	Swivel	
16	831889	1	Washer, Swivel	
17	831890	1	Screw, Swivel Throttle Cable	
18	452390	1	Screw, M8-1.25 x 30 mm Flange	
19	450453	2	Nut, M8-1.25 Flange	
20	800547	1	Screw, M8-1.25 x 16 mm Hex Head	
21	452388	1	Screw, M8-1.25 x 20 mm Flange	
22	452738	1	Screw, M6-1 x 20 mm Flange	
23	450452	1	Nut, M6-1 Flange	

> Change from previous revision


29.1 Diesel Engine Air Filter

Serial No. 84063 All
Serial No. 84064 All

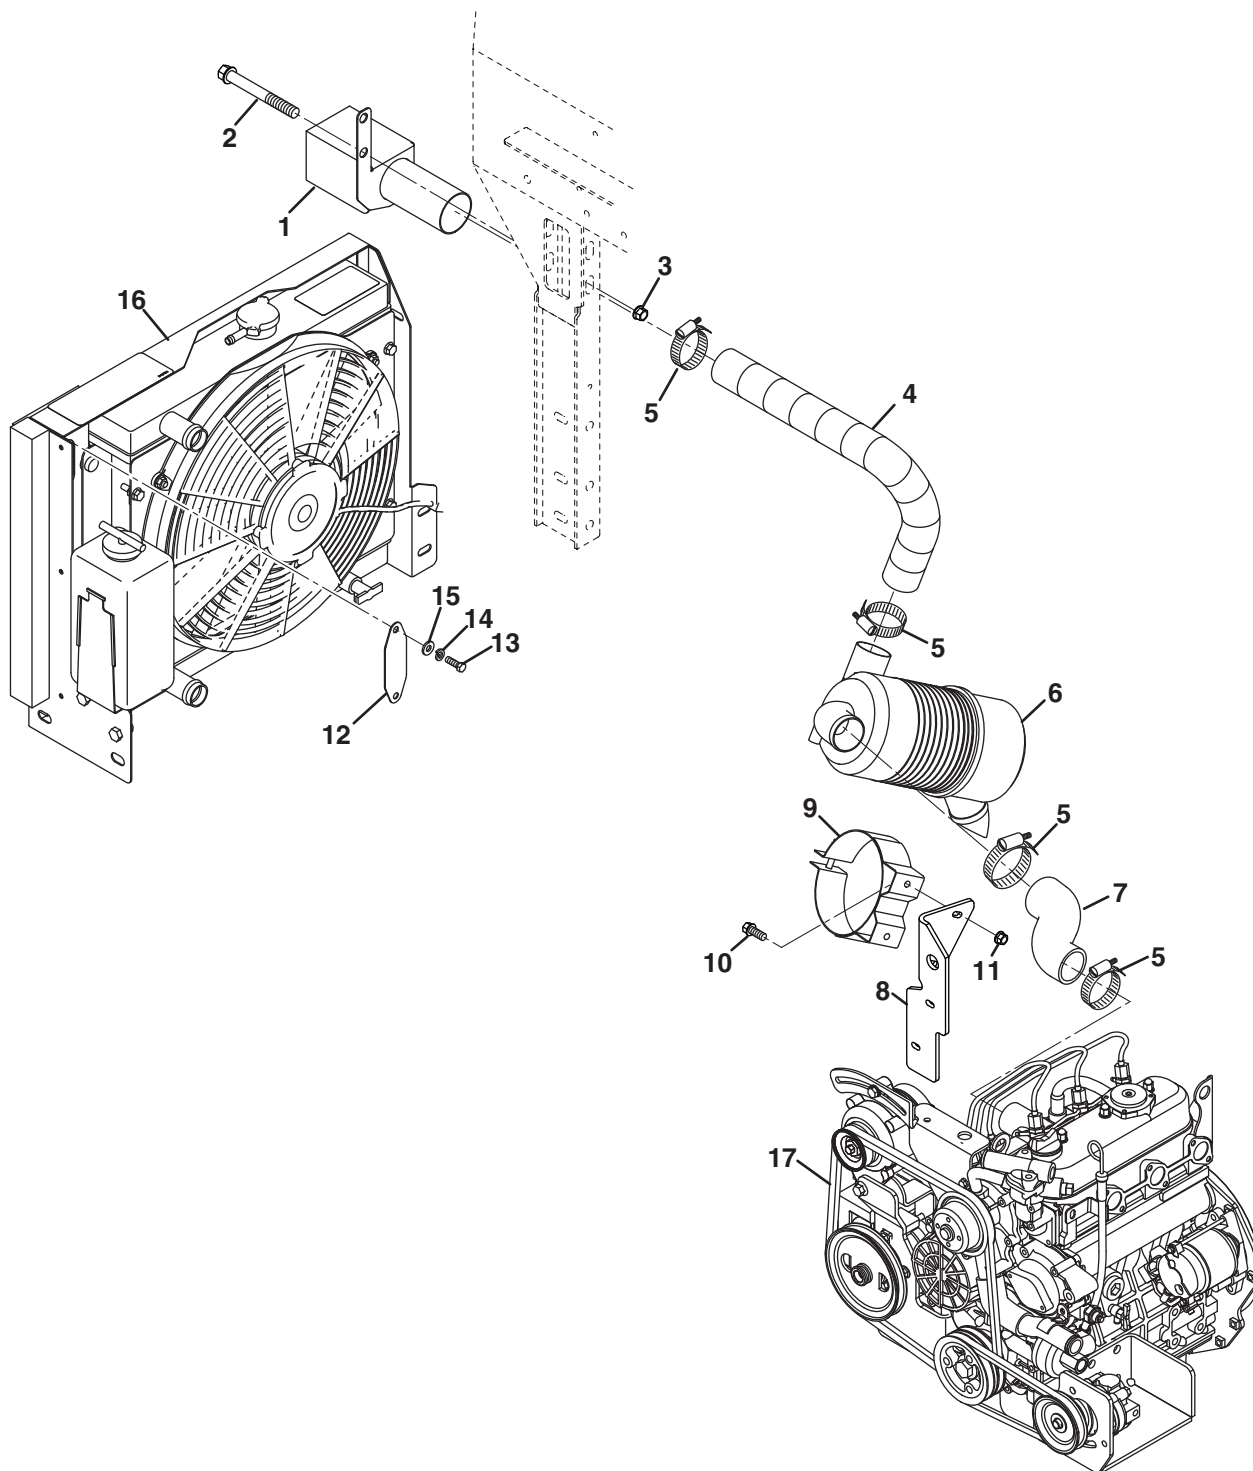

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	601585	1	Box, Air	See 23.1 for Mounting
2	452405	2	Screw, M10-1.5 x 80 mm Hex Flange	
3	450454	2	Nut, M10-1.5 Hex Flange	
4	36092-G01	1	Hose, 2 in. x 16 in. High Temp Air	
5	11391G7	4	Clamp, Hose	
6	3001965	1	Air Filter	
	5000919	1	• Element, Air Filter	
	5000920	1	• Cover	
	5000914	1	• Vactuato Valve	
7	4174620	1	Hose, Intake	
8	4174285	1	Bracket, Air Fllter Mount	
9	3001388	1	Bracket, Air Fllter	
10	400184	1	Screw, 5/16-18 x 3/4 in. Hex Head	
11	445795	1	Nut, 5/16-18 Spiralock Flange	
12	601595	1	Plate, Blockoff	
13	300646	2	Screw, 1/4-20 x 3/4 in. Hex Head	
14	306396	2	Lockwasher, 1/4	
15	308090	2	Flat Washer, 1/4	
16	REF	1	Radiator Assembly	See 21.1
17	REF	1	Diesel Engine Assembly	See 26.1 or 26.2

> *Change from previous revision*

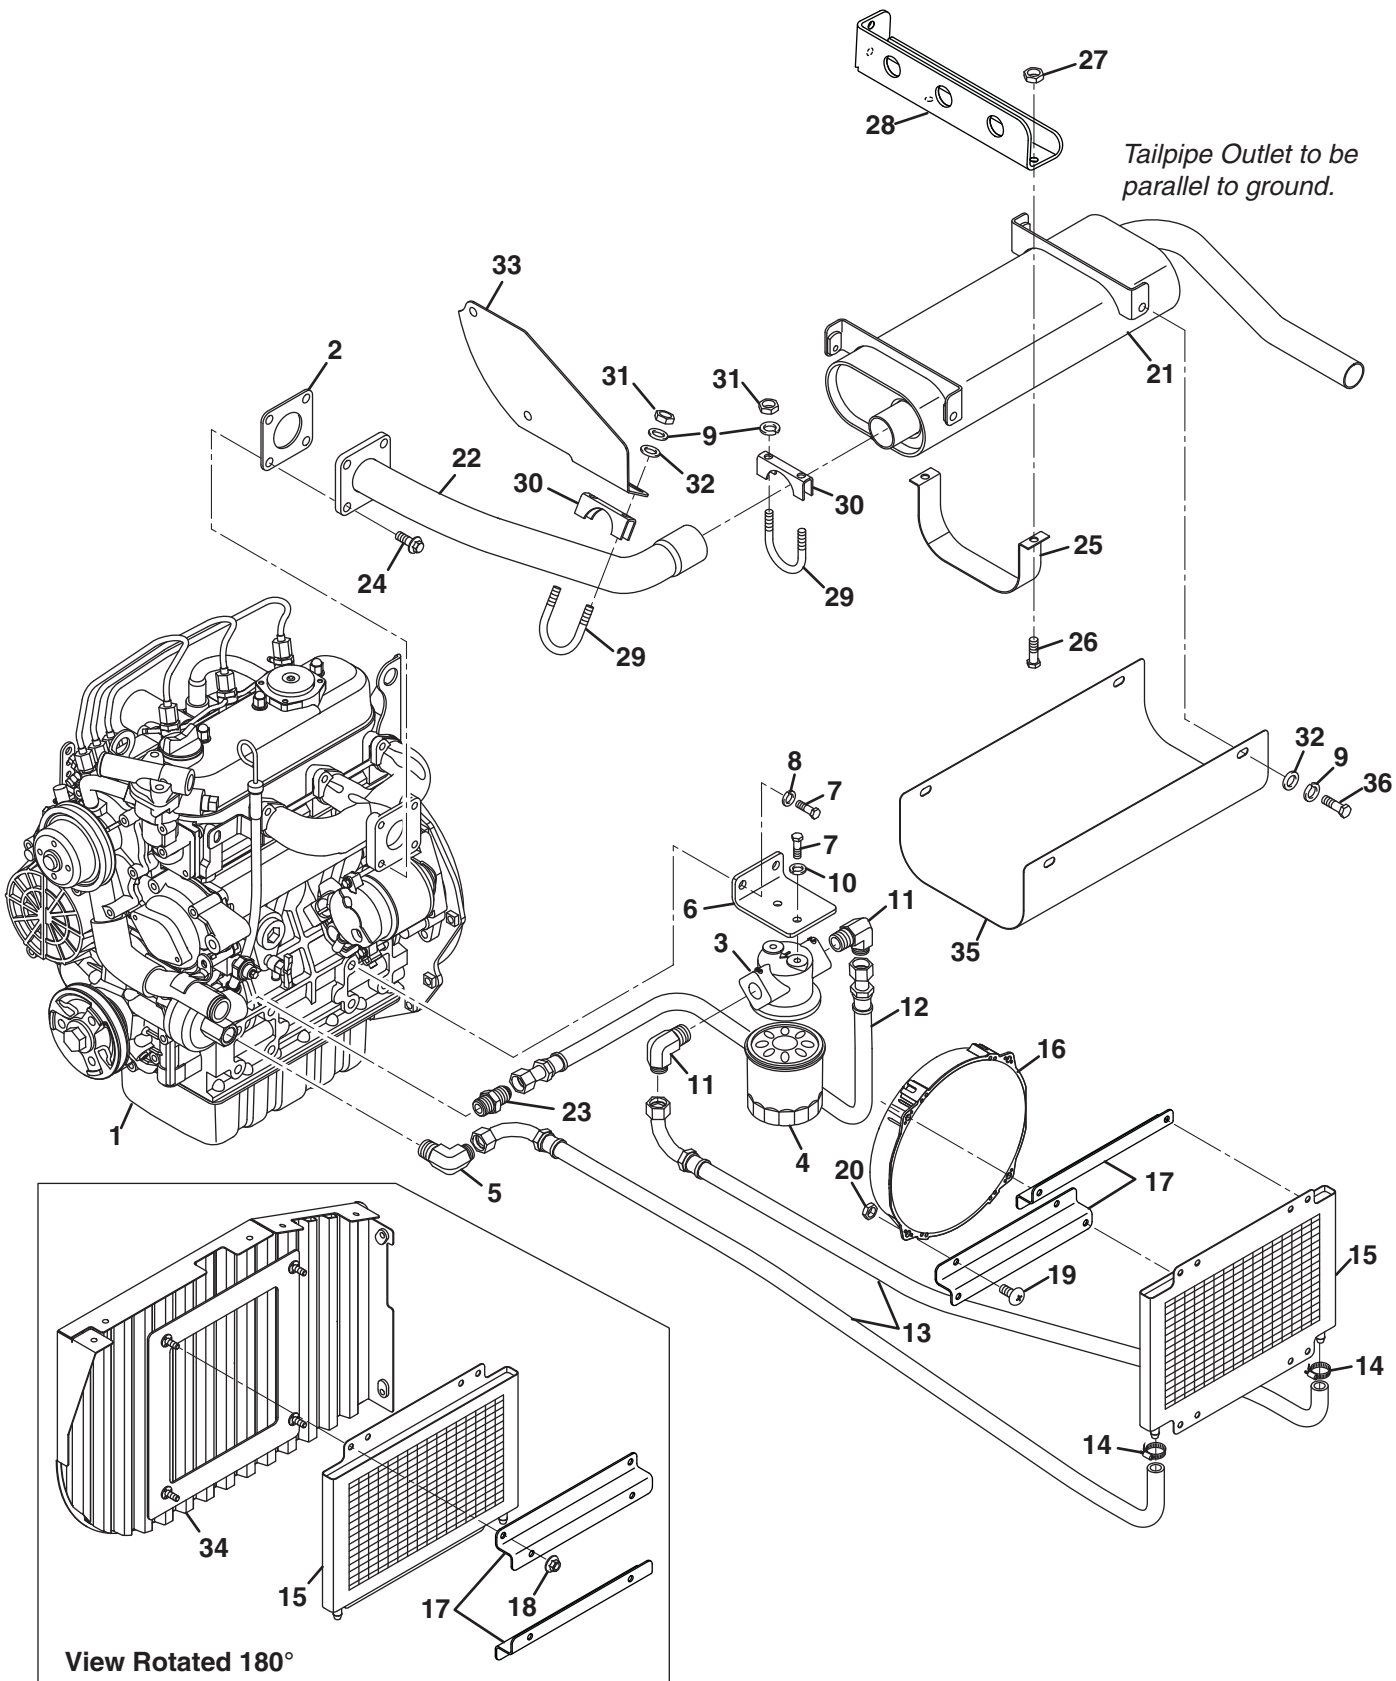


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Kubota Engine	See 26.1
2	553020	1	• Gasket, Exhaust	
3	4183634	1	• Head, Remote Filter	
4	4113986	1	• Engine Oil Filter	
5	4190701	1	Fitting, 90°	
6	4174290	1	Bracket, Remote Filter	
7	800547	4	Screw, M10-1.25 x 20 mm Hex Head	
8	303269	2	Lockwasher, 7/16	
9	306325	8	Lockwasher, 5/16	
10	120177	2	Lockwasher, 3/8	
11	4175620	2	Fitting, 90°	
12	4175561	1	Hose, Remote Oil Filter	
13	4175562	2	Hose, Remote Oil Cooler	
14	48540-01	2	Clamp, Hose	
15	4176960	1	Remote Oil Cooler	
16	4177560	1	Fan, 7-1/2 in. Push	
17	4185240	2	Bracket, Fan Mount	
18	548910	4	Nut, 1/4-20 Hex Flange	
19	800017	4	Screw, 1/4-20 x 1 in. Pan Head	
20	443102	4	Nut, 1/4-20 Hex	
21	4179161	1	Muffler	
22	4174560	1	Tube, Exhaust Inlet	
23	4190700	1	Fitting, Straight	
24	452389	4	Screw, M8-1.25 x 25 mm Flange	
25	838295.8	1	Strap, Muffler Hanger	
26	450193	2	Screw, M8-1.25 x 30 mm Hex Head	
27	64237-05	2	Locknut, M8-1.25	
28	4191140	1	Bracket, Muffler	See 23.1
	841982	2	Clamp, 1-1/2 in. Exhaust	
29	N/S	1	• U-Bolt	
30	N/S	1	• Bracket	
31	N/S	2	• Nut, 5/16-18 Hex	
32	103867	6	Flat Washer, 5/16	
33	4174286	1	Cover, Starter Hole	See 23.1
34	4179842	1	Left Side Screen	See 14.1
35	4119867.8	1	Shield, Muffler	
36	306450	4	Screw, 5/16-18 x 3/4 in. Hex Head	
37	306325	8	Lockwasher, 5/16	

> Change from previous revision

31.1 Gas Engine Governor Linkage

Serial No. 84067 All
Serial No. 84068 All
Serial No. 84069 All

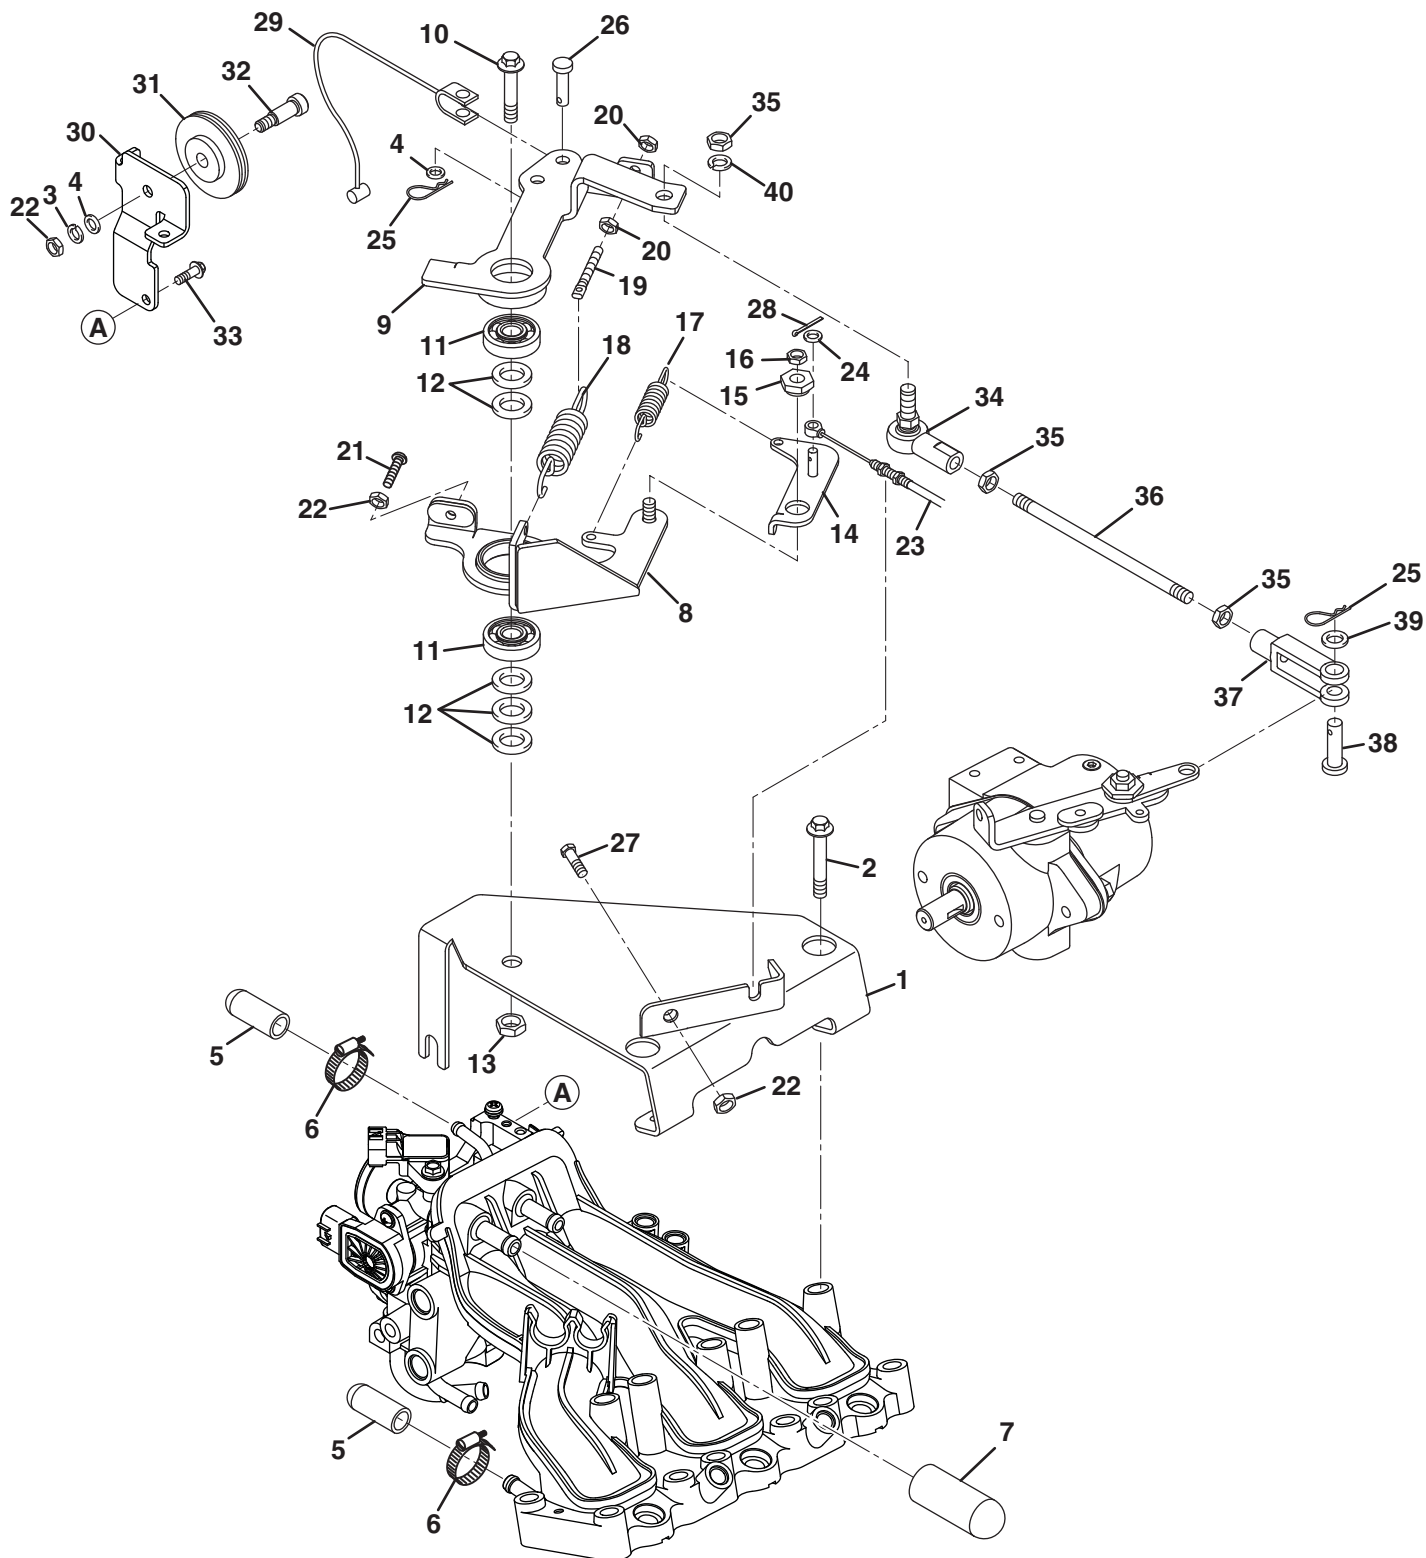

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4139208	1	Plate, Governor	Included with Engine
2	4141031	2	Bolt, Intake Manifold	
3	306396	1	Lockwasher, 1/4	
4	308090	1	Flat Washer, 1/4	
5	845224	2	Plug, Tube	
6	11391G4	2	Clamp, 1/4 in. to 5/8 in. Worm Drive	
7	4144145	1	Plug, 3/8 x 1 in. Tube	
8	2700540	1	Lever, Governor	
9	2700859	1	Lever, Governor Arm	
10	01116G01	1	Screw, M10-1.5 x 40 mm Hex Flange	
11	830140	2	Ball Bearing	
12	306981	5	Flat Washer, 3/8	
13	450454	1	Nut, M10-1.5 Hex Flange	
14	2701129	1	Arm, Throttle	
15	835271	1	Nut, Governor	
16	130728	3	Nut, 1/4-20 Hex Jam	
17	2700335	1	Spring, Governor	
18	2700334	1	Spring, Governor	
19	111893	1	Screw, #10-32 Special	
20	2702244	2	Nut, #10-32 Hex	
21	800024	1	Screw, 1/4-20 x 1-1/2 in. Truss Head	See 5.1
22	306375	3	Nut, 1/4-20 Hex	
23	2703684	1	Throttle Cable	
24	308089	1	Flat Washer, M6	
25	821164	2	Hair Pin, 1/4 x 1-1/8 in.	
26	818395	1	Clevis Pin, 1/4 x 1/2 in.	
27	302288	1	Screw, 1/4-20 x 1 in.	
28	306372	1	Cotter Pin, 3/32 x 1/2 in.	
29	4139209	1	Cable, Throttle	
30	4237525	1	Bracket, Throttle Cable	
31	843013	1	Pulley, Governor	Part of Engine
32	800927	1	Shoulder Bolt, 1/4-20 x 5/8 in.	
33	REF	2	Bolt	
34	831586	1	Ball Joint	
35	306320	3	Nut, 5/16-24 Hex	
36	4139210	1	Rod, Governor	
37	810722	1	Yoke	
38	806703	1	Clevis Pin, 5/16 x 31/32 in.	
39	103867	1	Flat Washer, 5/16	
40	306325	1	Lockwasher, 5/16 Special	


> Change from previous revision

32.1 Gas Engine Governor

Serial No. 84067 All

Serial No. 84068 All

Serial No. 84069 All

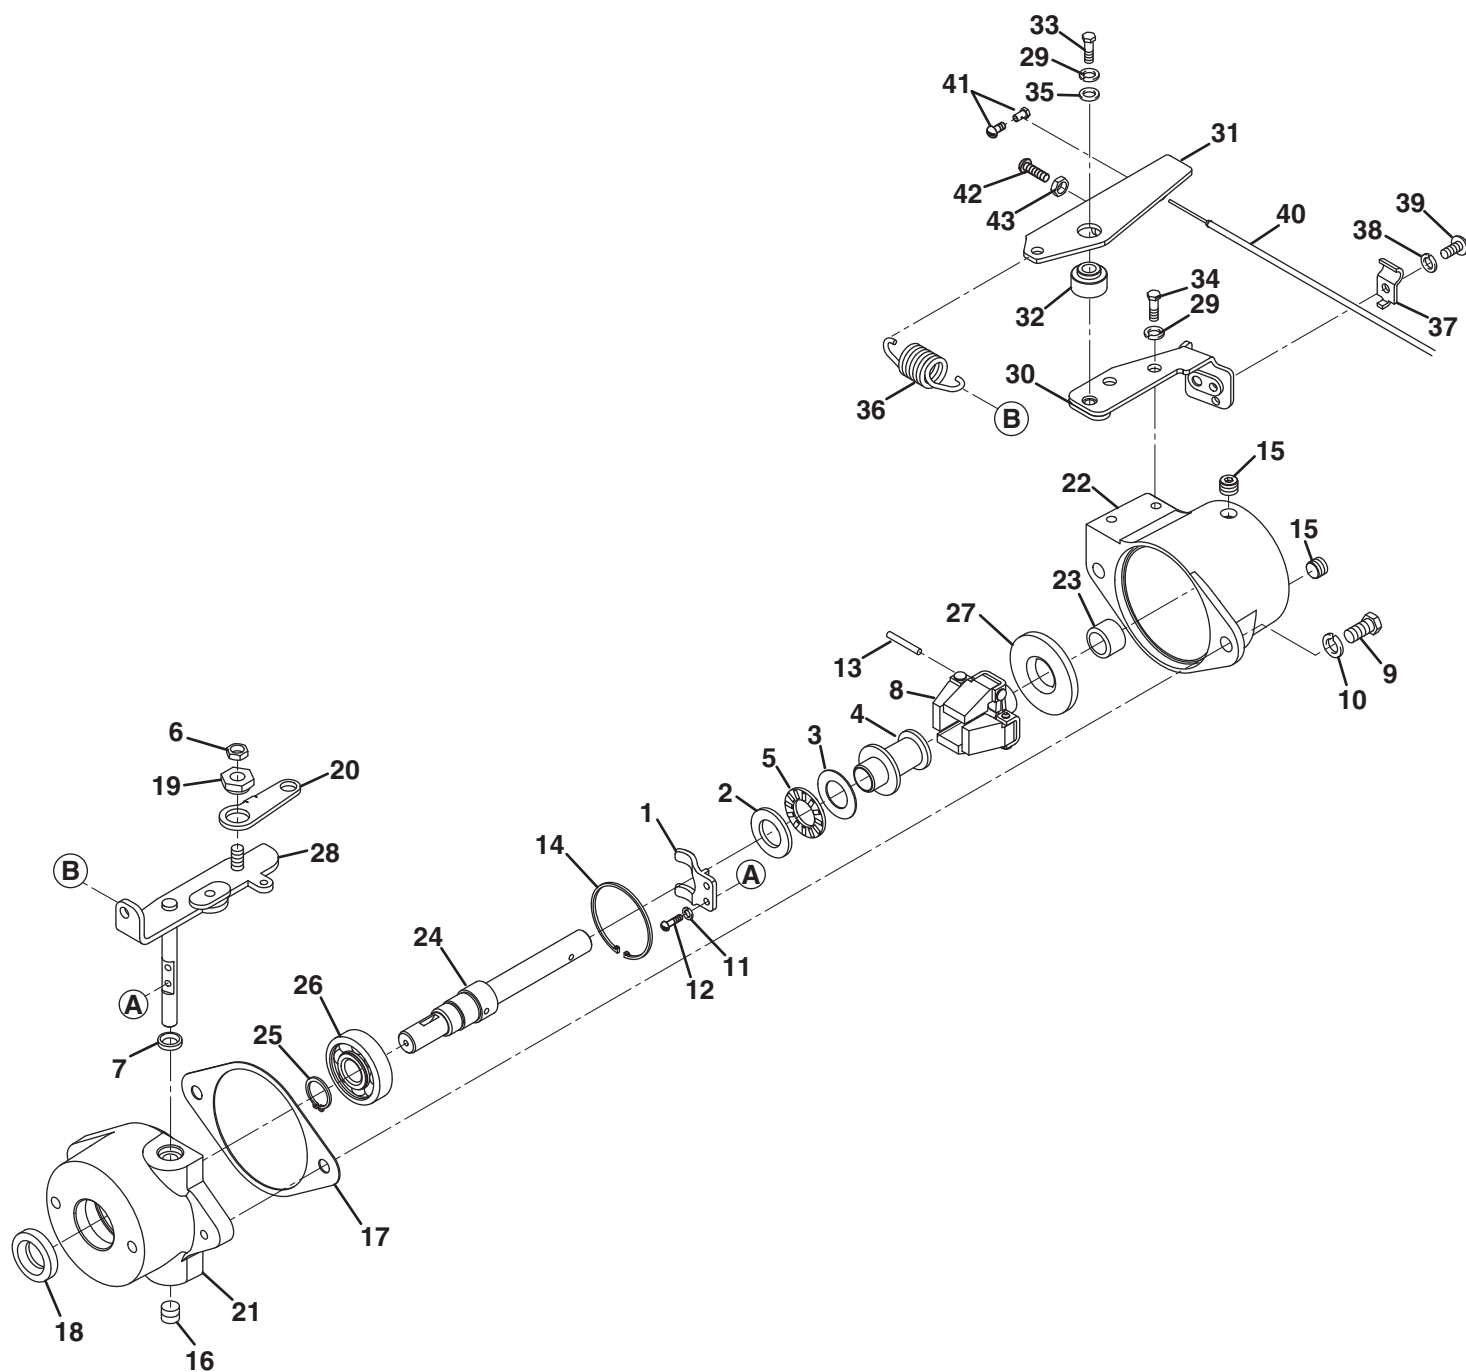

Item	Part No.	Qty.	Description	Serial Numbers/Notes
	4141425	1	Governor	See 5.1
1	111812	1	• Yoke, Spool	
2	111814	1	• Washer, Thrust	
3	359864	1	• Washer, Thrust	
4	111817	1	• Spool, Governor	
5	112840	1	• Bearing, Thrust	
6	130728	1	• Nut, 1/4-20 Hex Jam	
7	111813	1	• Seal, Shaft	
8	160410	1	• Carrier & Weights	
9	302288	2	• Screw, 1/4-20 x 1 in. Hex Head	
10	306396	2	• Lockwasher, 1/4	
11	306506	2	• Lockwasher, #6	
12	306915	2	• Screw, #6-32 x 5/16 in. Machine	
13	603102	1	• Roll Pin, 1/8 x 3/4 in.	
14	548325	1	• Ring, Retaining	
15	800227	2	• Plug, 1/8 NPT	
16	800558	1	• Set Screw, 3/8-16 x 5/16 in.	
17	833056	1	• Gasket, Governor	
18	4189960	1	• Seal, Oil	
19	835271	1	• Nut, Governor Arm	
20	843537	1	• Bracket, Governor Knee	
21	4114867	1	• Head, Governor	
22	894471	1	• Reservoir, Governor	
23	833103	1	• • Bearing, Needle	
24	4150957	1	• Shaft, Governor Complete	
25	833104	1	• • Ring, Retaining	
26	833345	1	• • Bearing, Ball	
27	4115584	1	• Ring, Support	
28	2700525	1	• Lever, Governor Control	
29	306396	3	Lockwasher, 1/4	
30	894435	1	Bracket, Throttle	
31	894434	1	Arm	
32	843866	1	Bushing, Governor	
33	302288	1	Screw, 1/4-20 x 1 in. Hex Head	
34	00414G5	2	Screw, Hex Head	
35	308090	1	Flat Washer, 1/4	
36	833101	1	Spring, Extension	
37	111898	2	Clamp, Cable	
38	120052	1	Lockwasher, #6	
39	800271	1	Screw, #10-24 x 1/2 in. Pan Head	
40	844130	1	Governor Cable	
41	817104	1	Stop, Wire	
42	800024	1	Screw, 1/4-20 x 1-1/2 in.	
43	306375	1	Nut, 1/4-20 Hex	


> Change from previous revision

33.1 Gas Engine Air Filter

Serial No. 84067 All

Serial No. 84068 All

Serial No. 84069 All

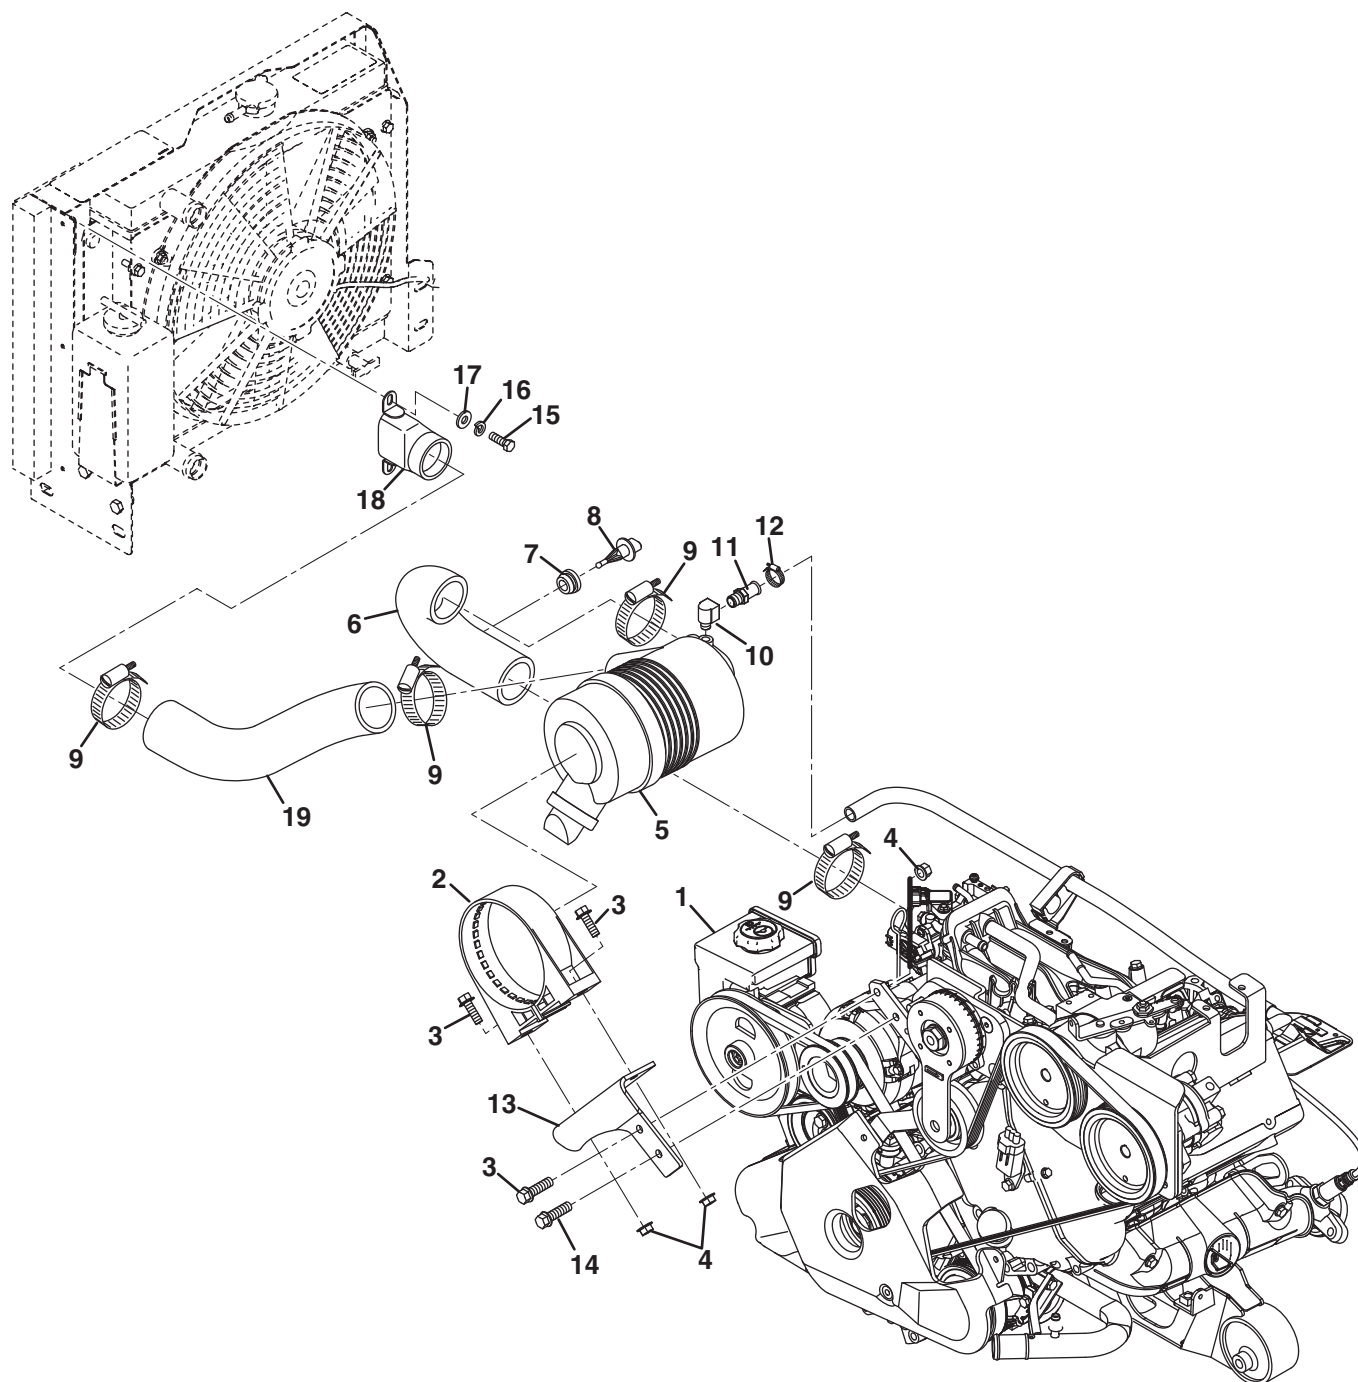


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Engine Assembly	See 27.1 Included with Engine
2	842915	1	Bracket, Air Filter	
3	452389	3	Screw, M8-1.25 x 25 mm Hex Flange	
4	450453	3	Nut, M8-1.25 Hex Flange	
5	4118027	1	Air Filter	
	5000913	1	• Element, Air Filter	
	5000914	1	• Vactuator Valve	
6	4139211	1	Hose, Engine Air Intake	
7	4140617	1	Grommet	
8	4140618	1	Sensor, Air Temp	
9	11391G7	4	Clamp, 2-3/4 in. Worm Drive	
10	4118423	1	Elbow, 1/4 NPT Street	
11	4118422	1	Hose Fitting, 1/4 NPT Brass	
12	2702484	1	Clamp	
13	4231620	1	Bracket, Air Cleaner	
14	2702489	1	Bolt	
15	300646	2	Screw, 1/4-20 x 3/4" Hex Head	
16	306396	2	Lockwasher, 1/4	
17	308090	2	Flat Washer, 1/4	
18	888549	1	Connector, Hose	
19	4235740	1	Hose, Air Cleaner Intake	

> *Change from previous revision*

34.1 Gas Engine Remote Oil Fill


Serial No. 84067 All
Serial No. 84068 All
Serial No. 84069 All

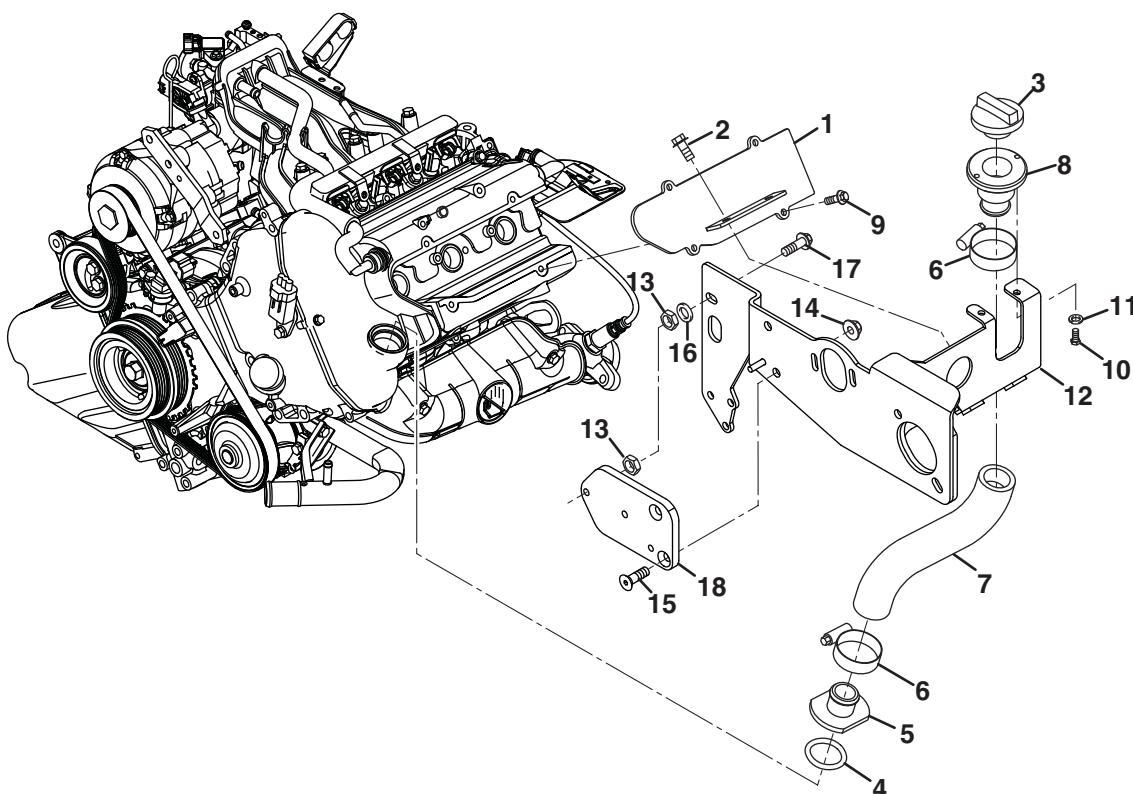

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4188041	1	Bracket, Valve Cover	Included with Engine
2	548971	2	Screw, 5/16-18 x 5/8" Hex Flange	
3	4148202	1	Cap, Oil Fill	
4	843420	1	O-Ring	
5	843399	1	Adapter, Valve Cover	
6	836206	2	Clamp, 1-7/8" Worm Drive	
7	4139271	1	Hose, Remote Oil Fill	
8	2701640	1	Adapter, Oil Cap	
9	4117892	4	Screw, M6-1 x 16 mm Hex Flange	
10	800425	2	Screw, M6-1 x 12 mm Hex Head	
11	306396	2	Lockwasher, 1/4	See 27.1
12	4188387	1	Bracket, Governor	
13	443810	2	• Nut, 3/8-16 Hex Jam	
14	548804	2	• Nut, 3/8-16 Whizlock	
15	548041	2	• Screw, 3/8-16 x 1" Flat Socket Head	
16	306981	1	• Flat Washer, 3/8	
17	800711	1	• Screw, 3/8-16 x 1-3/4" Hex Flange	
18	N/S	1	• Plate, Tensioner	

> Change from previous revision

35.1 Gas Engine Exhaust

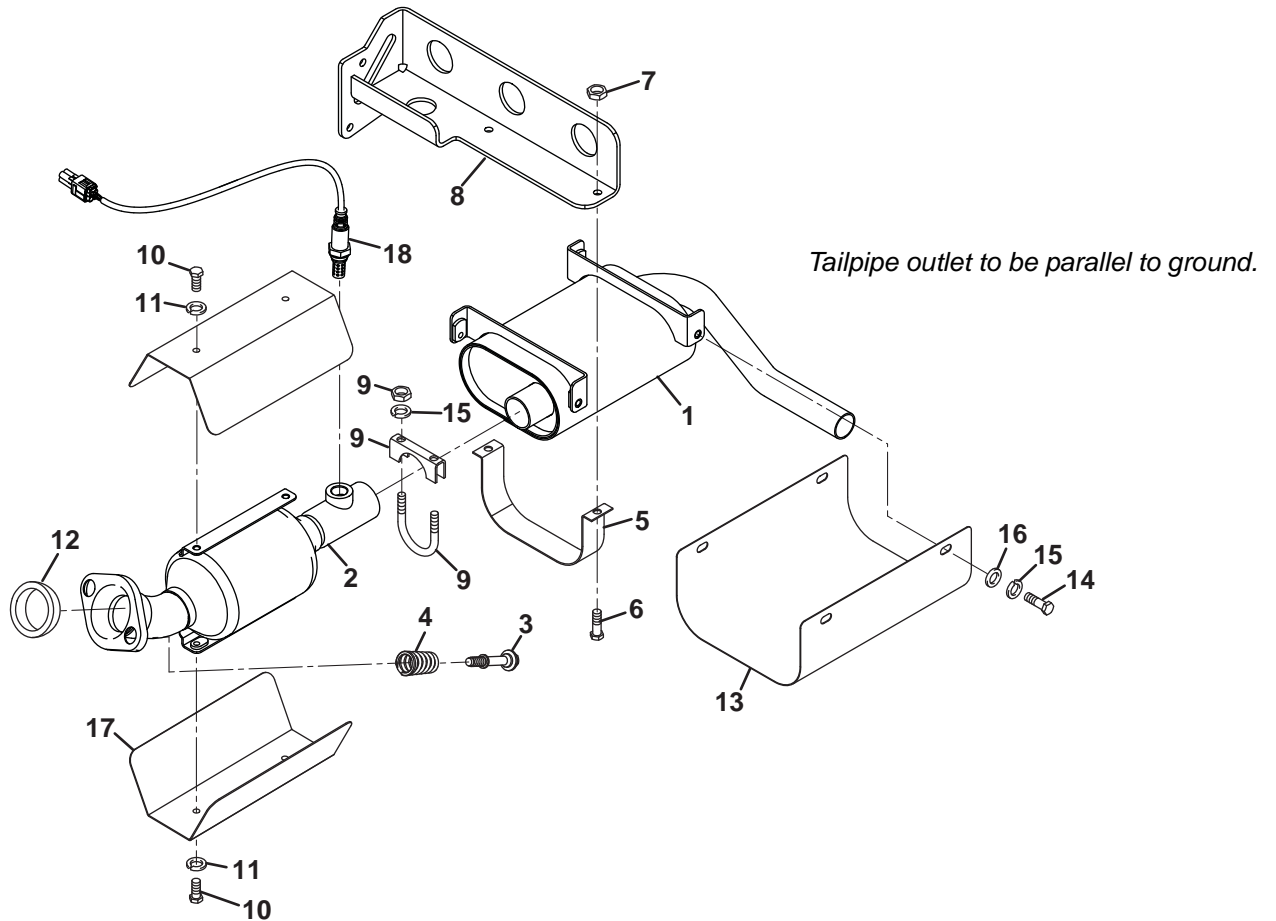


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4233161	1	Muffler	Attaches to Transmission Case
2	4232042	1	Catalytic Converter	
3	2702502	2	Bolt, Muffler Flange	
4	2702501	2	Spring, Muffler Flange	
5	838295.8	1	Strap, Muffler Hanger	
6	450193	2	Screw, M8-1.25 x 30 mm Hex Head	
7	64237-05	2	Locknut, M8-1.25	
8	4240882	1	Bracket, Muffler	
9	841982	1	Clamp, 1-1/2 in. Exhaust	
10	306419	4	Screw, 1/4-20 x 1/2 in. Hex Head	
11	306396	4	Lockwasher, 1/4	
12	2702500	1	Ring, Muffler Flange	
13	4233160	1	Shield, Muffler	
14	306555	4	Screw, 5/16-18 x 5/8 in. Hex Head	
15	306325	6	Lockwasher, 5/16	
16	103867	4	Flat Washer, 5/16	
17	4144336	2	Shield, Catalytic Converter	
18	4235966	1	O2 Sensor	Included with Engine

> Change from previous revision

36.1 Diesel Fuel System

Serial No. 84063 All
Serial No. 84064 All

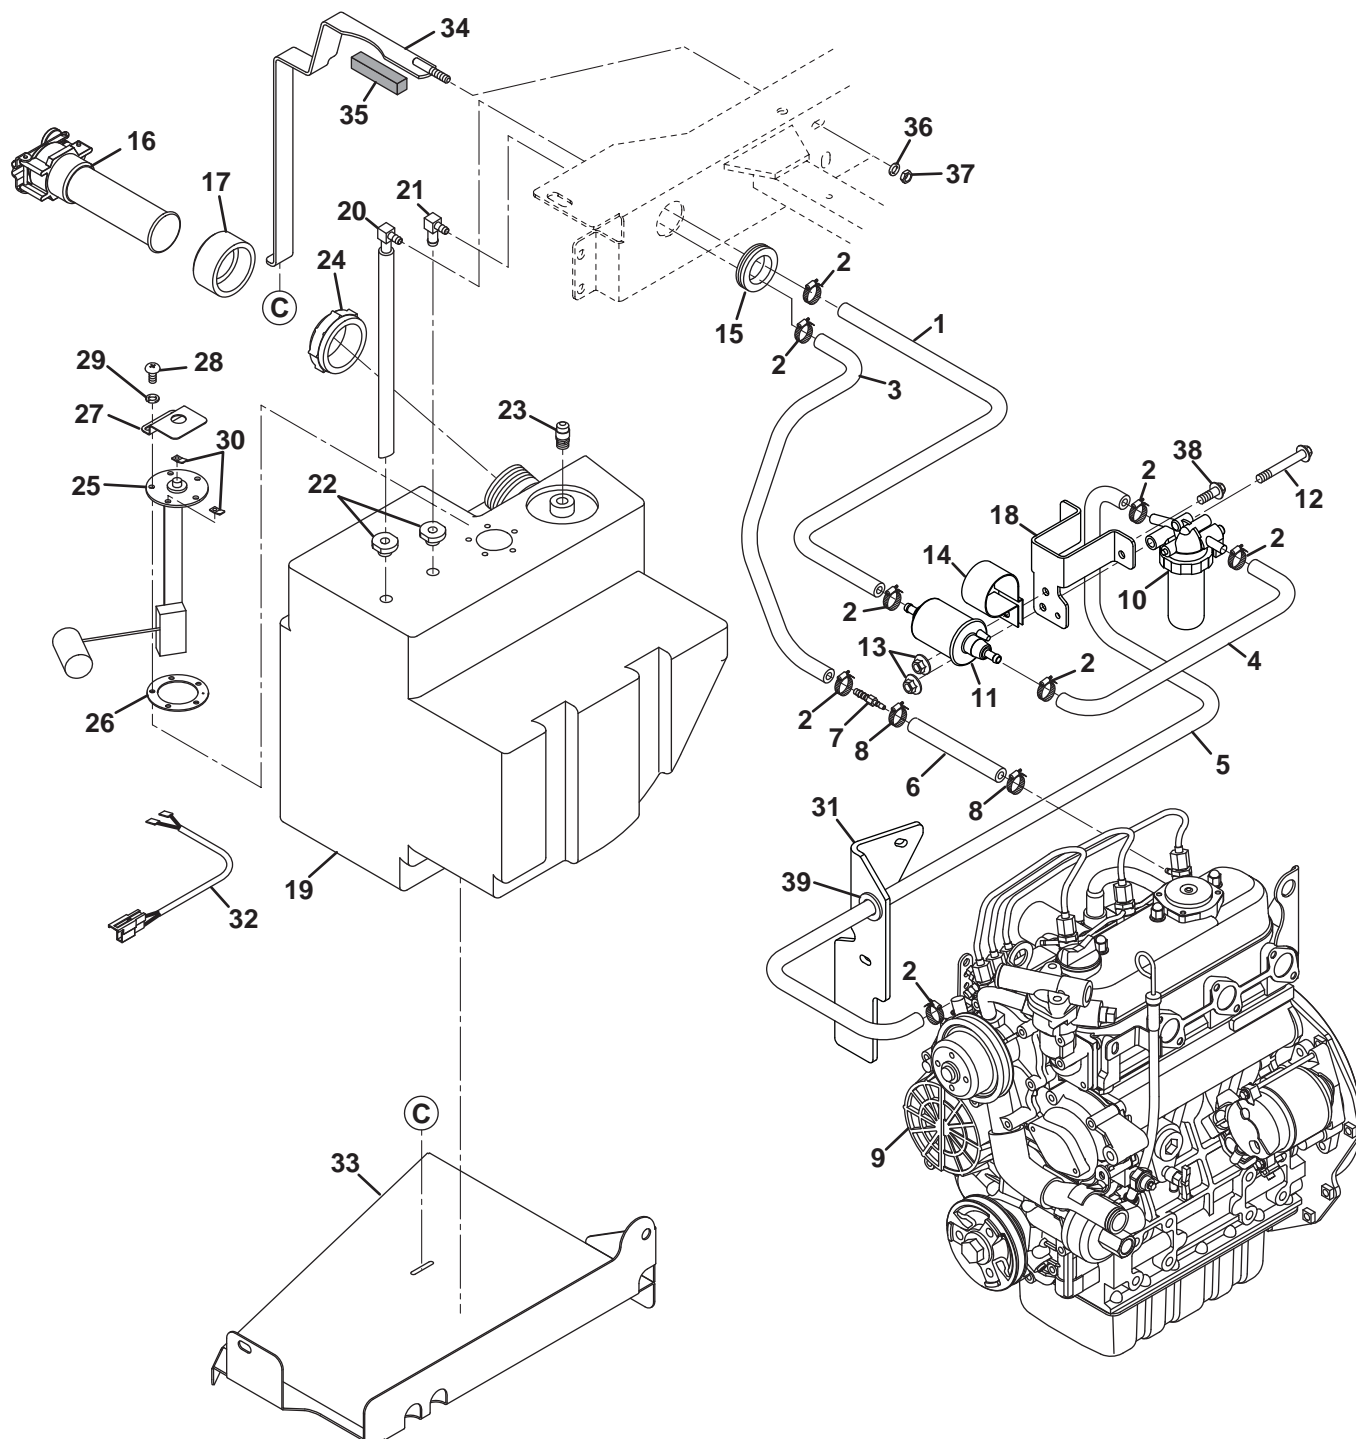

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	826590	1	Hose, Fuel Tank to Fuel Pump 5/16 in.	25 Foot Roll, Cut to 10 in.
2	4113022	8	Clamp, Hose	
3	826590	1	Hose, Fuel Return	25 Foot Roll, Cut to 21-1/2 in.
4	826590	1	Hose, Pump to Fuel Filter 5/16 in.	25 Foot Roll, Cut to 7 in.
5	826590	1	Hose, Fuel Filter to Engine 5/16 in.	25 Foot Roll, Cut to 19-1/2 in.
6	831039	1	Hose, Engine Fuel Return 3/16 in.	25 Foot Roll, Cut to 2-3/4 in.
7	4139967	1	Connector, 5/16 to 3/16 in. Hose	
8	825264	2	Clamp, Hose	
9	REF	1	Engine	
10	550553	1	• Fuel Filter	
	550489	1	• • Element, Fuel Filter	
11	894638	1	Pump, Electric Fuel	
12	452394	1	Screw, M8-1.25 x 70 mm Flange	
13	450453	2	Nut, M8-1.25 Flange	
14	838154	1	Bracket, Fuel Pump Mounting	
15	829997	1	Grommet	
16	834691	1	Cap, Protectoseal	Optional Accessory
17	841853	1	Coupler, Gas Cap	Optional Accessory
18	4185540	1	Bracket, Fuel System	See 15.1
19	841969	1	Fuel Tank	
20	843726	1	• Tube, Fuel Pick Up	
21	843727	1	• Elbow, 90° Fuel	
22	361117	2	• Grommet, Fuel Tank	
23	836852	1	• Breather	
24	4179802	1	Cap, Diesel Fuel	
25	843298	1	Sender, Fuel Level	
26	829954	1	Gasket, Fuel Tank	
27	833953	1	Cover, Fuel Sender	
28	800021	5	Screw, #10-32 x 1/2 in. Pan Head	
29	120052	5	Lockwasher, #10	
30	829787	2	Terminal, 1/4 in. Male	
31	4174285	1	Bracket, Air Filter Mount	See 23.1
32	894201	1	Harness, Fuel Sender	
33	4117153.7	1	Support, Tank	See 14.1
34	4180601	1	Strap, Tank	
35	834005	1	Seal, Foam	
36	103867	1	Flat Washer, 5/16	
37	800221	1	Locknut, 5/16-18 Center	
38	452388	1	Screw, M8-1.25 x 20 mm Flange	
39	809231	1	Grommet, Split	


> Change from previous revision

37.1 Gas Fuel System

Serial No. 84067 All

Serial No. 84068 All

Serial No. 84069 All

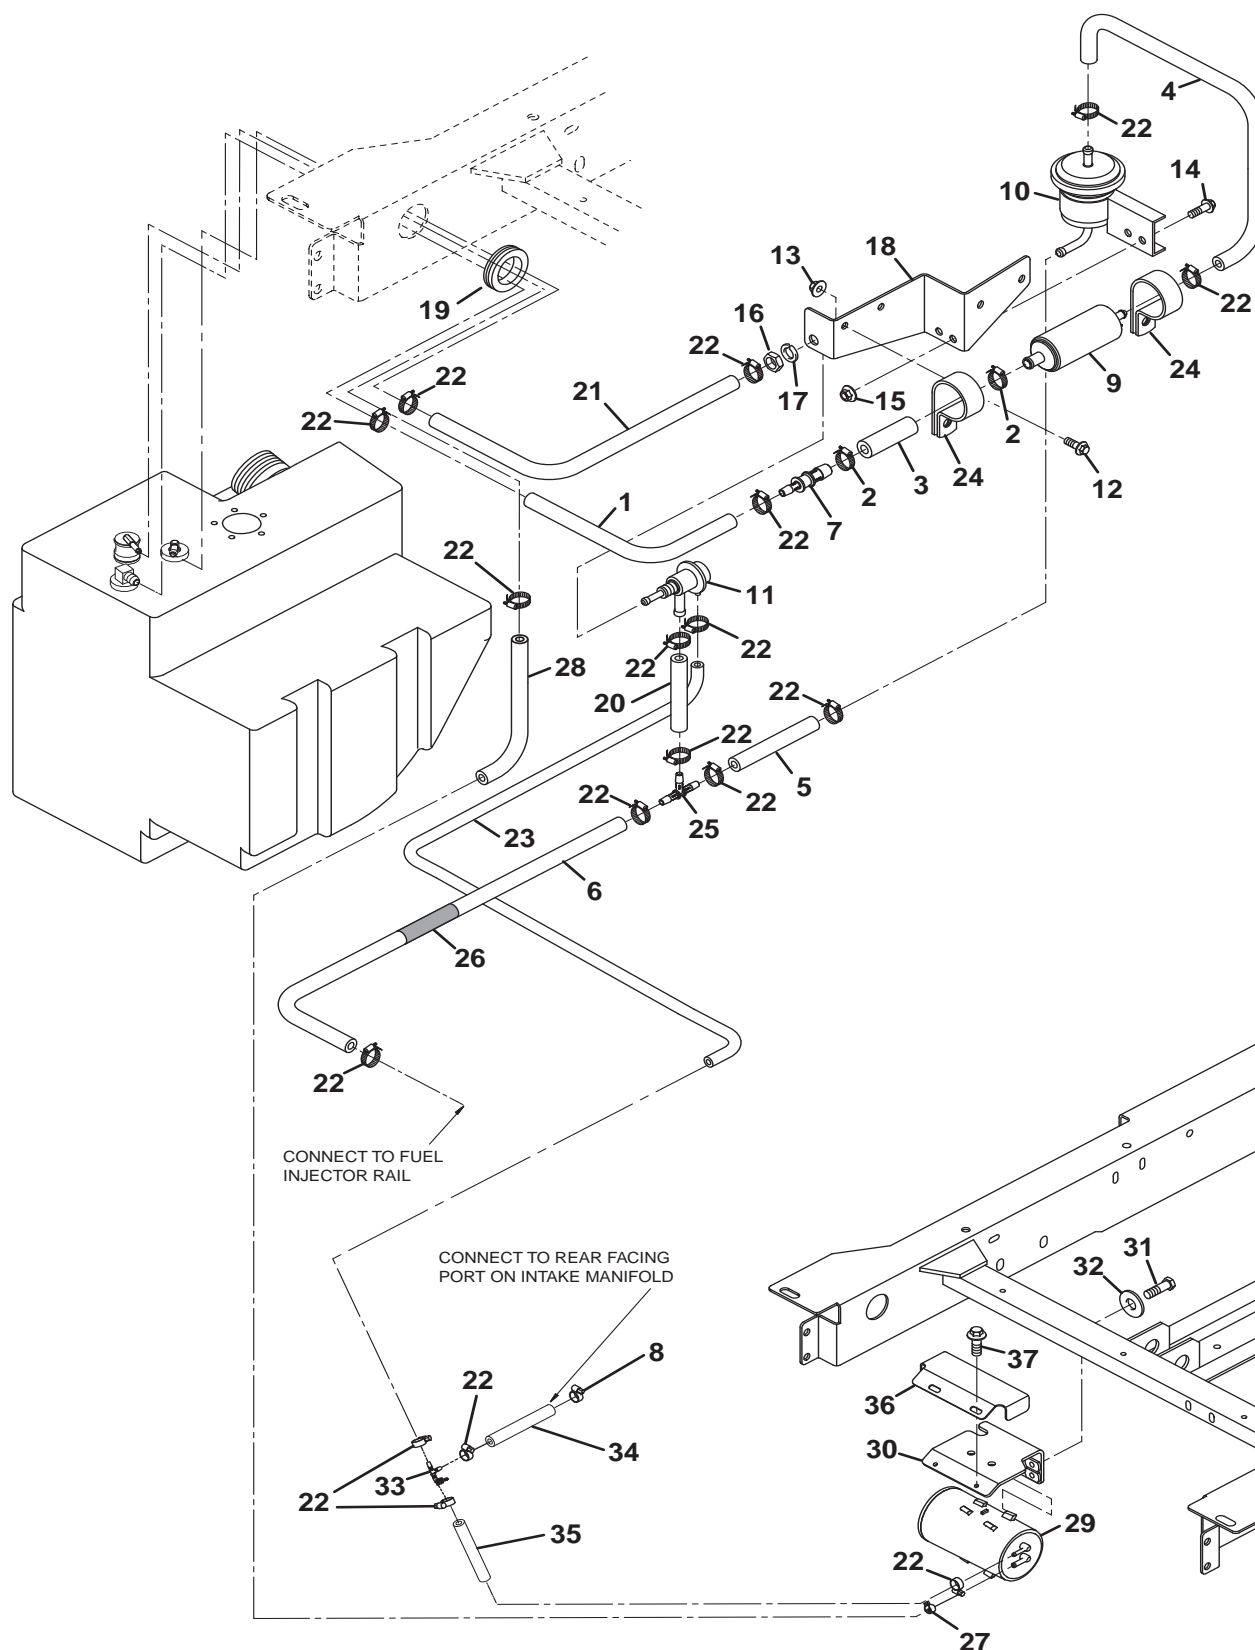

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4218621	1	Hose, Fuel Tank to Adapter 5/16 in.	6 Ft. Length, Cut to 14 in.
2	830930	2	Clamp, Hose	
3	4218622	1	Hose, Adapter to Pump 7/16 in.	6 In. Length, Cut to 3 in.
4	4218621	1	Hose, Pump to Fuel Filter 5/16 in.	6 Ft. Length, Cut to 9 in.
5	4218621	1	Hose, Fuel Filter to Tee 1/4 in.	6 Ft. Length, Cut to 4-1/4 in.
6	4218621	1	Hose, Tee to Engine 1/4 in.	6 Ft. Length, Cut to 29 in.
7	4113019	1	Adapter, 5/16 to 7/16 in. Hose	
8	4223561	1	Clamp, Hose Clutch Type 3/8 O.D.	
9	2701897	1	Pump, Electric Fuel	
10	2701898	1	Fuel Filter	
11	2700177	1	Regulator, Fuel	
12	452378	2	Screw, M6-1 x 20 mm Hex Flange	
13	450452	2	Nut, M6-1 Hex Flange	
14	800930	2	Screw, M8-1.25 x 16 mm Hex Flange	
15	450453	2	Nut, M8-1.25 Hex Flange	
16	800875	1	Nut, M12-1.25 Hex	
17	309067	1	Lockwasher, 1/2 in. External Tooth	
18	2701693.7	1	Bracket, Fuel Pump	See 15.1
19	829997	1	Grommet	
20	4218621	2	Hose, Adapter to Regulator 1/4	6 Ft. Length, Cut to 2 in.
21	4218620	1	Hose, Tank Return to Adapter	5 Ft. Length, Cut to 20 in.
22	825624	15	Clamp, Hose	
23	831039	1	Hose, Regulator to Tee	25 Ft. Length, Cut to 2 in.
24	2700166	1	Clamp, Filter	
25	4113020	1	Adapter, 1/4 in. Tee	
26	4245130	1	Flex Guard	30 In. Length, Cut to 5 in.
27	18292-G1	1	Clamp, Tubing	
28	4218620	1	Hose, Rollover Valve to Canister	5 Ft. Length, Cut to 17-1/2 in.
29	4170802	1	Canister, Carbon	
30	4172648	1	Bracket, Canister	
31	400188	2	Screw, 5/16 - 18 x 1 in. Hex HD	
32	452006	2	Washer, Flat	
33	4168143	1	Adapter, 5/32 in. Tee	
34	831039	1	Hose, Tee to Engine Intake Manifold	25 Ft. Length, Cut to 20 in.
35	831039	1	Hose, Tee to Carbon Canister	25 Ft. Length, Cut to 17-1/4 in.
36	4180501	1	Clamp, Canister	
37	452692	2	Screw, M6-1 x 12mm Taptite	


> Change from previous revision

38.1 Gas Fuel System

Serial No. 84067 All

Serial No. 84068 All

Serial No. 84069 All

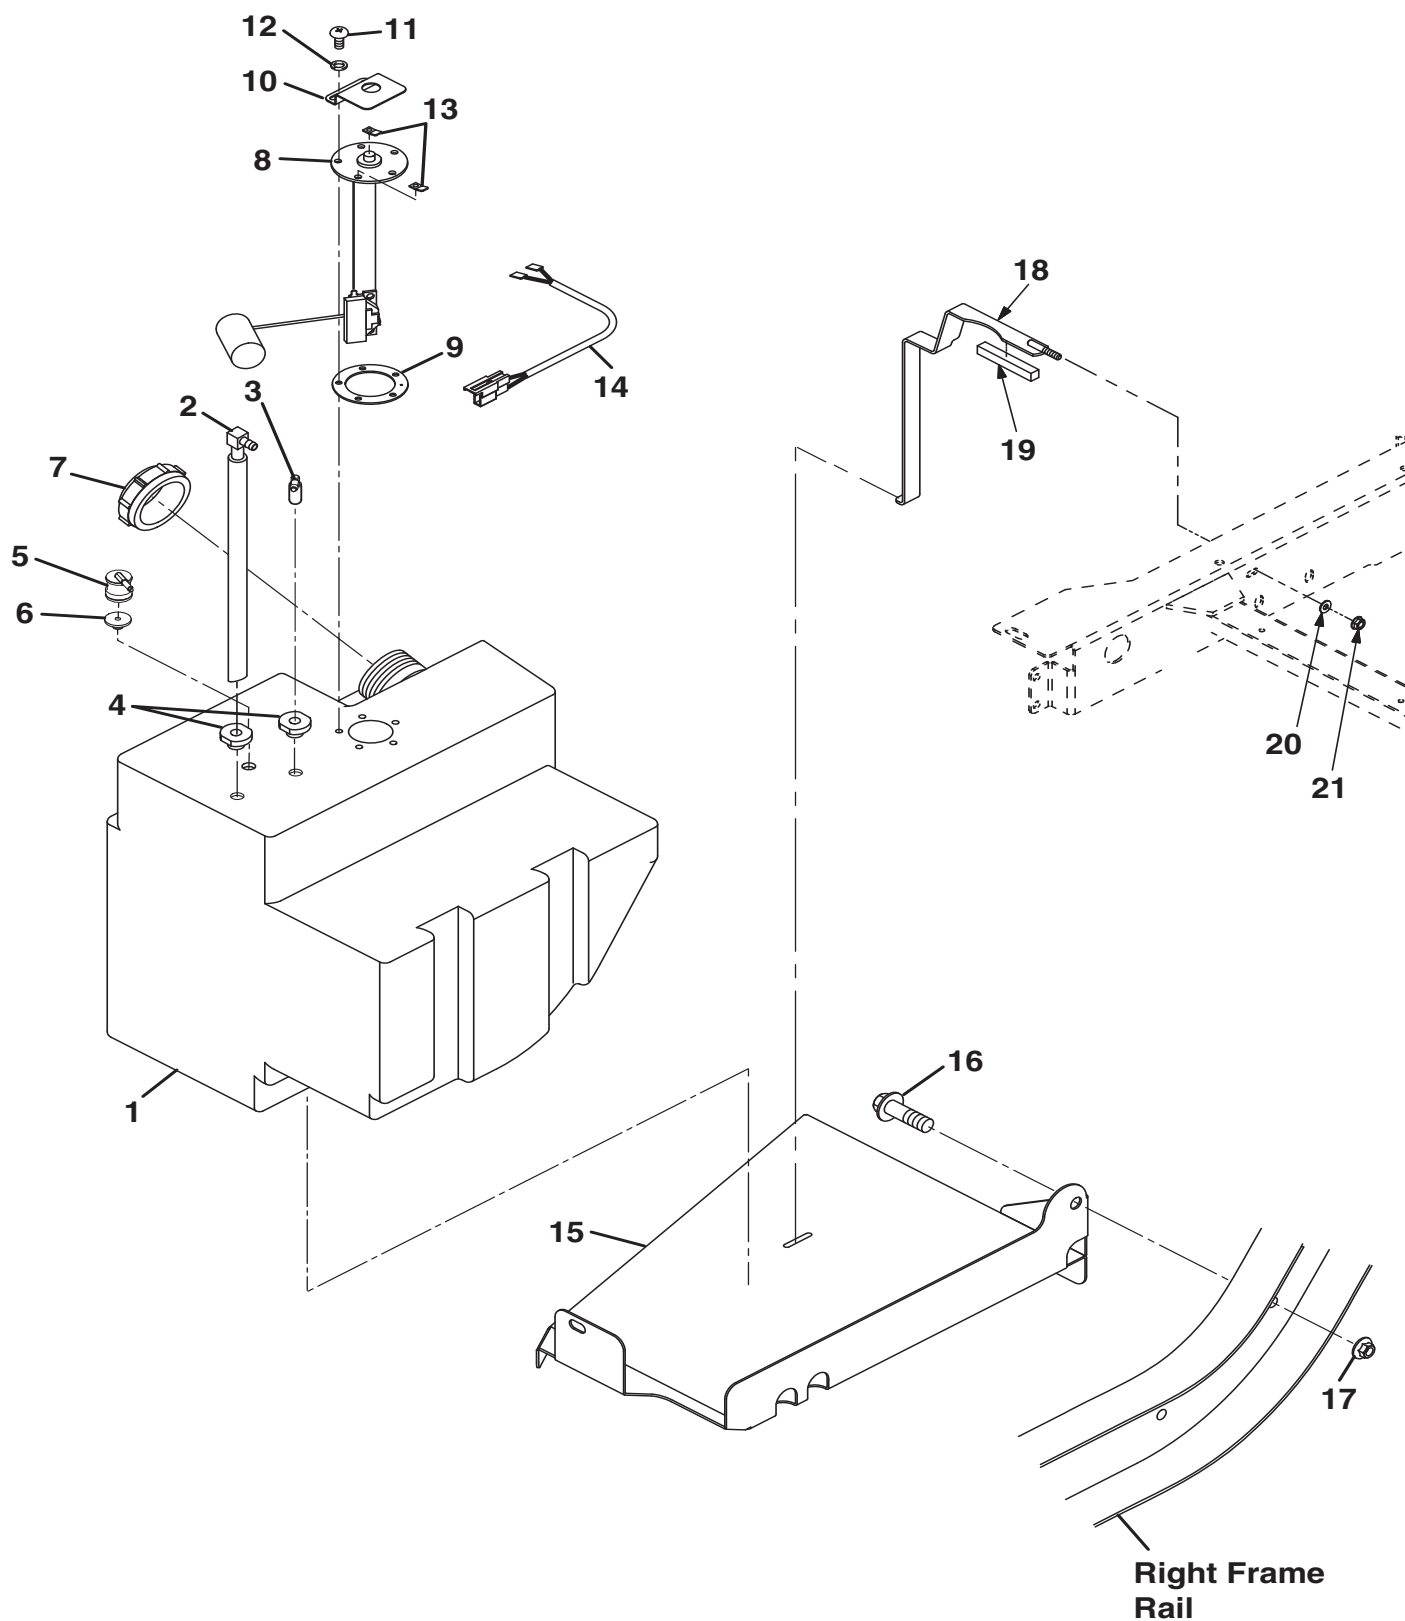


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4166842	1	Fuel Tank AY	
2	843726	1	• Tube, Fuel Pick Up	
3	4166841	1	• Elbow, 90 1/4	
4	361117	2	• Bushing	
5	4170840	1	• Rollover Valve	
6	4168131	1	• Grommet, Fuel Tank	
7	4166840	1	Cap, Unvented Fuel Ratchet	
8	843298	1	Sender, Fuel Tank	
9	829954	1	Gasket, Fuel Tank	
10	833953	1	Cover, Fuel Sender	
11	800021	5	Screw, #10-32 x 1/2 in. Pan Head	
12	120052	5	Flat Washer	
13	829787	2	Terminal, Male	
14	894201	1	Harness, Fuel Sender	
15	4117153.7	1	Support, Fuel Tank	
16	452399	1	Screw, 5/16-18 x 3/4 in. Truss	
17	450454	3	Nut, M10-1.5 Hex Flange	
18	4180601	1	Strap Assembly, Fuel Tank	
19	834005	1	Seal, Foam	
20	103867	1	Washer, Flat	
21	800221	1	Nut, Hex Crownlock 5/16 - 24	

> Change from previous revision


39.1 Hydraulic Tank and Filter

Serial No. All

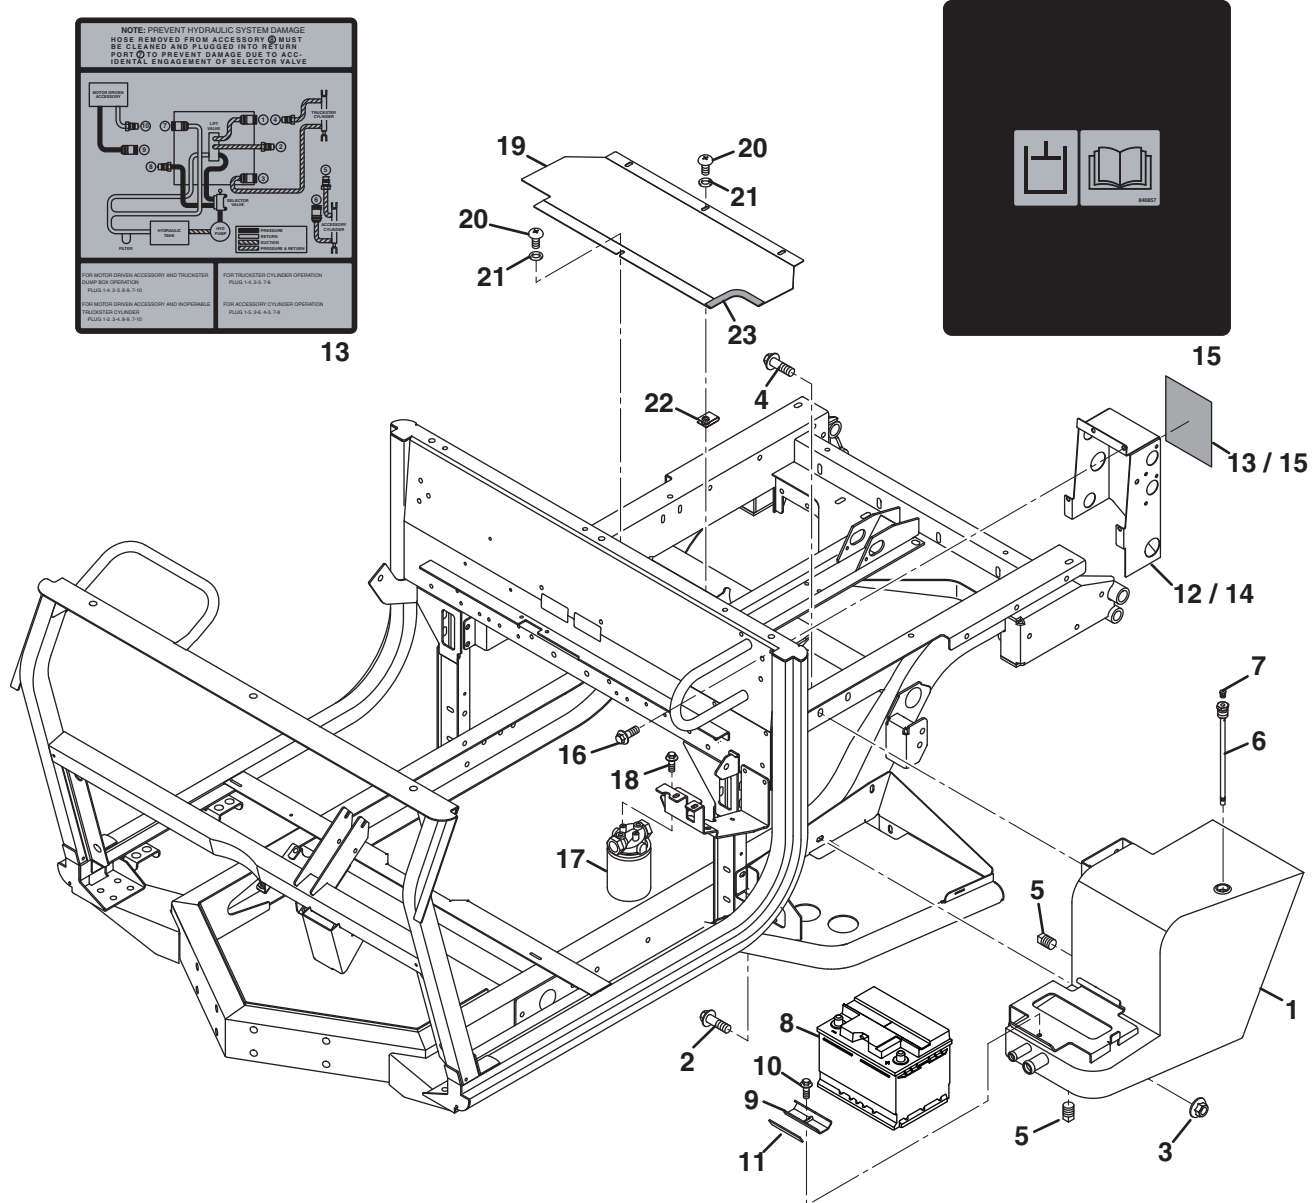



Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	894675G01	1	Tank, Hydraulic	<p>Add as required to secure battery Used on all, except 84064</p> <p>Used on 84064 Only</p> <p>Diesel Vehicles Gas Vehicles</p>
2	452388	2	Screw, M8-1.25 x 20 mm Flange	
3	450453	2	Nut, M8-1.25 Hex Flange	
4	452399	2	Screw, M10-1.5 x 25 mm Flange	
5	800113	2	Plug, 1/2 NPT	
6	893539	1	Dipstick, Hydraulic Tank	
7	827486	1	Valve, Pressure Relief	
8	N/S	1	Battery, 12 Volt	
9	844601	1	Bracket, Battery Clamp	
10	452389	1	Screw, M8-1.25 x 25 mm Flange	
11	844729	AR	Spacer, Battery Clamp	
12	2700800	1	Hydraulic Cover	
13	837270	1	• Decal, Hydraulic Connections	
14	2700801	1	Hydraulic Cover, EC	
15	840857	1	• Decal, Hydraulic Connections	
16	800930	4	Screw, M8-1.25 x 16 mm Flange	
17	REF	1	Hydraulic Filter	
18	548827	2	Screw, 1/4-20 x 1/2 in. Hex Flange	
19	2701107.7	1	Panel, Access	
19	841805	1	Panel, Access	
20	300646	4	Screw, 1/4-20 x 3/4 in. Truss	
21	308090	4	Flat Washer, 1/4	
22	800279	4	Nut, 1/4-20 Speed	
23	821893	1	Trim, Push On	

> Change from previous revision

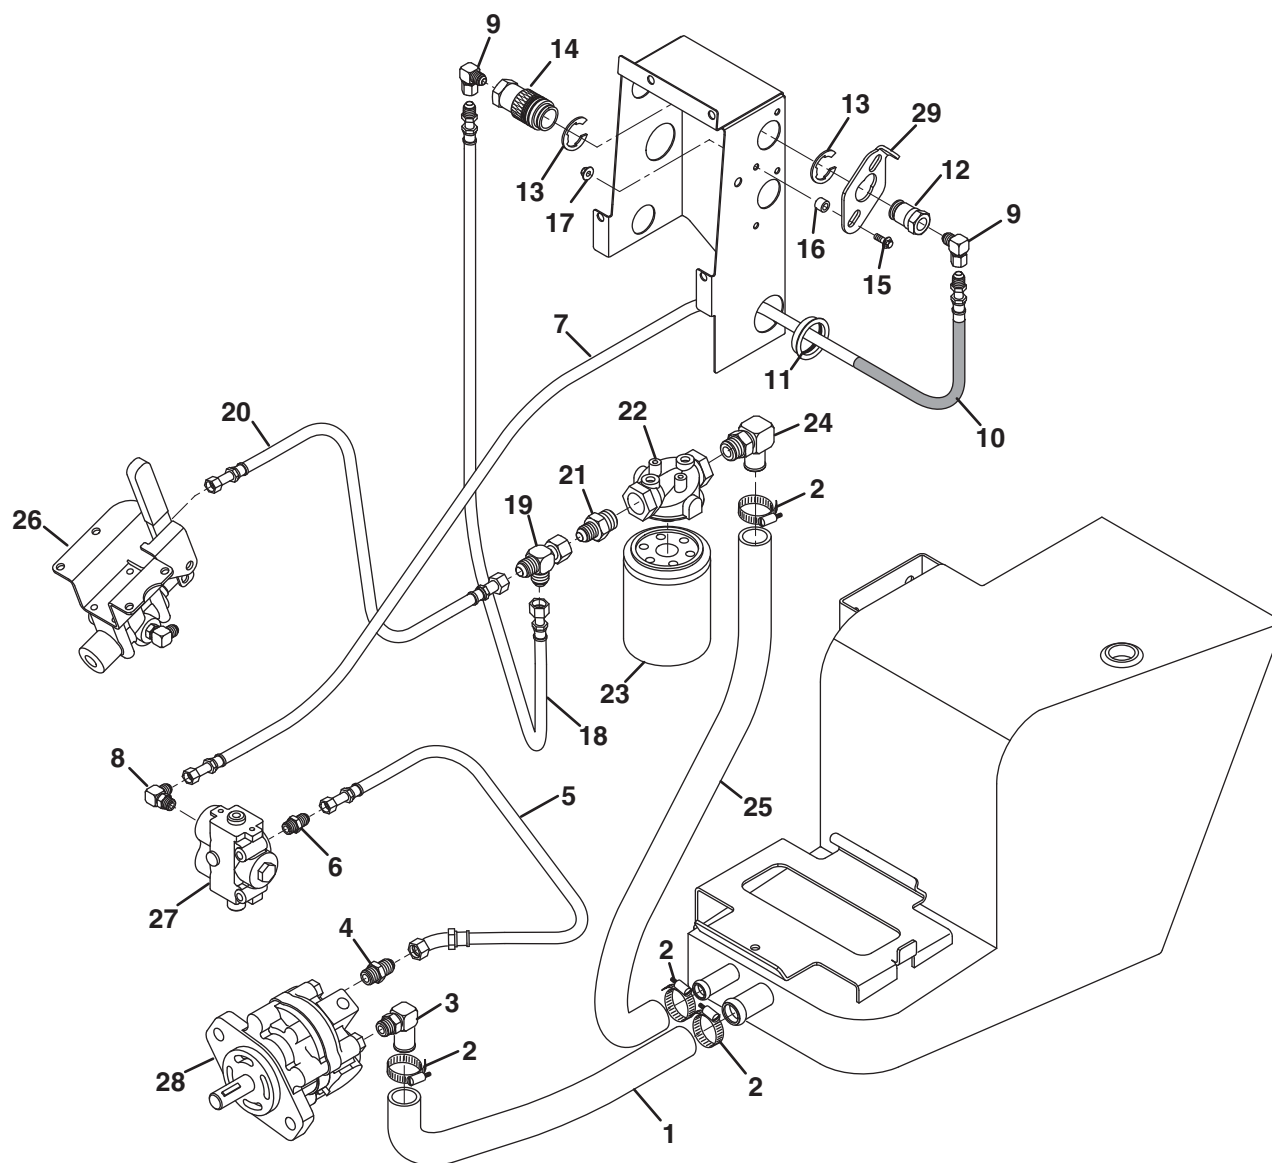


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	844564	1	Hose, Tank to Filter	
2	836206	4	Clamp, Hose	
3	844583	1	Fitting, 90°	
4	844566	1	Fitting, Straight	
5	844628	1	Hose, Pump to Selector Valve	
6	844652	1	Fitting, 9/16-18 x 3/4-16 Straight	
7	844600	1	Hose, Selector Valve to Coupler	
8	844571	1	Fitting, 9/16-18 x 3/4-16 90°	
9	835101	2	Fitting, 3/8 in. NPT 90°	
10	840877	1	Sleeve, Nylon	
11	4233001	1	Bushing, Flip Lock	
12	894702	1	Coupler Half, Dry Seal Male	
13	832414	2	Ring, Retaining	
14	894701	1	Coupler Half, Dry Seal Female	
15	452380	2	Screw, M6-1 x 00 mm Flange	
16	844973	2	Bushing	
17	450452	2	Nut, M6-1 Hex Flange	
18	844600	1	Hose, Coupler to Filter	
19	844627	4	Fitting, 3/4-16 Tee	
20	4118760	1	Hose, Control Valve to Filter	
21	844590	1	Fitting, 3/4-16 x 1-1/16-12 Straight	
22	894691	1	Head, Filter	
23	885249	1	Filter Element	
24	3001025	1	Fitting, 90°	
25	844565	1	Hose, Filter to Tank	
26	REF	1	Control Valve	See 6.1
27	894696	1	Selector Valve	See 6.1
28	892601	1	• Seal Kit	
	887994	1	Pump, Hydraulic	
	463005	1	• Key, Woodruff #5	
29	887017	1	• Seal Kit	
	844937	1	Plate, Coupler Retainer	
30	320107	2	Tie, 7-1/2 in. Cable	Not Shown, Secures Nylon Sleeve

> *Change from previous revision*

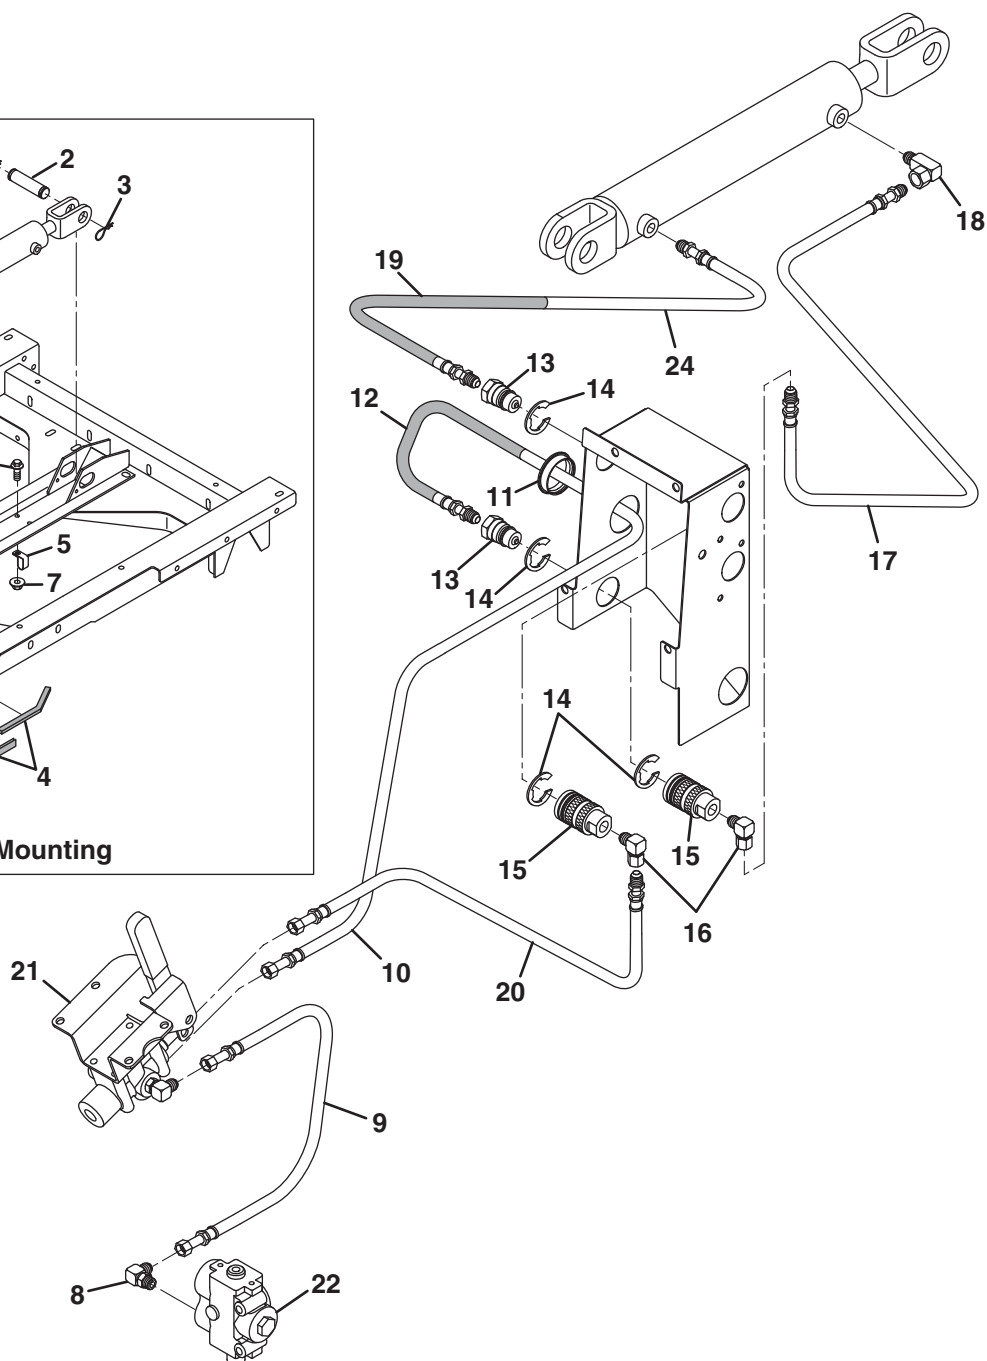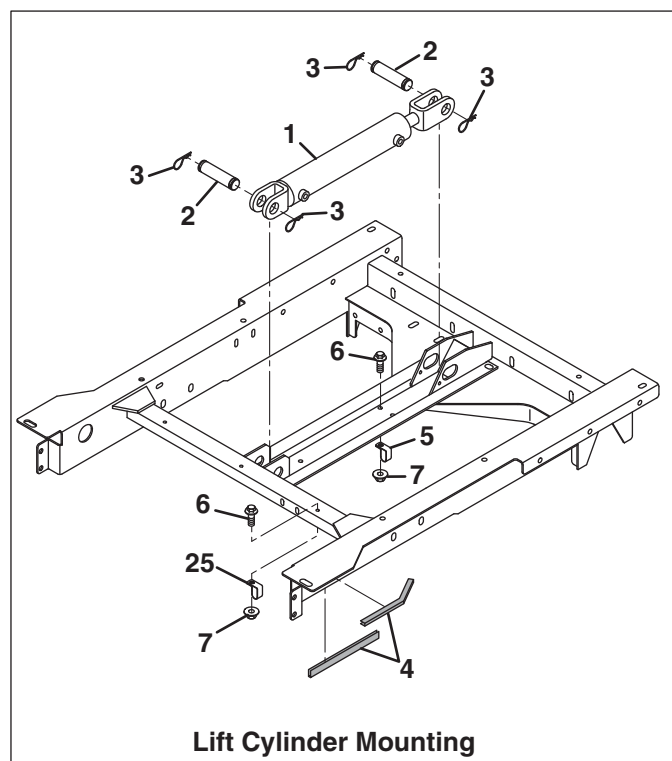

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	882993	1	Cylinder, Dump Box	Texas Hydraulics Columbus Hydraulics DANA Hydraulics
	883236	1	• Seal Kit	
	884574	1	• Seal Kit	
	886001	1	• Seal Kit	
2	830810	2	Pin, Clevis	Control Valve Port B
3	809265	4	Hair Pin	
4	821893	AR	Trim, Push On	
5	817320	1	Clamp, Hose	
6	452378	2	Screw, M6-1 x 20 mm Hex Flange	
7	450452	2	Nut, M6-1 Hex Flange	
8	826558	1	Fitting, 9/16-18 90°	
9	844019	1	Hose, Selector Valve to Control Valve	
10	4124567	1	Hose, Control Valve to Coupler	
11	4233001	1	Bushing, Flip Lock	
12	840877	1	Sleeve, Nylon	
13	832408	2	Coupler Half, Male	
14	832414	4	Ring, Retaining	
15	832409	2	Coupler Half, Female	
16	835101	2	Fitting, 3/8 in. NPT 90°	
17	832900	1	Hose, Lift Cylinder to Coupler	
18	823119	1	Fitting, 1/4 in. NPT	
19	840877	1	Sleeve, Nylon	
20	844598	1	Hose, Control Valve to Coupler	
21	REF	1	Control Valve	Control Vale Port A
22	REF	1	Selector Valve	See 6.1
23	320107	4	Tie, 7-1/2 in. Cable	See 6.1
24	4124568	1	Hose, Lift Valve to Coupler	Not Shown, Secures Nylon Sleeve
25	842800	1	Clamp, Hose	

> Change from previous revision

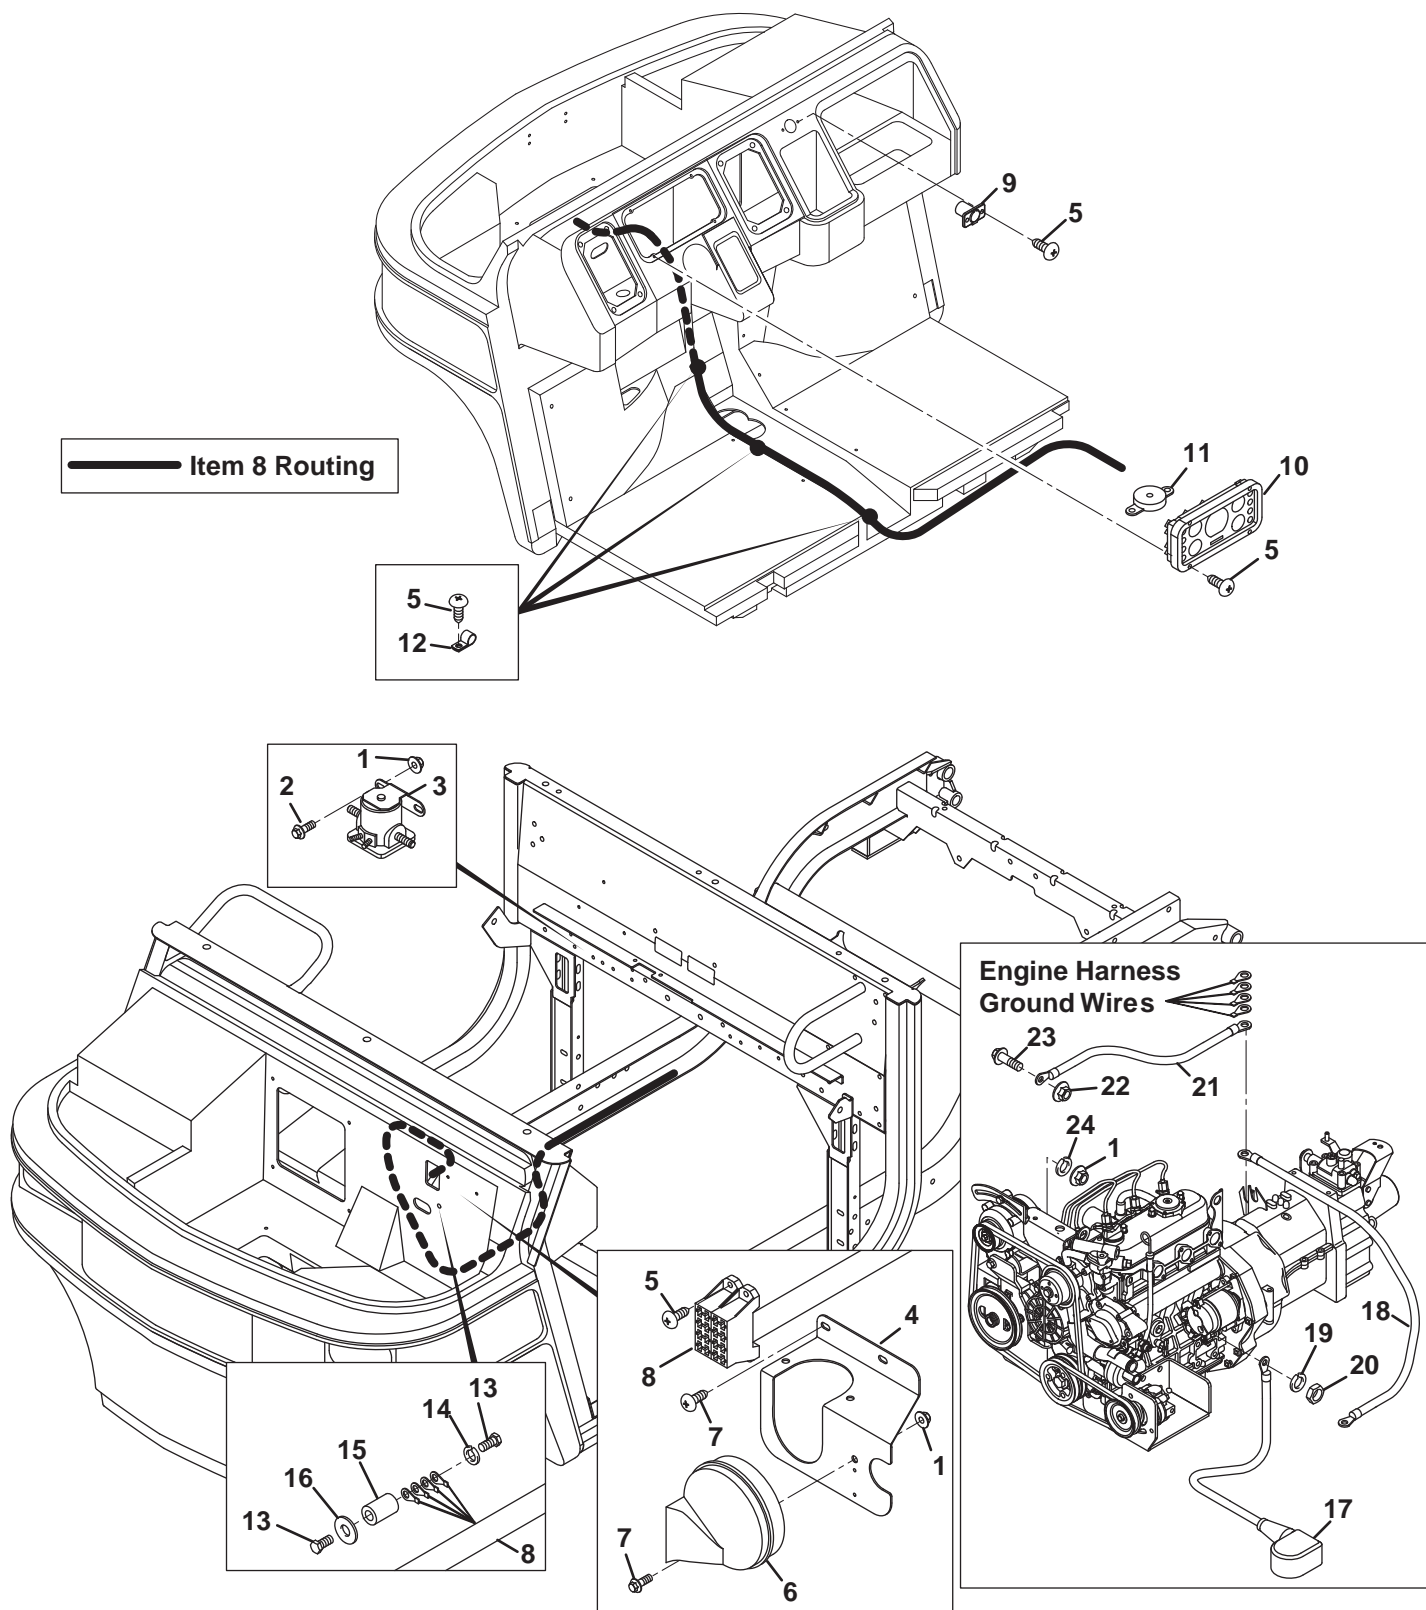


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	450452	4	Nut, M6-1 Hex Flange	See 54.1 Located inside front clip, behind dash panel Battery to Transmission Transmission to Right Frame Rail
2	452378	2	Screw, M6-1 x 20 mm Hex Flange	
3	2701465	1	Solenoid, Starter	
	120052	2	• Lockwasher, #10	
	2702244	2	• Nut, #10-32 Hex	
	306325	2	• Lockwasher, 5/16	
	443106	2	• Nut, 5/16-18 Hex	
4	4244442	1	Bracket, Horn, Brake Fluid Reservoir	
5	800943	7	Screw, #10-16 x 3/4 in. Thread Cutting	
6	886090	1	Horn	
7	800934	3	Screw, M6-1 x 16 mm Hex Flange	
8	894266	1	Harness, Main	
9	843942	1	Socket, 12V Accessory Plug	
10	2701658	1	Panel, Instrument with Tachometer	
11	890000	1	Buzzer, High Temperature	
12	831225	4	Clamp, Wire Harness	
13	306419	2	Screw, 1/4-20 x 1/2 in. Hex Head	
14	306488	1	Lockwasher, 1/4 External Tooth	
15	828231	1	Insulator	
16	548175	1	Flat Washer, 1/4	
17	4183303	1	Positive (RED) Battery Cable	
18	4183301	1	Negative (BLACK) Battery Cable	
19	306325	1	Lockwasher, 5/16	
20	450324	1	Nut, M8-1.25 Hex	
21	894602	1	Cable, 32 in. Ground	
22	450453	1	Nut, M8-1.25 Hex Flange	
23	452388	1	Screw, M8-1.25 x 20 mm Flange	
24	306396	1	Lockwasher, 1/4	

> Change from previous revision

43.1 Gas Electrical Components

Serial No. 84067 All
Serial No. 84068 All
Serial No. 84069 All

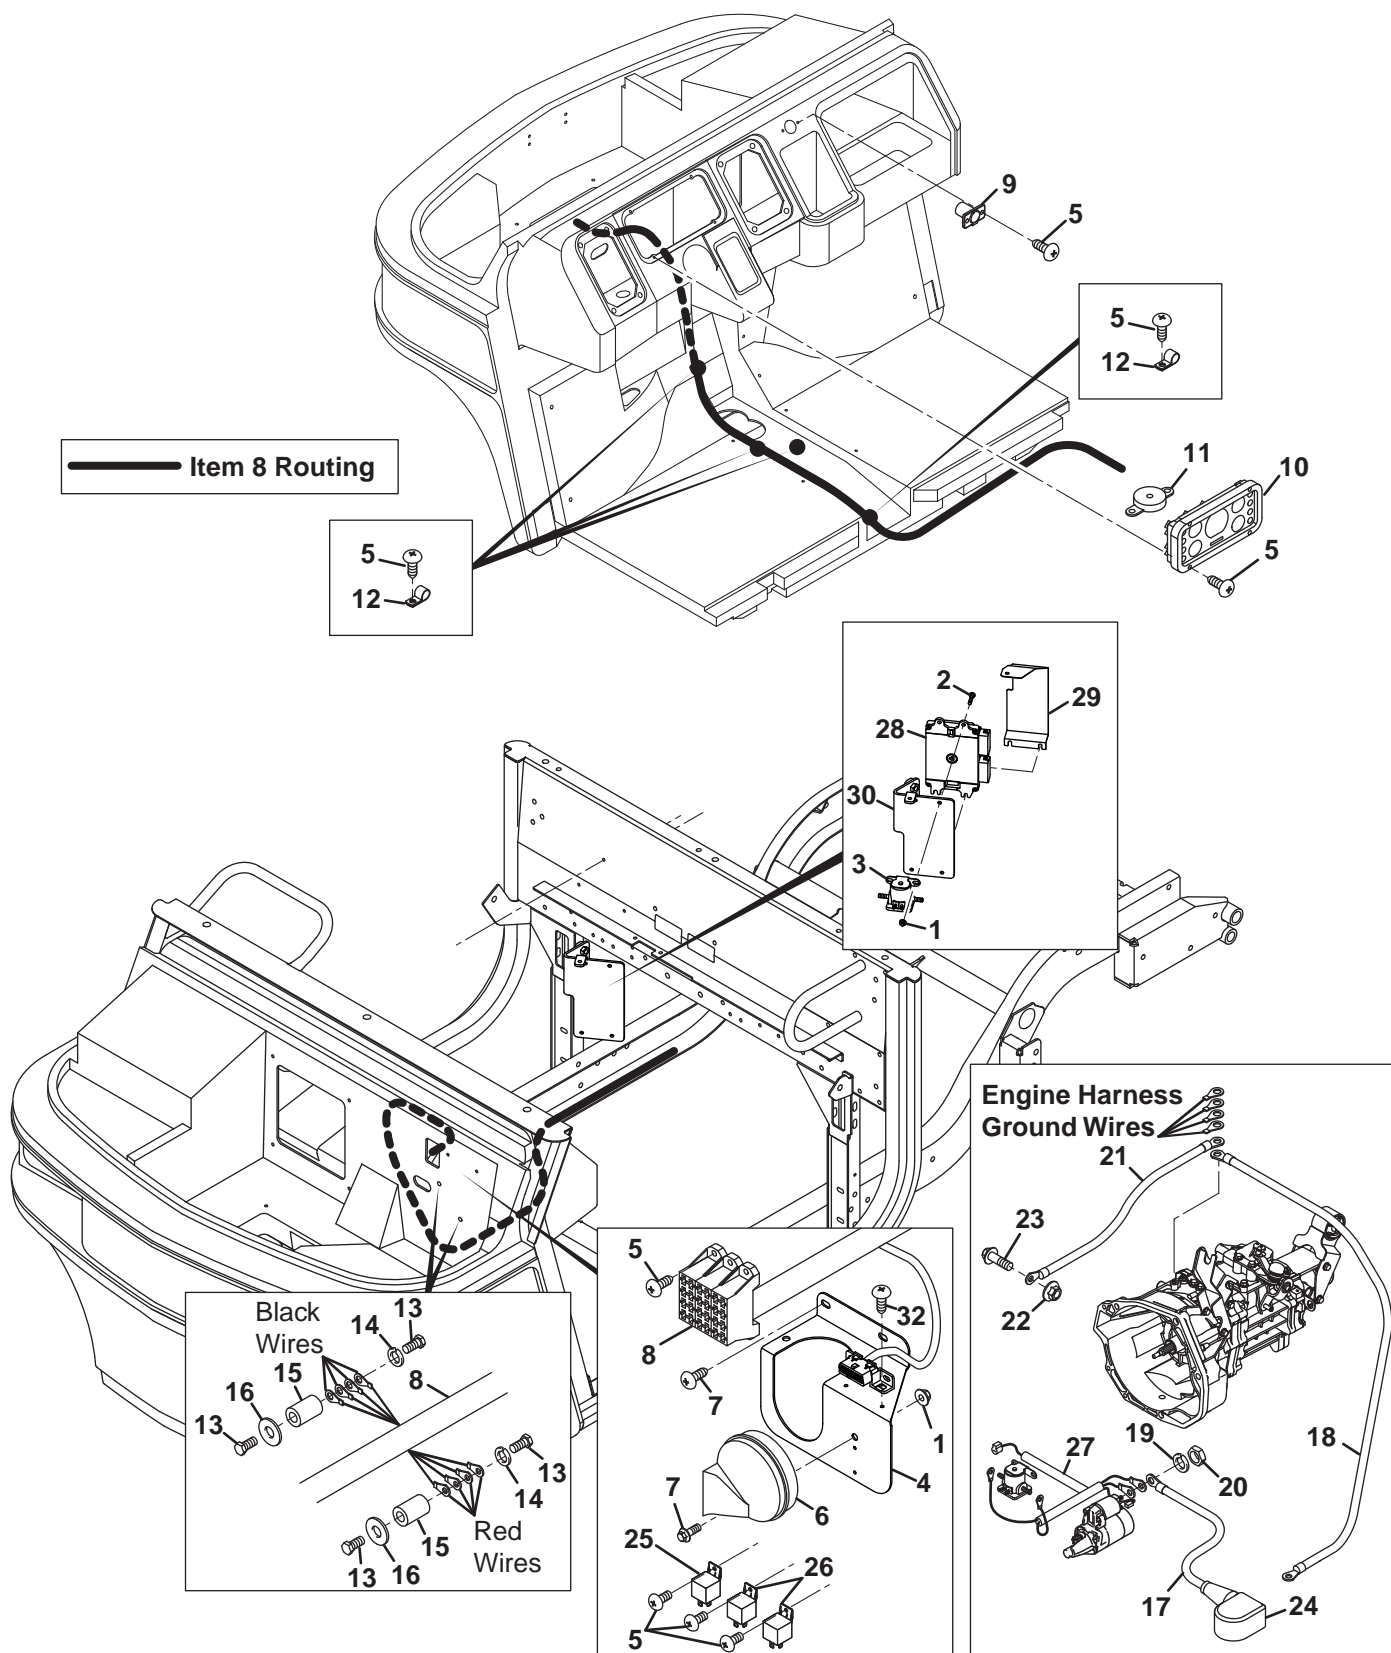

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	450452	4	Nut, M6-1 Hex Flange	<p>See 54.1</p> <p>Located inside front clip, behind dash panel</p> <p>Manual Transmission Automatic Transmission Battery to Manual Transmission Battery to Automatic Transmission</p> <p>Manual Transmission Automatic Transmission</p> <p>See 15.1</p>
2	450544	4	Screw, M6 x 30 mm Pan Head	
3	2701464	1	Solenoid, Starter	
	120052	2	• Lockwasher, #10	
	2702244	2	• Nut, #10-32 Hex	
	306325	2	• Lockwasher, 5/16	
	443106	2	• Nut, 5/16-18 Hex	
4	4244442	1	Bracket, Horn, Brake Fluid Reservoir	
5	800943	16	Screw, #10-16 x 3/4 in. Thread Cutting	
6	886090	1	Horn	
7	800934	3	Screw, M6-1 x 16 mm Hex Flange	
8	4238042	1	Harness, Main	
9	843942	1	Socket, 12V Accessory Plug	
10	2701658	1	Panel, Instrument with Tachometer	
11	890000	1	Buzzer, High Temperature	
12	831225	4	Clamp, Wire Harness	
13	306419	4	Screw, 1/4-20 x 1/2 in. Hex Head	
14	306488	2	Lockwasher, 1/4 External Tooth	
15	828231	1	Insulator	
16	548175	2	Flat Washer, 1/4	
17	4183304	1	Positive (RED) Battery Cable	
17	4183303	1	Positive (RED) Battery Cable	
18	4183301	1	Negative (BLACK) Battery Cable	
18	4183302	1	Negative (BLACK) Battery Cable	
19	306325	1	Lockwasher, 5/16	
20	450324	1	Nut, M8-1.25 Hex	
21	894602	1	Cable, Frame Ground	
21	884513	1	Cable, Frame Ground	
22	450453	1	Nut, M8-1.25 Hex Flange	
23	452388	1	Screw, M8-1.25 x 20 mm Flange	
24	4154081	1	Cover, Positive Battery Terminal	
25	4221100	1	Relay, EFI 12 V 70A SP	
26	843167	2	Relay, 12V 15A DPST	
27	4116017	1	Harness, Generator	
28	4249342	1	Controller, EFI Engine	
28	4249343	1	Controller, EFI Engine	
29	4244712	1	Cover, Engine Controller	
30	4242482	1	Bracket, ECU Mounting	
31	2700757	1	Clamp, Wire	
32	409804	2	Screw, #10-24 x 1/2" Thread Cutting	

> Change from previous revision


TURF TRUCKSTER

44.1 Differential Assembly

Serial No. All

Part Number 894826 (14.21:1 Differential)

Part Number 894825 (11.16:1 Differential)

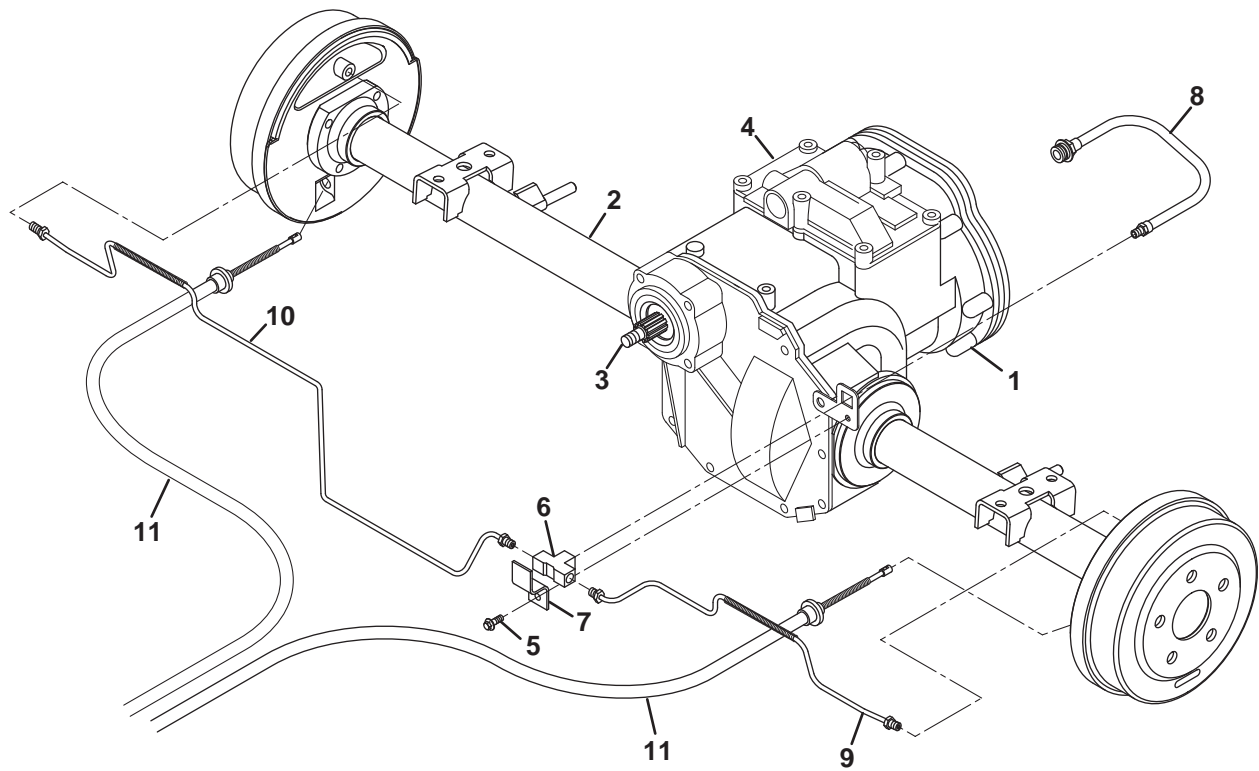


Item	Part No.	Qty.	Description	Serial Numbers/Notes
	894826	1	Differential Assembly	14.21:1 Differential
	894825	1	Differential Assembly	11.16:1 Differential
1	891829	1	• Differential Housing	See 45.1
2	N/S	1	• Axle Tubes and Shafts	See 46.1
3	N/S	1	• Input, Main and Jack Shaft	See 48.1
4	N/S	1	• Front and Shift Cover	See 47.1
5	112050	1	Screw, 1/4-20 x 5/8 in. Self Tap	
6	841842	1	Fitting, Hydraulic Brake Tee	
7	832584	1	Clamp, Tee Fitting	
8	841844	1	Hose, Brake	
9	841838	1	Tube, Left Side Brake	
10	841837	1	Tube, Right Side Brake	
11	893583	2	Cable, Parking Brake	

> Change from previous revision

45.1 Differential Housing


Part Number 891829

Serial No. All

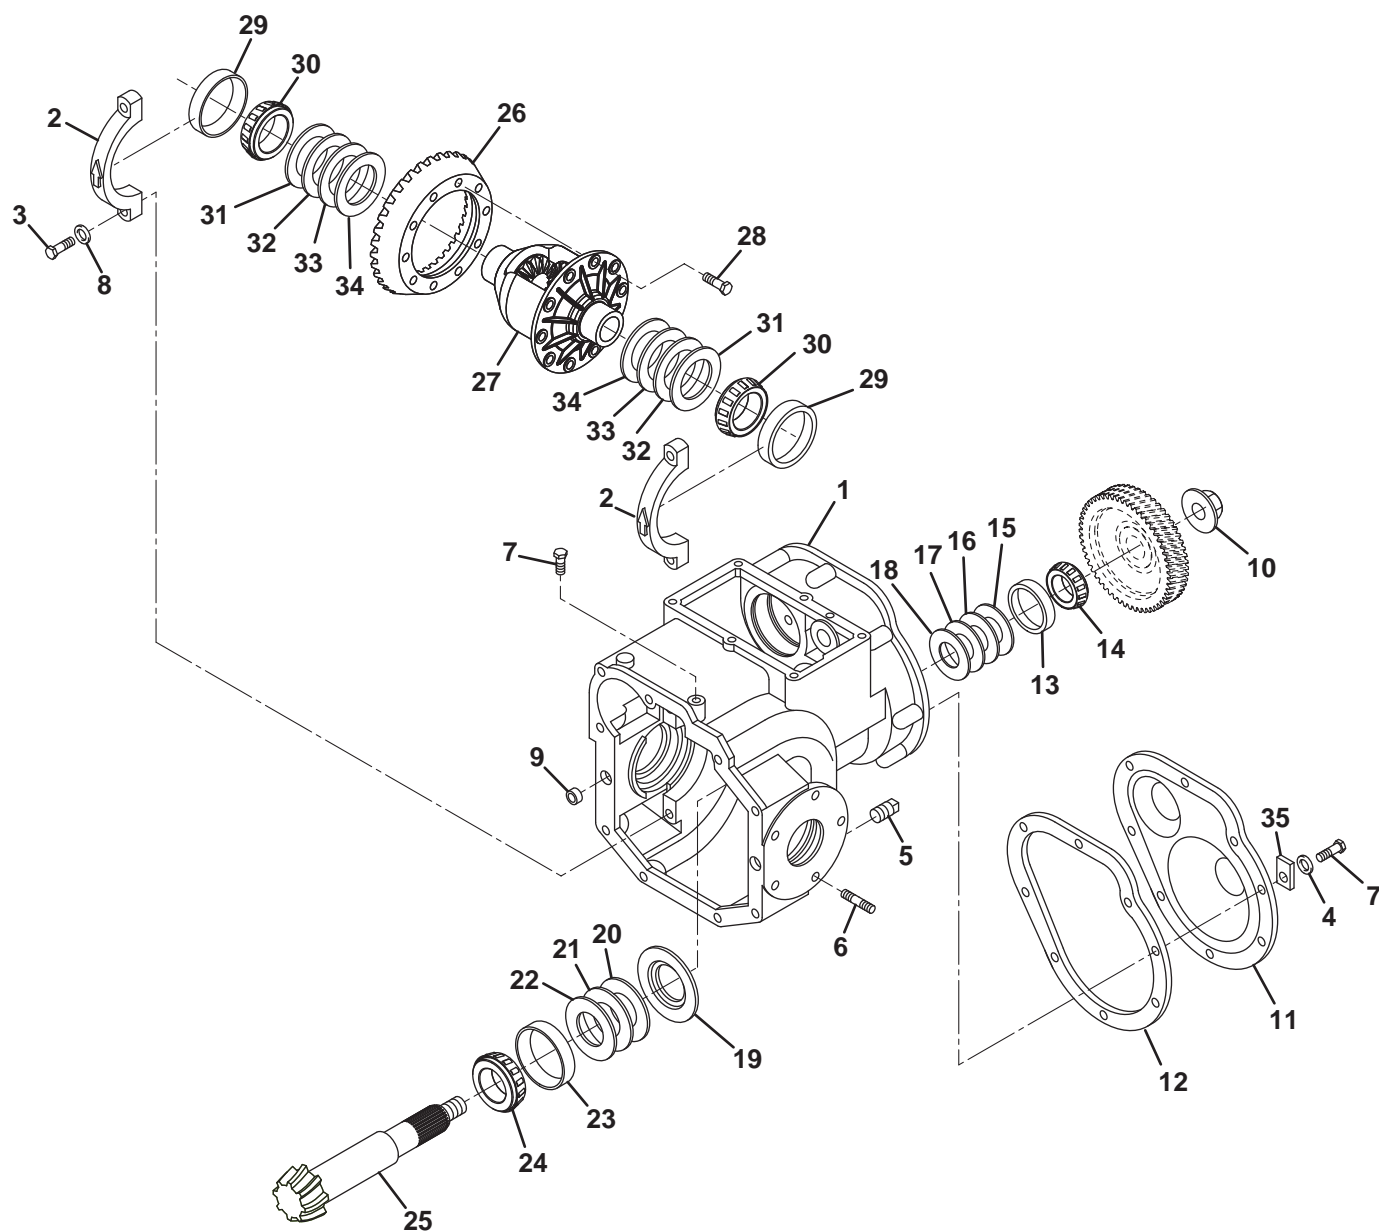

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	891829	1	Differential Housing	
2	N/S	2	• Bearing Caps	
3	306829	4	• Screw, 7/16-14 x 2 in. Hex Head	
4	103867	8	• Flat Washer, 5/16	
5	111074	1	• Plug, Drain	
6	111758	10	• Stud, 3/8-16 & 3/8-24 x 1-23/32	
7	306416	9	• Screw, 5/16-18 x 7/8 in. Hex Head	
8	306982	4	• Flat Washer, 7/16	
9	517226	2	• Bushing	
10	800973	1	• Nut, 3/4-16 Hex Lock	
11	836443	1	• Rear Cover	
12	4211800	1	• Spacer, Differential	
13	814476	1	• Cup, Bearing (2-17/32 in. O.D.)	
14	836680	1	• Cone, Bearing (1-1/8 in. I.D.)	
15	836688	AR	• Shim, .003 Thick	Add or remove shims as required to adjust gear backlash
16	836689	AR	• Shim, .005 Thick	
17	836690	AR	• Shim, .010 Thick	
18	836691	AR	• Shim, .030 Thick	
19	836692	1	• Baffle, Oil	
20	836685	AR	• Shim, .003 Thick	
21	836686	AR	• Shim, .005 Thick	Add or remove shims as required to adjust gear backlash
22	836687	AR	• Shim, .010 Thick	
23	836677	1	• Cup, Bearing (2.84 in. O.D.)	
24	836678	1	• Cone Bearing (1-3/8 in. I.D.)	
25	889870	1	• Gear Set	
26	N/S	1	• • Pinion Gear and Shaft	
	N/S	1	• • Ring Gear	
27	889871	1	• Differential Carrier	
28	800717	10	• Screw, 3/8-24 x 13/16 Hex Head	
29	836675	2	• Cup, Bearing (2.89 in. O.D.)	
30	836676	2	• Cone, Bearing, (1-5/8 in. I.D.)	
31	836681	AR	• Shim, .003 Thick	
32	836682	AR	• Shim, .005 Thick	Add or remove shims as required to adjust gear backlash
33	836683	AR	• Shim, .010 Thick	
34	836684	AR	• Shim, .030 Thick	
35	839948	1	Tag, 14.21:1 Ratio	

> Change from previous revision

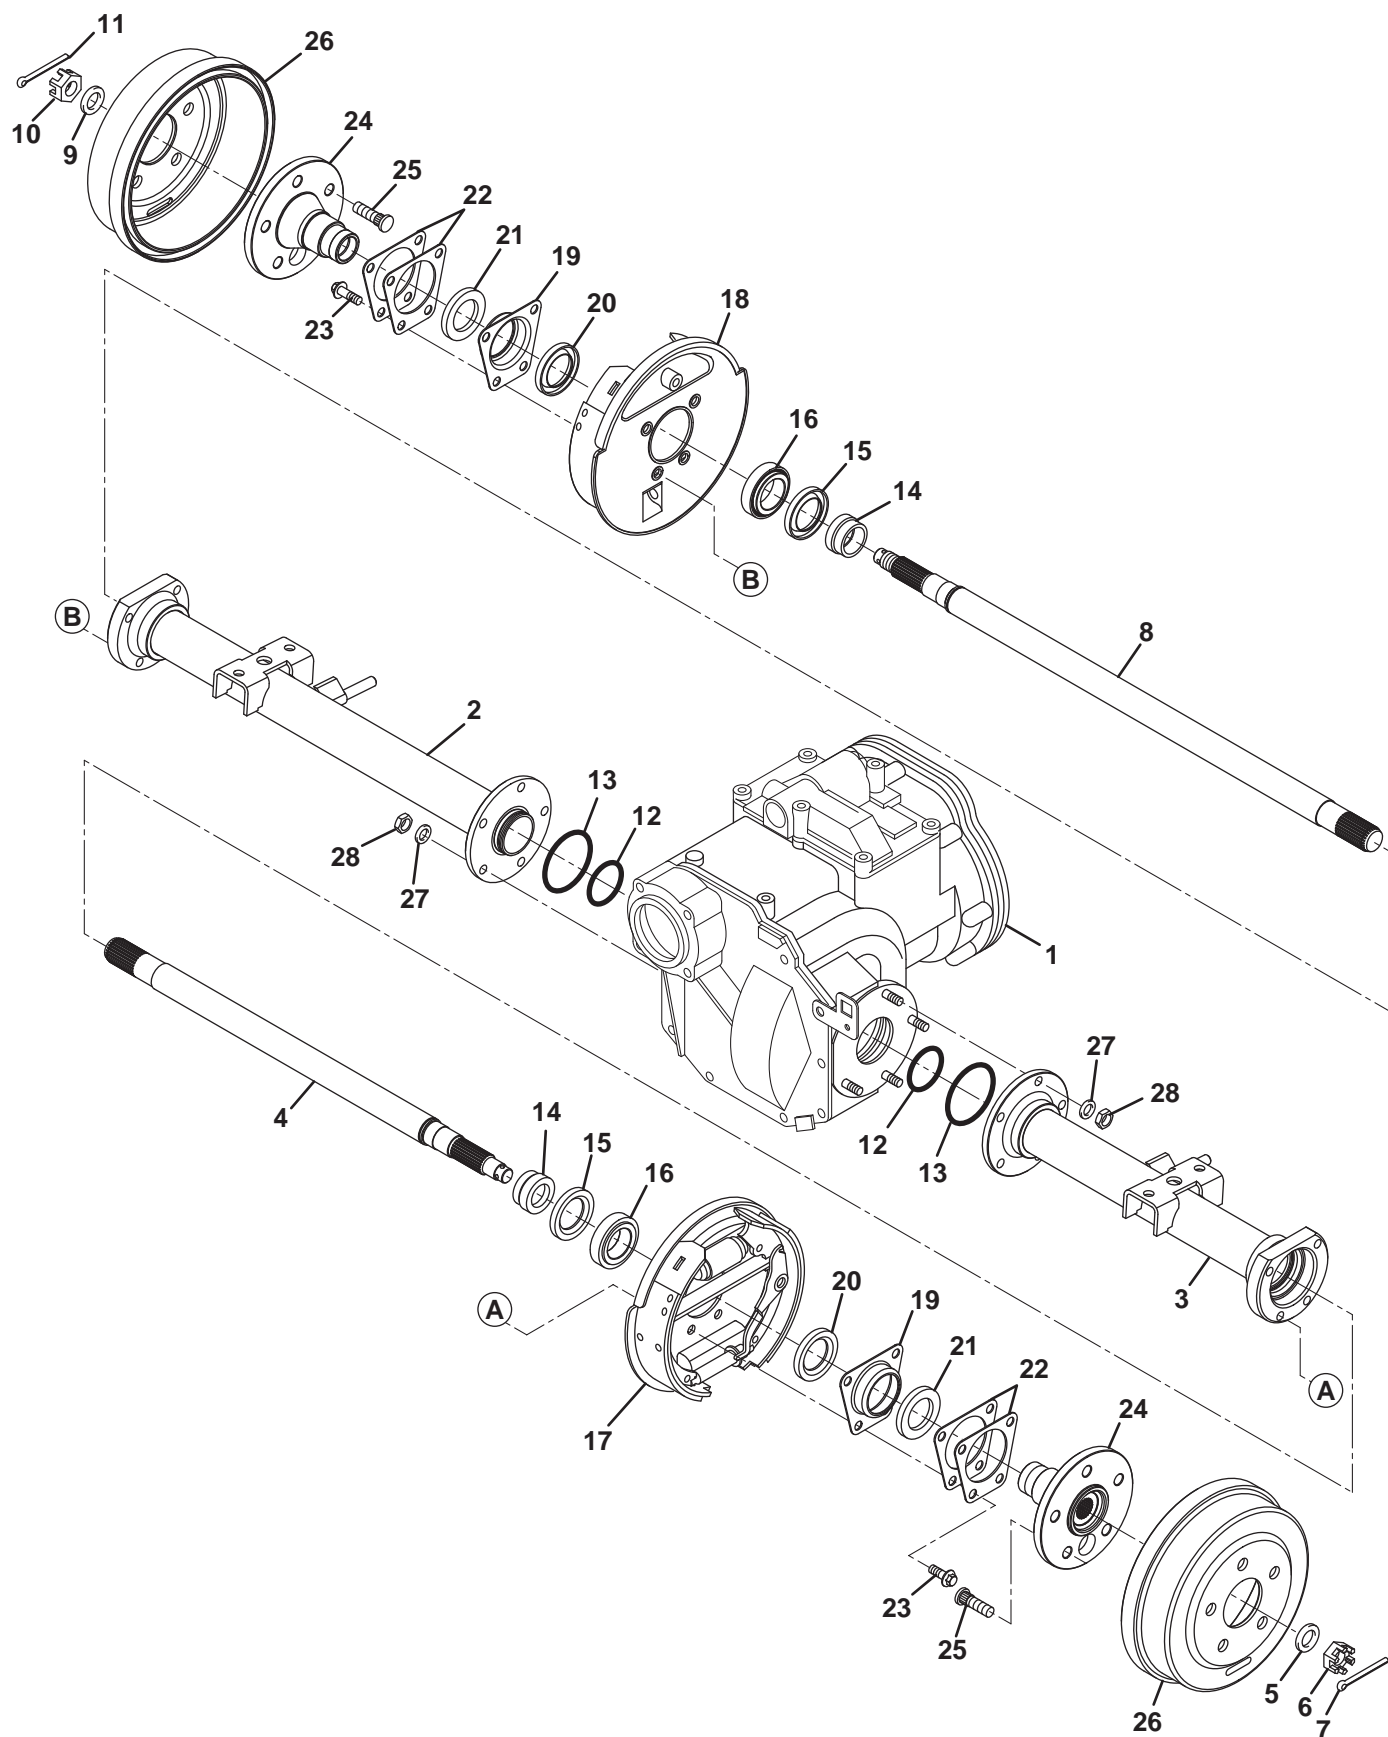

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	894826	1	Differential Assembly	14.21:1 Differential
1	894825	1	Differential Assembly	11.16:1 Differential
2	2702535.7	1	• Tube, Right Side Axle	
3	2702534.7	1	• Tube, Left Side Axle	
4	2700530	1	• Left Side Axle Assembly	
	2700514	1	• • Shaft, Left Side Axle	
5	845356	1	• • Washer	
6	800743	1	• • Nut, 5/8-18 Slotted Hex	
7	304636	1	• • Cotter Pin, 1/8 x 1-1/8 in.	
8	2700531	1	• Right Side Axle Assembly	
	2700515	1	• • Shaft, Right Side Axle	
9	845356	1	• • Washer	
10	800743	1	• • Nut, 5/8-18 Slotted Hex	
11	304636	1	• • Cotter Pin, 1/8 x 1-1/8 in.	
12	836694	2	• Seal, 1-3/4 in. I.D. O-Ring	
13	2703481	2	• Seal, 2 in. I.D. O-Ring	
14	4171761	2	• Collar, Axle Bearing	
15	838539	2	• Seal, Oil	
16	836695	2	• Bearing, Tapered Roller	
17	893581	1	• Left Side Brake Assembly	Includes Parking Brake Lever
	894930	1	• • Kit, Brake Cylinder	Replacement of Cylinder
	894931	1	• • Kit, Brake Cylinder Repair	Repair of Cylinder
	2701253	1	• • Kit, Brake Shoe	Includes Left and Right sides
	894933	1	• • Kit, Left Side Spring	
	894935	1	• • Kit, Left Side Adjuster Repair	
18	893582	1	• Right Side Brake Assembly	Includes Parking Brake Lever
	894930	1	• • Kit, Brake Cylinder	Replacement of Cylinder
	894931	1	• • Kit, Brake Cylinder Repair	Repair of Cylinder
	2701253	1	• • Kit, Brake Shoe	Includes Left and Right sides
	894934	1	• • Kit, Right Side Spring	
	894936	1	• • Kit, Right Side Adjuster Repair	
19	893519	2	• Retainer , Complete	
20	838539	1	• • Seal, Oil	
21	2703309	2	• Washer, Hardened	
22	844813	4	• Ring, Backing	
23	800944	8	• Screw, M10-1.5 x 25 mm	
24	2701408	2	• Hub, Rear Wheel	
25	800908	5	• • Bolt, Wheel	
26	841430	2	• Drum, Brake	
27	306405	10	• Washer, 3/8	
28	805387	10	• Locknut, 3/8-24 Special	


> Change from previous revision

47.1 Front and Shifter Cover

Serial No. All

14.21:1 Differential (894826)

11.16:1 Differential (894825)

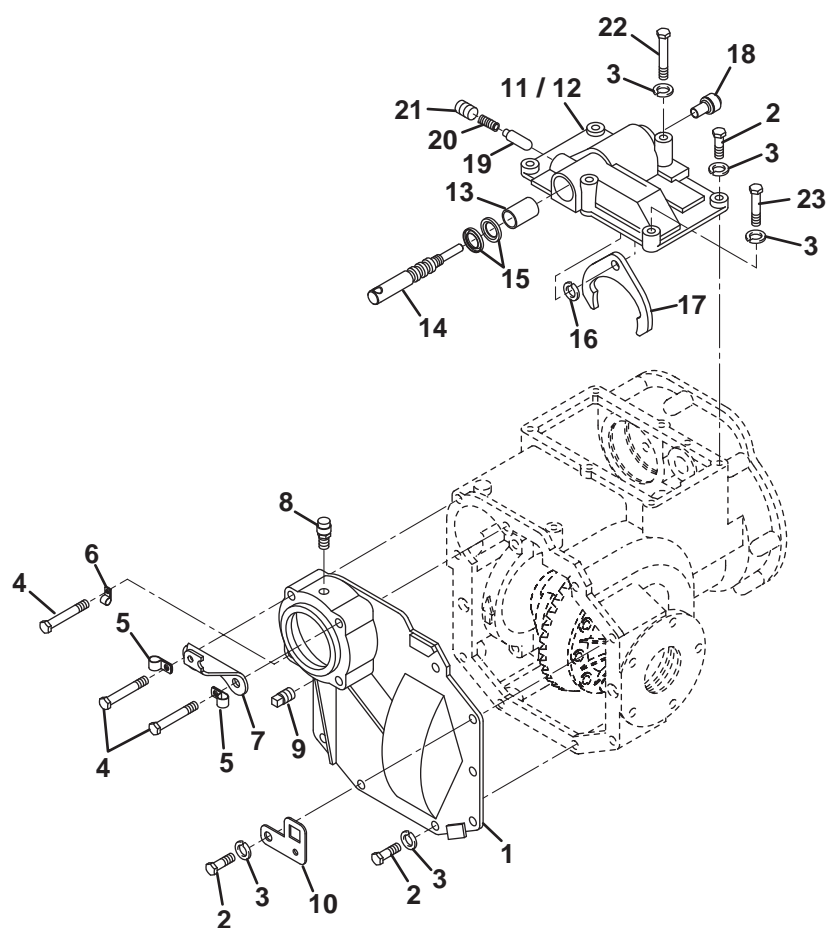

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	836431	1	Cover, Front	14.21:1 Differential Only Right Side Brake Tube
2	306322	12	Screw, 5/16-18 x 7/8 in. Hex Head	
3	103867	14	Flat Washer, 5/16	
4	307776	3	Screw, 3/8-16 x 2-3/4 in. Hex Head	
5	810437	2	Clamp, 1/2 in. P	
6	810435	1	Clamp	
7	836841	1	Bracket, Shift Cable	
8	836852	1	Breather	
9	111074	1	Plug, Fill	
10	836959	1	Bracket, Brake Tee Mounting	
11	889780	1	Shift Cover Assembly	
12	889925	1	• Cover	
13	N/S	1	• • Bushing	
14	836658	1	• Shaft, Shift	
15	831099	2	• Seal, Oil	
16	548937	1	• Lockwasher, 7/16	
17	836657	1	• Fork, Shift	
18	836662	1	• Bushing, Guide	
19	807366	1	• Button, Positioning	
20	2700493	1	• Spring	
21	548204	1	• Set Screw, 3/8-16 x 3/8 in.	
22	306423	2	Screw, 5/16-18 x 1-3/4 in. Hex Head	
23	306435	1	Screw, 5/16-18 x 1-1/4 in. Hex Head	

> Change from previous revision


TURF TRUCKSTER

48.1 Input, Main and Jack Shafts

Serial No. All

14.21:1 Differential (894826)

11.16:1 Differential (894825)

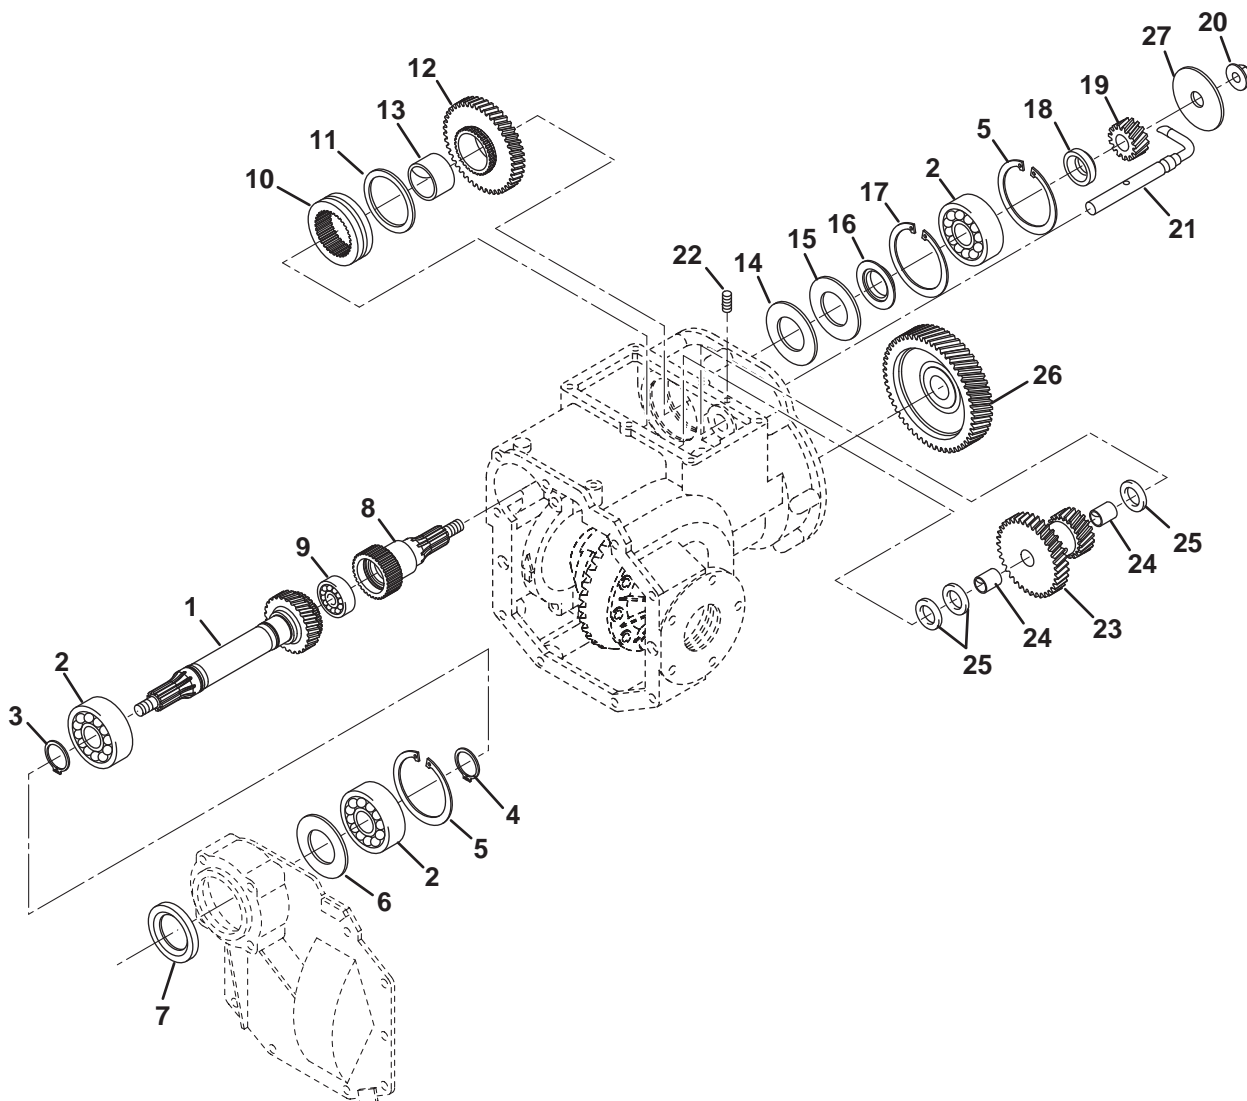

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	836421	1	Shaft, Input	
2	836693	3	Bearing, Ball	
3	809254	1	Ring, External Retaining	
4	800695	1	Ring, External Retaining	
5	800737	2	Ring, Internal Retaining	
6	837020	1	Baffle, Vent	
7	812335	1	Seal, Oil	
8	4184901	1	Shaft, Main	
9	812009	1	Bearing, Ball	
10	836429	1	Collar, Engaging	
11	844956	1	Bearing, Bronze Thrust	
12	894886	1	Gear, Driven	
13	812006	1	• Bushing	
14	811993	1	Bearing, Thrust	
15	844951	AR	Shim, .003 Thick	Add or remove shims as required to adjust gear backlash.
15	844952	AR	Shim, .005 Thick	
15	844953	AR	Shim, .010 Thick	
16	845034	1	Collar, Thrust	14.21:1 Differential (894826) 11.16:1 Differential (894825)
17	548952	1	Lockring	
18	836420	1	Spacer, Pinion	
19	4184900	1	Pinion, 15 Tooth	
19	4211960	1	Pinion, 18 Tooth	
20	800911	1	Nut, 9/16-18 Crown Lock	
21	891089	1	Jackshaft	
22	548201	1	Set Screw, 5/16-18 x 5/16	
23	894519	1	Cluster Gear	
24	844087	2	• Bushing	
25	811992	3	Shim, CLuster Gear	
26	842360	1	Gear, 52 Tooth	
26	836441	1	Gear, 49 Tooth	
27	4186900	1	Baffle, Oil Scoop	


> *Change from previous revision*

49.1 Transmission Clutch Release-Shift Selector

Diesel Engine Only

Serial No. 84063 - All

Serial No. 84064 - All

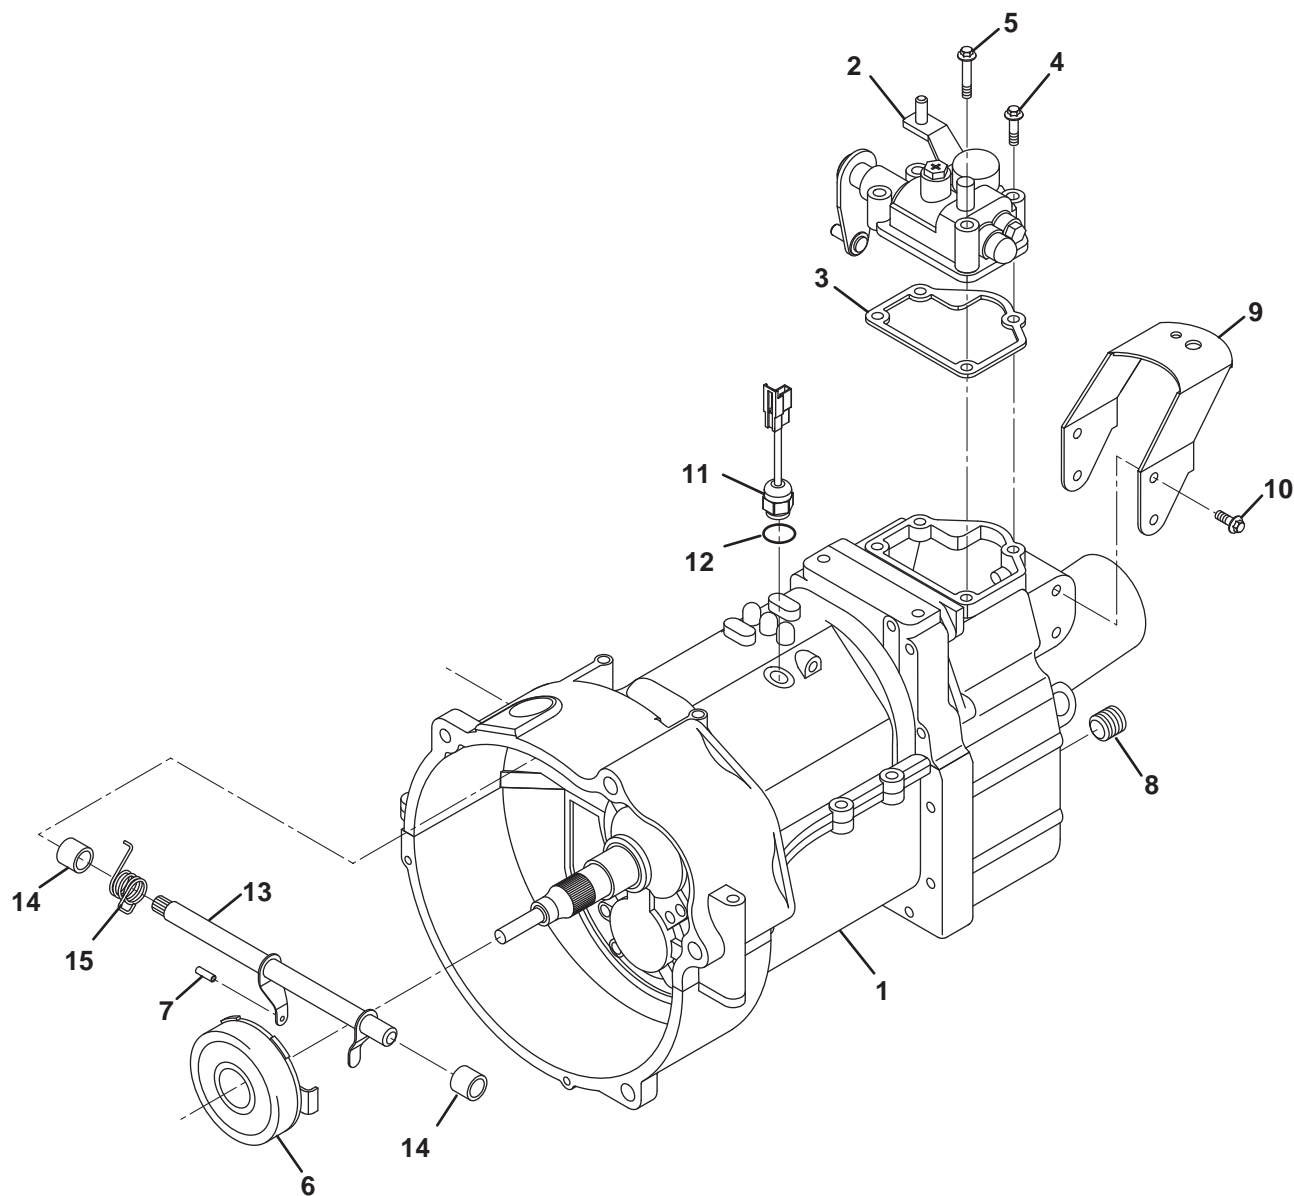

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	REF	1	Transmission Case	See 50.1
2	REF	1	Shift Assembly	See 52.1
3	845223	1	Gasket, Shift Case	
4	2702659	3	Screw, M8-1.25 x 40 mm	
5	01550-08553	1	Screw, M8-1.25 x 55 mm	
6	23265-85200	1	Bearing, Clutch Release	
7	09205-03019	1	Roll Pin	
8	2702684	1	Plug, Drain	
9	11741-85200	1	Support, Transmission	
10	2702475	4	Screw	
11	37610-80043	1	Switch, Backup Light	
12	09280-11002	1	• O-Ring	
13	23260-85203	1	Shaft, Clutch Release	
14	09300-14017	2	Bushing, Clutch Release	
15	09448-20007	1	Spring, Clutch Release	


> Change from previous revision

50.1 Transmission Case

Diesel Engine Only

Serial No. 84063 - All

Serial No. 84064 - All

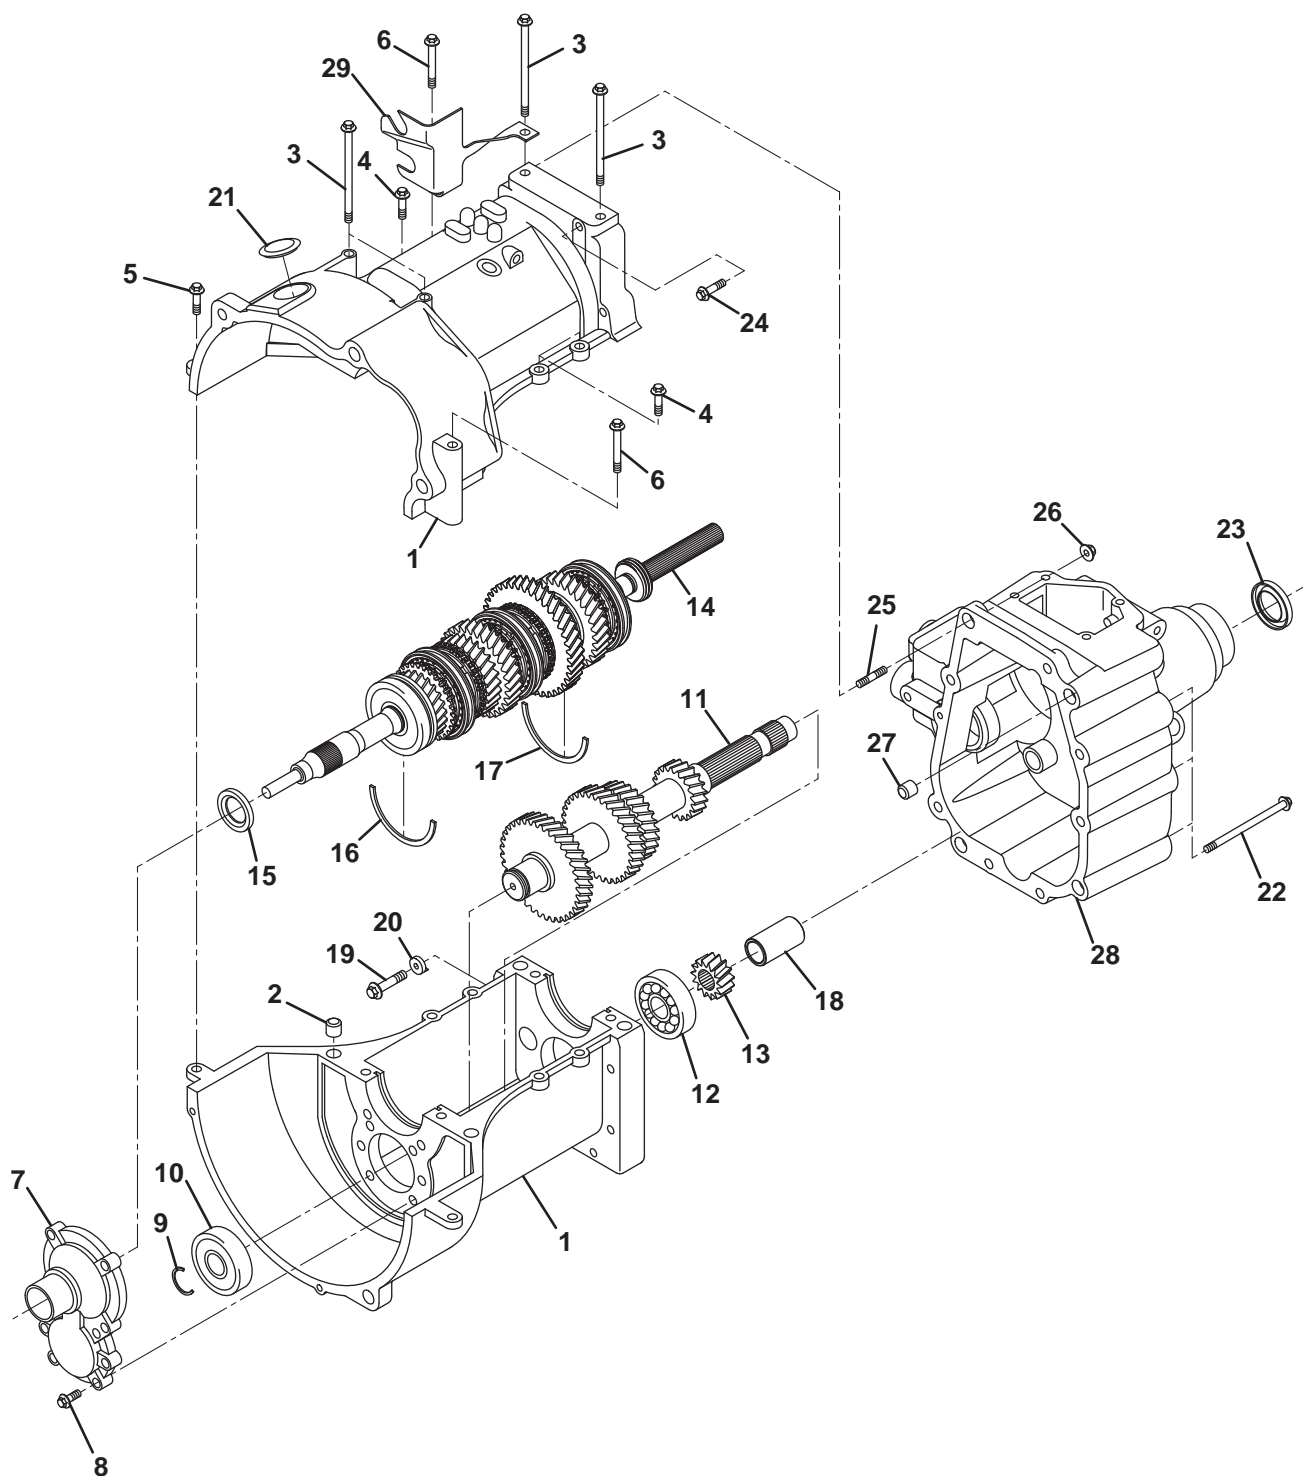


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	24700-85200	1	Case, Transmission	Upper and Lower Half
2	2702690	2	• Pin, Alignment	
3	2702665	4	• Screw, M8-1.25 x 120 mm Flange	
4	2702470	3	• Screw, M8-1.25 x 30 mm Flange	
5	2702659	1	• Screw, M8-1.25 x 40 mm Flange	
6	2702471	2	• Screw, M8-1.25 Flange	
7	24741-83001	1	Retainer, Input Shaft Bearing	
8	09103-08152	8	Screw, M8-1.25 x 25 mm Flange	
9	09380-28007	1	Cir CLip	
10	09262-28019	1	Bearing, Front	
11	24131-83002	1	Counter Shaft	See 51.1
12	09262-28020	1	Bearing, Center	
13	24671-83000	1	Gear, Countershaft Reverse	
14	REF	1	Input and Main Shaft	
15	09283-25088	1	Seal, Oil	
16	09390-68002	1	C-Ring	
17	09390-62010	1	C-Ring	
18	844184	1	Spacer, 5th Gear	
19	452381	1	Screw, M6-1 x 40 mm Flange	
20	844186	1	Washer, Special	
21	2702662	1	Plug, Inspection Timing	See 53.1
22	452396	7	Screw, M8-1.25 x 90 mm Flange	
23	2702683	1	Seal, Extension Case	
24	452390	1	Screw, M8-1.25 x 30 mm Flange	
25	01421-08303	1	Stud, M8-1.25	
26	450324	1	Nut, M8-1.25 Hex Flange	
27	2702690	2	Pin, Alignment	
28	N/S	1	Mechanical PTO Assembly	
29	28391-85202	1	Bracket, Shift Cables	

> Change from previous revision


51.1 Input and Main Shaft

Serial No. 84063 - All
Serial No. 84064 - All

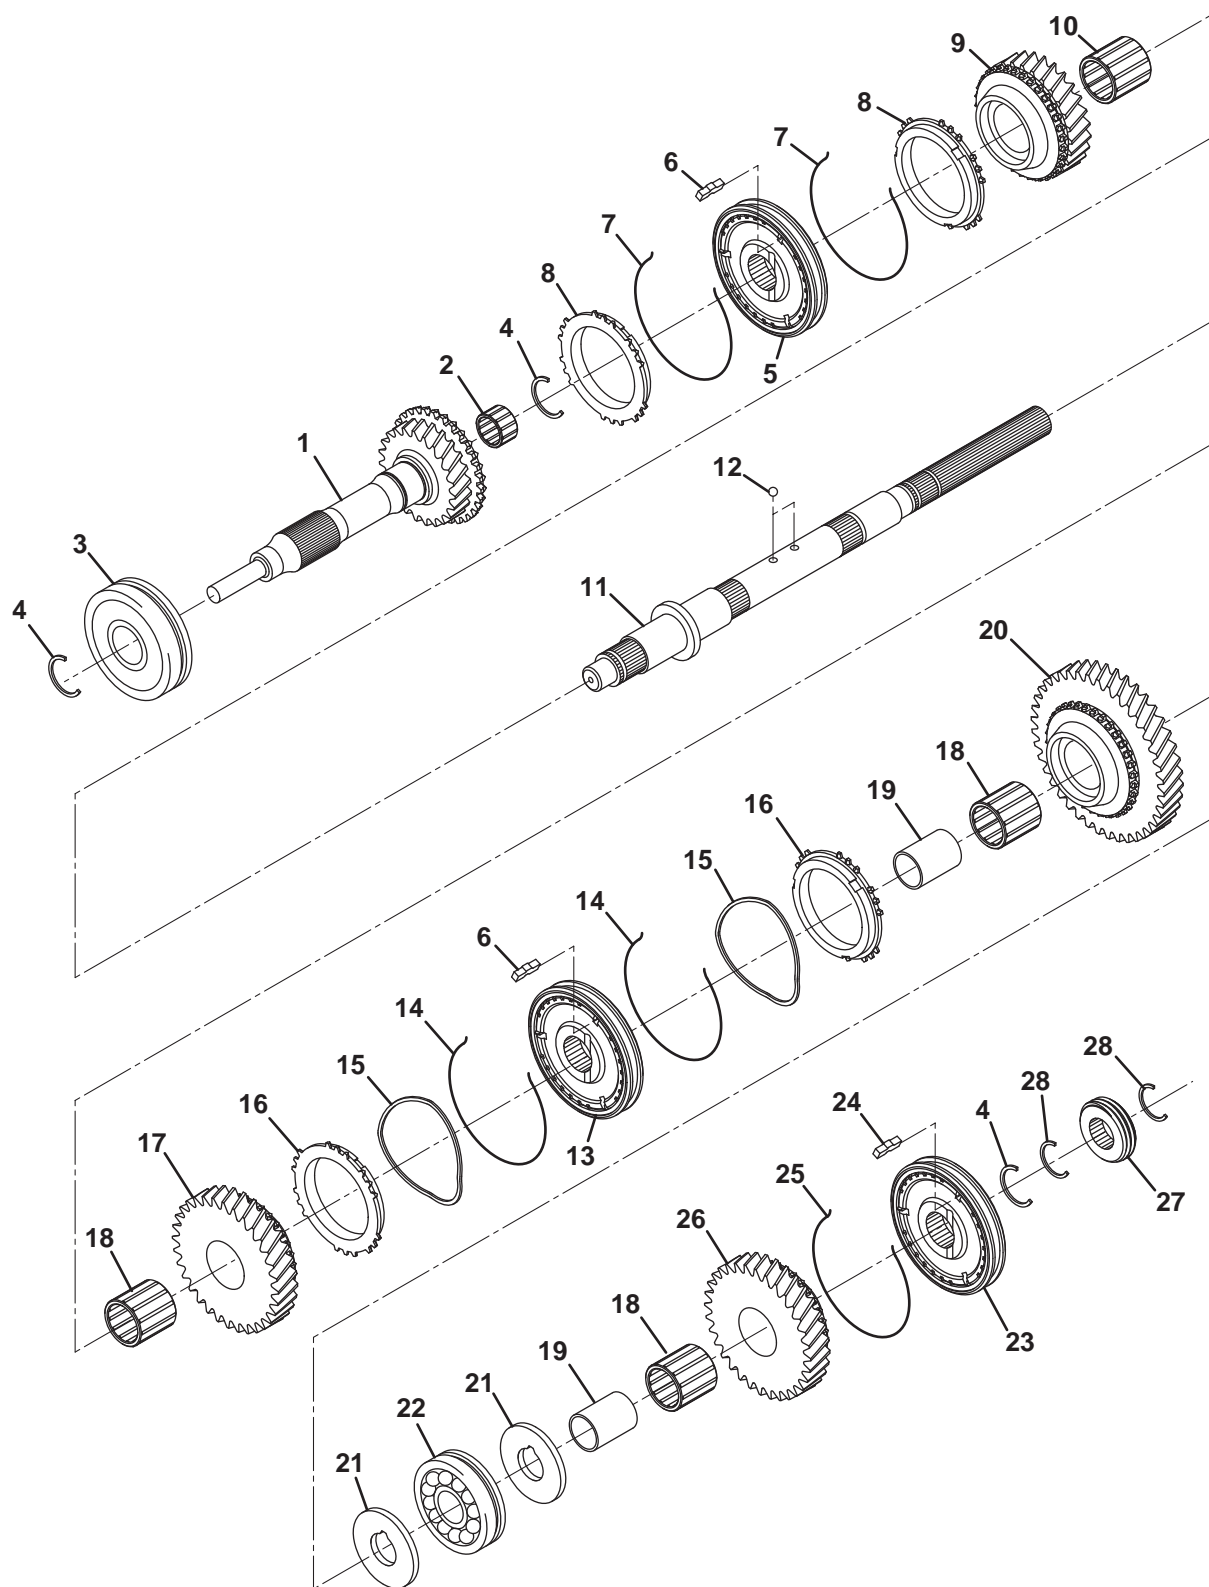

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	24110-80410	1	Shaft, Input	4th Gear
2	2702561	1	Bearing, Needle	
3	4141037	1	Bearing, Input Shaft Ball	
4	09380-28007	3	Cir Clip	
5	24410-83000	1	High Speed Synchroniser	Includes Hub and Sleeve
6	24471-60A00	6	Key, Synchronizer	
7	2703581	2	Spring, High Speed Synchronizer	
8	24432-83001	3	Ring, Synchronizer	
9	2703453	1	Gear, Main Shaft 3rd	3rd Gear
10	09263-30031	1	Bearing, Needle	
11	24121-85252	1	Shaft, Main	
12	06111-06003	2	Ball	
13	24400-83002	1	Low Speed Synchronizer	Includes Hub and Sleeve
14	24436-83000	2	Spring, Low Speed Synchronizer	
15	2703580	2	Spring, Low Speed	
16	24431-83001	2	Ring, Low Speed Synchronizer	
17	24220-60A01	1	Gear, Main Shaft 2nd	2nd Gear
18	09263-35015	3	Bearing, Needle	
19	09300-30003	2	Bushing	
20	24211-83011	1	Gear, Main Shaft Low	
21	09166-30007	2	Washer	1st Gear
22	09262-30086	1	Bearing, Ball	
23	24420-83000	1	Synchronizer, Reverse Drive	
24	24473-70D10	3	Key, Synchronizer	
25	2703581	1	Spring, Reverse Synchronizer	Reverse Gear
26	4119000	1	Gear, Main Shaft Reverse	
27	26121-85202	1	Gear, Speedometer Drive	
28	2702559	2	Cir Clip	

> Change from previous revision

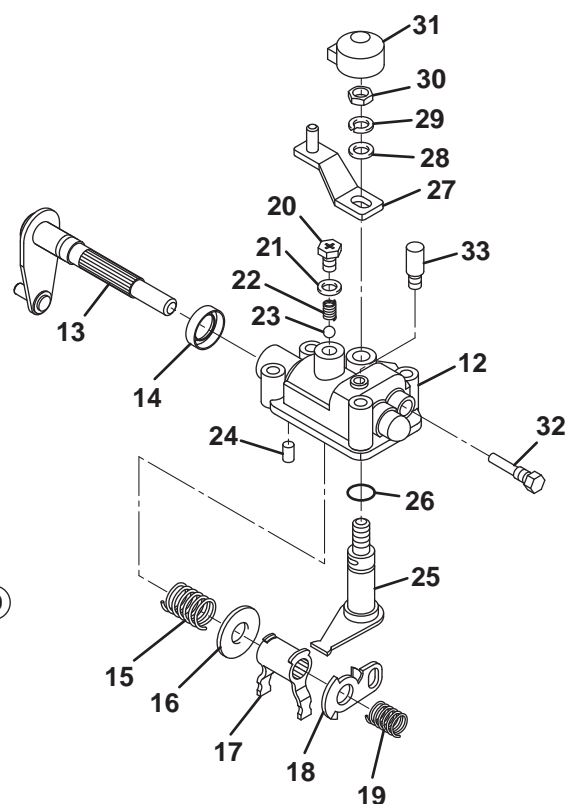


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	25411-85201	1	Shaft, Low Speed Fork	1st and 2nd Gear
2	25420-85201	1	Shaft, High Speed Fork	3rd and 4th Gear
3	25451-85261	1	Shaft, Reverse Fork	Reverse
4	06111-12004	5	Ball	
5	25415-83000	3	Spring, Detent	
6	09261-03017	1	Roller	
7	2703699	1	Fork, Low Gear Shift	1st and 2nd Gear
8	2703699	1	Fork, High Gear Shift	3rd and 4th Gear
9	2703582	1	Fork, Reverse Gear Shift	Reverse
10	09205-05012	3	Pin, 4 x 25 mm Spring	
11	09250-10006	1	Plug, Locating	
12	2703454	1	Case, Gear Shift Lever	
13	25520-85203	1	Shaft, Gear Shift Lever	
14	09284-17004	1	Seal, Oil	
15	25576-70D00	1	Spring	
16	09160-17035	1	Washer, 17 x 32 x 1.2 mm	
17	25541-85201	1	Lever, Gear Select	
18	25545-85055	1	Dog, Reverse Shift Limit	
19	25546-60C01	1	Spring	
20	09128-10002	1	Bolt, M10 x 9 mm Retaining	
21	09168-10007	1	Gasket	
22	25547-70D00	1	Spring	
23	09135-08005	1	Ball	
24	2701953	1	Pin	
25	25530-79501	1	Shaft, Gear Select	
26	09286-09001	1	Seal, Oil	
27	25535-85412	1	Arm, Gear Select	
28	09162-08008	1	Washer	
29	2702883	1	Washer	
30	2702494	1	Nut, M8-1.25 Hex	
31	25536-84200	1	Boot, Gear Select	
32	09135-08005	1	Bolt, Retaining	
33	24821-09001	1	Plug, Breather	

> Change from previous revision

53.1 Mechanical PTO

Diesel Units Only

Serial No. 84063 - All
Serial No. 84064 - All

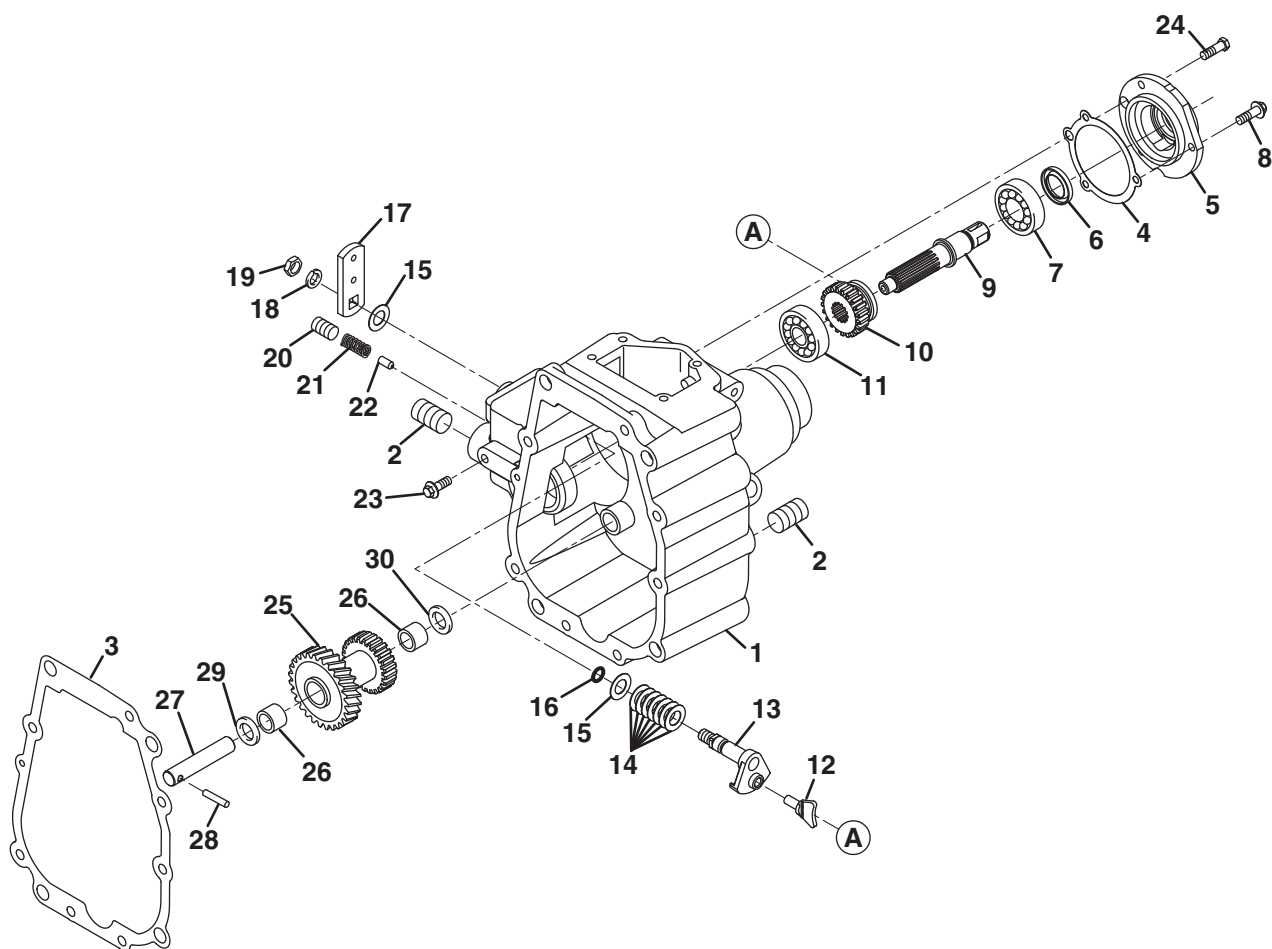


Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	845257	1	Housing, Mechanical PTO	
2	N/S	1	Bushing, Output Shaft	
3	2700121	1	Gasket, PTO Housing to Trasmission	
4	2700120	1	Gasket, Bearing Housing	
5	894989	1	Housing, Bearing	
6	844188	1	• Seal, Oil	
7	815093	1	• Bearing, Ball	
8	452389	3	Screw, M8-1.25 x 25 mm Flange	
9	844185	1	Shaft, PTO Output	
10	815182	1	Gear, 21 Tooth PTO Sliding	
11	844187	1	Bearing, Ball	
12	815085	1	Fork, Sliding	
13	879807	1	Arm, PTO Shifter	
14	548477	AR	Shim	
15	812419	AR	Shim, Transmission	
16	807624	1	O-Ring	
17	817397	1	Arm, PTO Shifter	
18	120166	1	Lockwasher, 1/2	
19	301988	1	Nut, 1/2-20 Hex	
20	548204	1	Set Screw, 3/8-16 x 3/8	
21	815012	1	Spring	
22	815013	1	Button	
23	452380	1	Screw, M6-1 x 30 mm Flange	
24	800425	1	Screw, M6-1 x 12 mm Hex Head	
25	894965	1	Gear, Idler	
26	N/S	2	• Bushing, Countershaft	
27	894947	1	Shaft, Idler	
28	316942	1	• Pin, 1/4 x 1/2 in. Spirol	
29	09166-16014	1	Washer	
30	805307	1	Washer, 5/8 x 1	
31	09246-16010	2	Plug, 1/2 NPT	

> Change from previous revision

54.1 Diesel Engine Main Harness

Part Number 894266

Serial No. 84063 - All
Serial No. 84064 - All

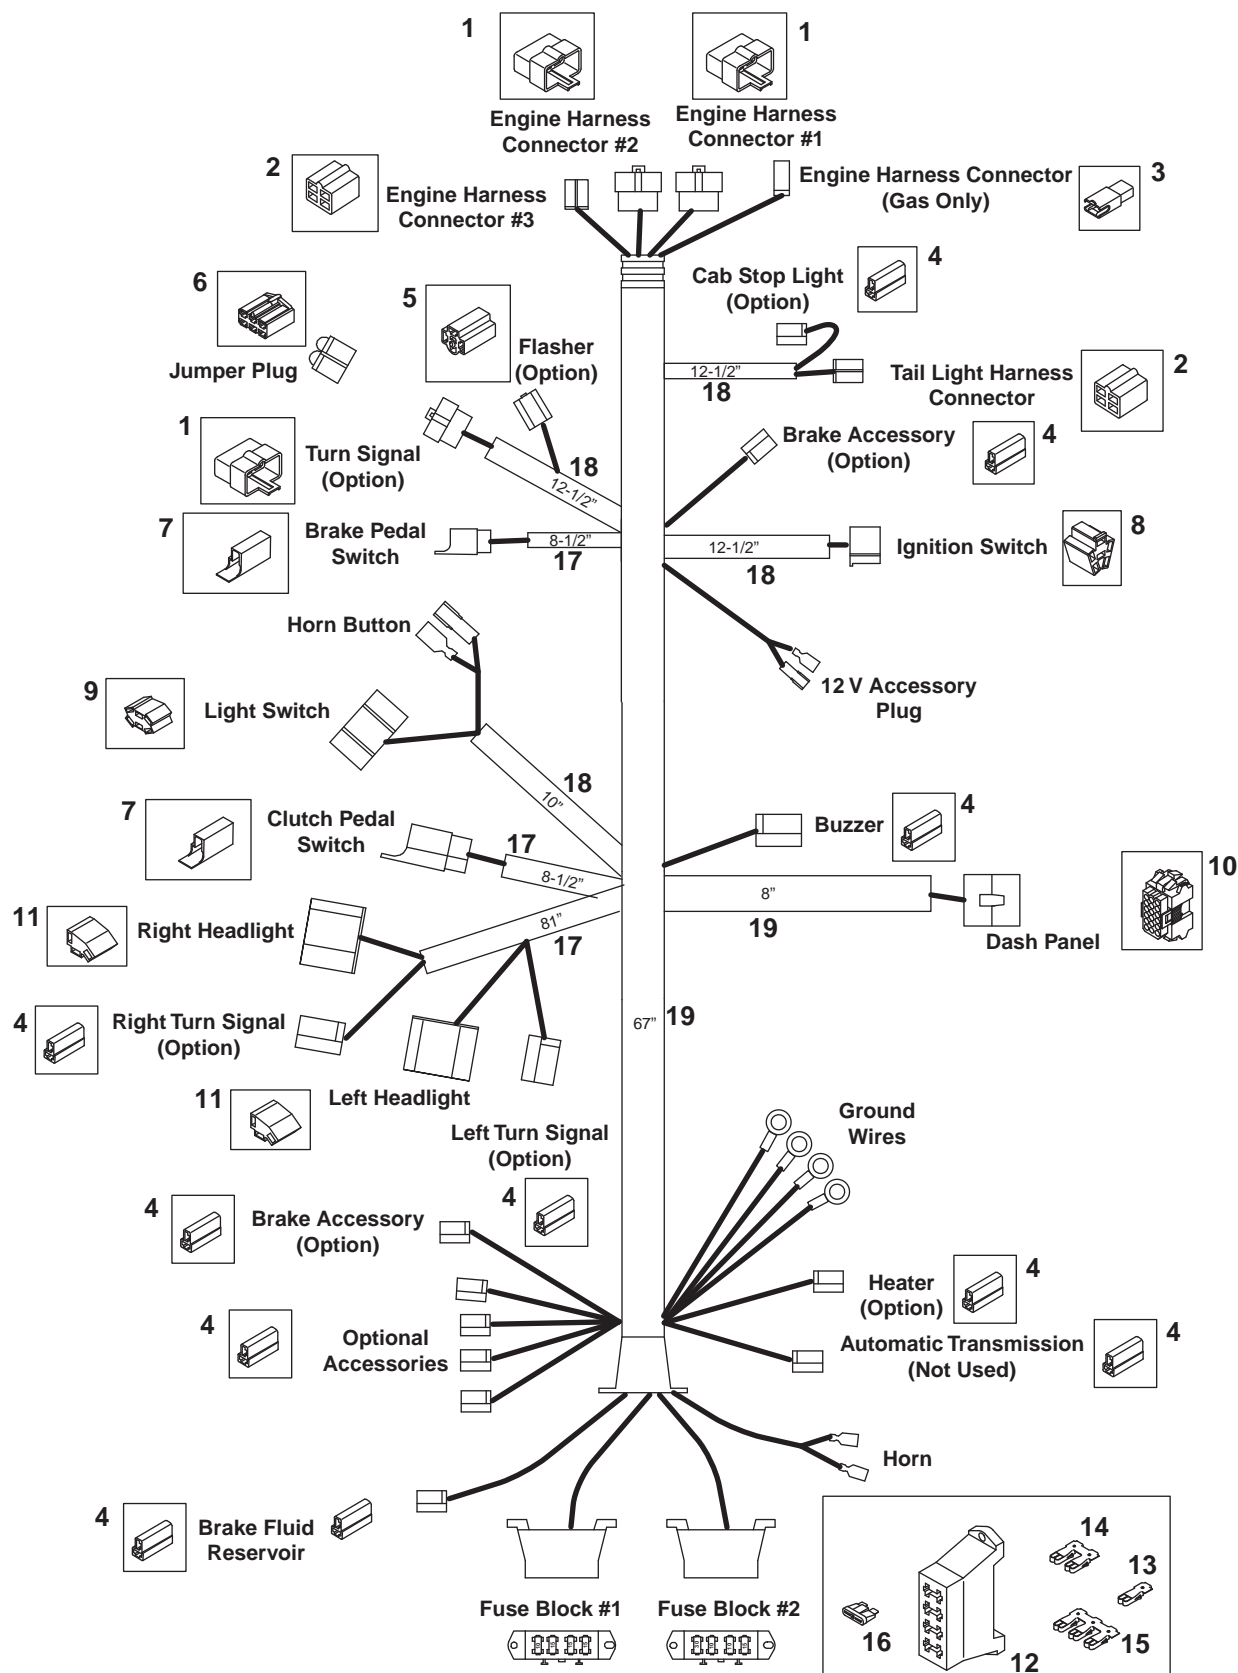


Item	Part No.	Qty.	Description	Serial Number / Notes
1	825973	3	Connector, Six Male Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	Single Wire
	825961	AR	Terminal, 1/4 in. Male 10 Gauge	Two Wire
2	829630	2	Connector, Four Female Terminal	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
3	826726	1	Connector, One Female Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	
4	826005	13	Connector, Two Female Terminal	
	825748	AR	Terminal, 1/ in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
5	825894	1	Connector, Flasher	
	825899	AR	Terminal, 5/16 in. Female 14-16 Gauge	
6	825877	1	Connector, Six Female Terminal	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
7	826006	2	Connector, Two Male Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	
8	837296	1	Connector, Ignition Switch	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
9	843598	1	Connector, Rocker Switch	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
10	843550	1	Connector, Eighteen Terminal	
	843551	AR	Terminal	
11	837301	2	Connector, Headlight	
	825899	AR	Terminal, 5/16 in. Female 14-16 Gauge	One Wire
	828629	AR	Terminal, 5/16 in. Female 14-16 Gauge	Two Wire
12	825996	1	Fuse Holder	
13	825997	4	Fuse Clip, 1 Term., 14-16 Gauge	
14	825998	6	Fuse Clip, 1 Term, 10 Gauge	
15	825999	2	Fuse Clip, 3 Term. 14-16 Gauge	
16	836892	5	Fuse, 10 Amp	
16	842983	2	Fuse, 15 Amp	
16	826000	1	Fuse, 20 Amp	
17	826190	AR	Tubing, 3/8 in. I.D. Black Convuluted	
18	826191	AR	Tubing, 1/2 in. I.D. Black Convuluted	
19	826192	AR	Tubing, 3/4 in. I.D. Black Convuluted	

> Change from previous revision

55.1 Diesel Engine and Fan Harness

Part Numbers 4174321, 4179800, and 4179801

Serial No. 84063 - All
Serial No. 84064 - All

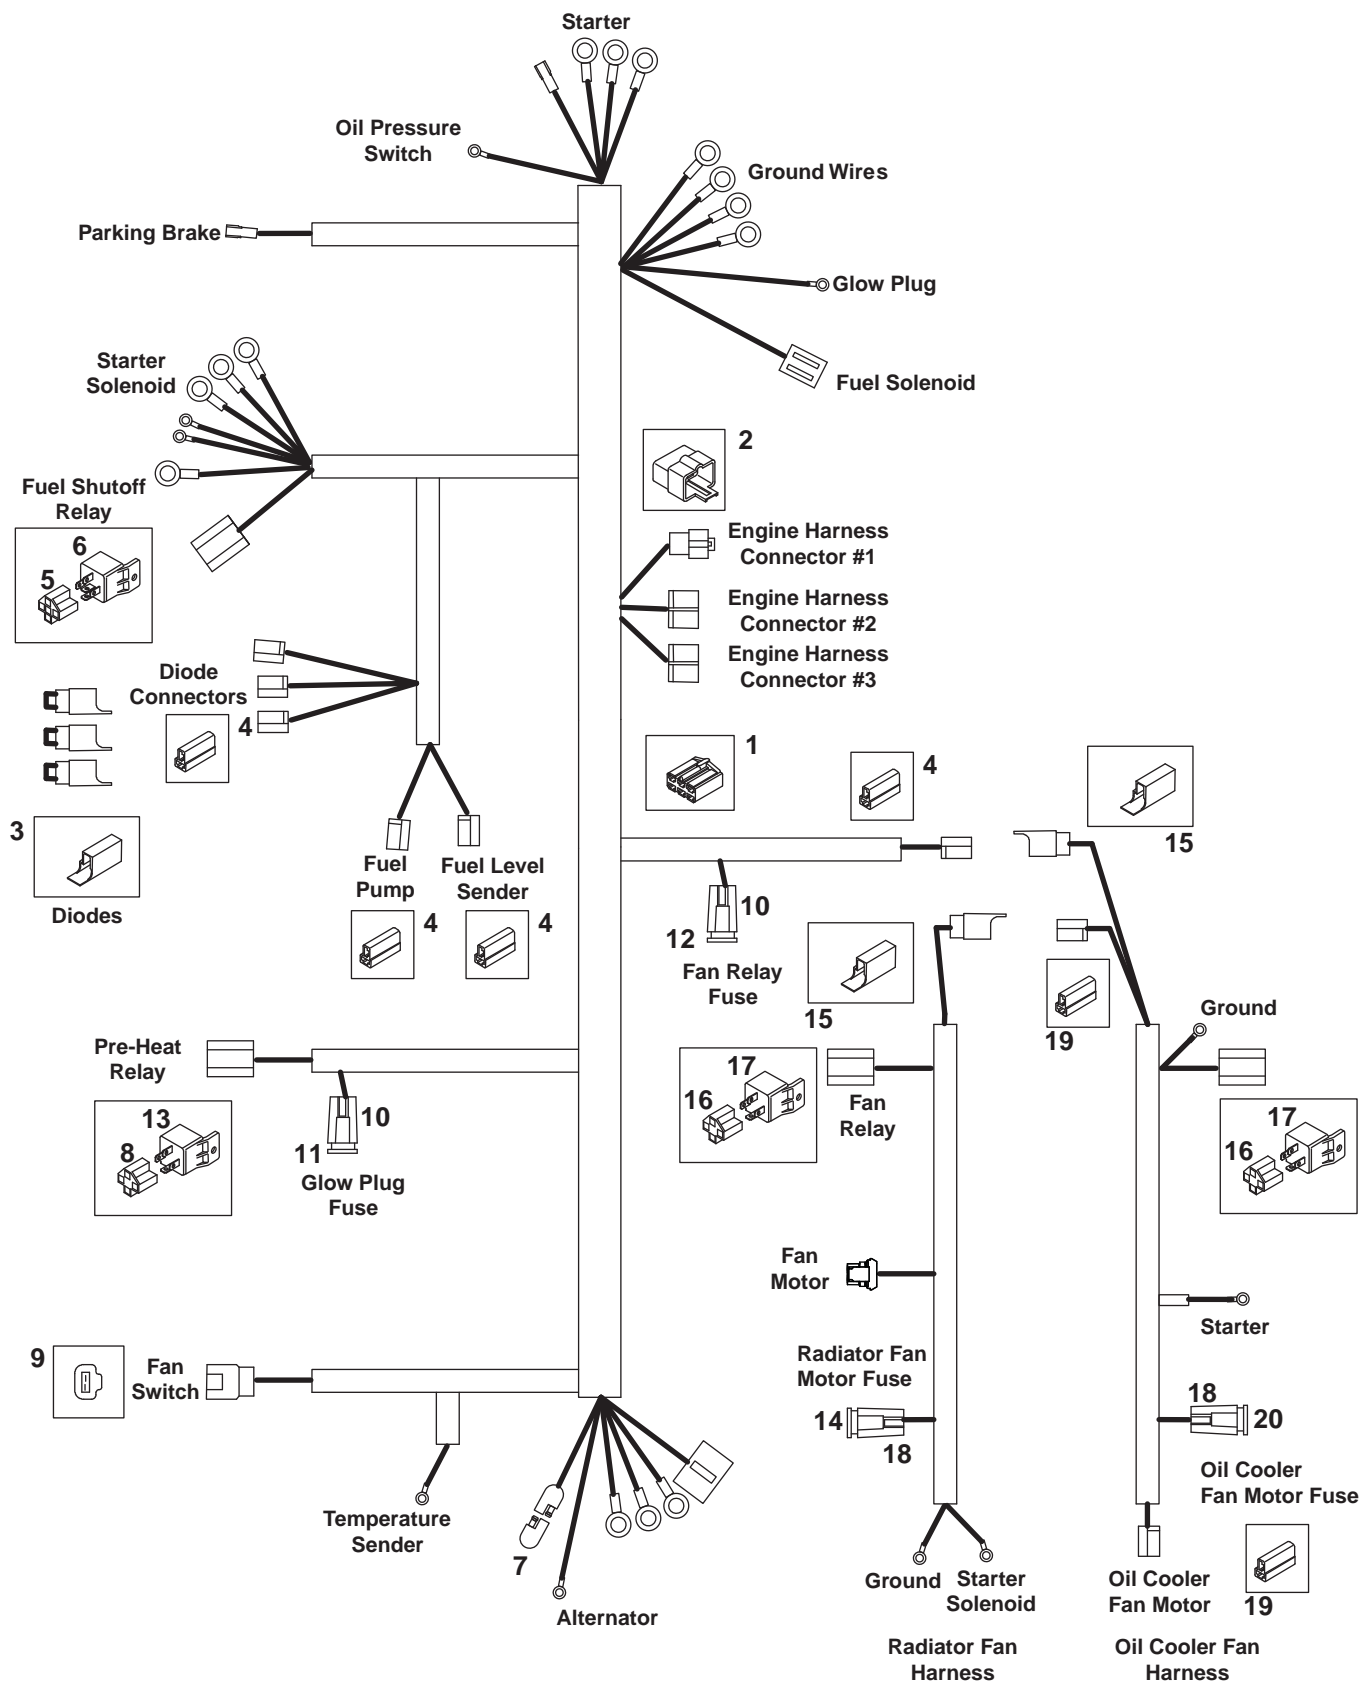

Item	Part No.	Qty.	Description	Serial Numbers/Notes
1	4174321	1	Engine Harness	Single Wire
	825877	2	• Connector, Six Female Terminal	
	825748	AR	• Terminal, 1/4 in. Fem. 14-16 Gauge	
2	825878	AR	• Terminal, 1/4 in. Fem. 10 Gauge	Two Wire
	829630	1	• Connector, Four Male Terminal	Two Wire
	825961	AR	• Terminal, 1/4 in. Male 10 Gauge	
3	884398	3	• Diode Connector Assembly	
4	826005	6	• Connector, Two Female Terminal	Single Wire
	825748	AR	• Terminal, 1/4 in. Fem. 14-16 Gauge	
	825878	AR	• Terminal, 1/4 in. Fem. 10 Gauge	
5	843168	1	• Connector, Relay	Two Wire
	842966	AR	• Terminal, Female Relay	
6	843167	1	• Relay, 12V 15 Amp DPST	Two Wire
7	558019	1	• Resistor Plug	
8	2700868	1	• Connector, 70 Amp Relay	Single Wire
	842966	AR	• Terminal, Female Relay	
	2700869	AR	• Terminal, 3/8 in. Female Relay	
9	842959	1	• Connector, 2 Contact	Two Wire
	833257	2	• Terminal, 3/32 in. Female	
	838463	2	• Seal, Wire	
10	NS	2	• Block, Maxi Fuse	Single Wire
11		1	• Fuse, 50 Amp Maxi Fuse	
12	4113261	1	• Fuse, 25 Amp	Two Wire
13	4221100	1	• Relay, 12V, 70 Amp SPST	
14	4179801	1	Radiator Fan Harness	Single Wire
	836536	1	• Fuse, 40 Amp	
	826006	1	• Connector, Two Male Terminal	
15	825886	AR	• Terminal, 1/4 in. Male 14-16 Gauge	Two Wire
	2700868	1	• Connector, 70 Amp Relay	
	842966	AR	• Terminal, Female Relay	
16	2700869	AR	• Terminal, 3/8 in. Female Relay	Single Wire
	4221100	1	• Relay, 12V, 70 Amp SPST	
	826254	2	• Block, Single Fuse	
17	825997	AR	• Fuse Clip, 1 Term., 14-16 Gauge	Two Wire
	826193	7-1/2"	• Tubing, 7/16 in. I.D. Green	
18	4179800	1	Oil Cooler Fan Harness	25 Foot Bulk
	826005	1	• Connector, Two Female Terminal	
	825748	AR	• Terminal, 1/4 in. Fem. 14-16 Gauge	
19	826193	58"	• Tubing, 7/16 in. I.D. Green	Includes Items 15~18
	842983	1	• Fuse, 15 Amp	
20				25 Foot Bulk

> Change from previous revision

TURF TRUCKSTER


56.1 Gas Main Harness

Part Number 4238042

Serial No. 84067 - All

Serial No. 84068 - All

Serial No. 84069 - All

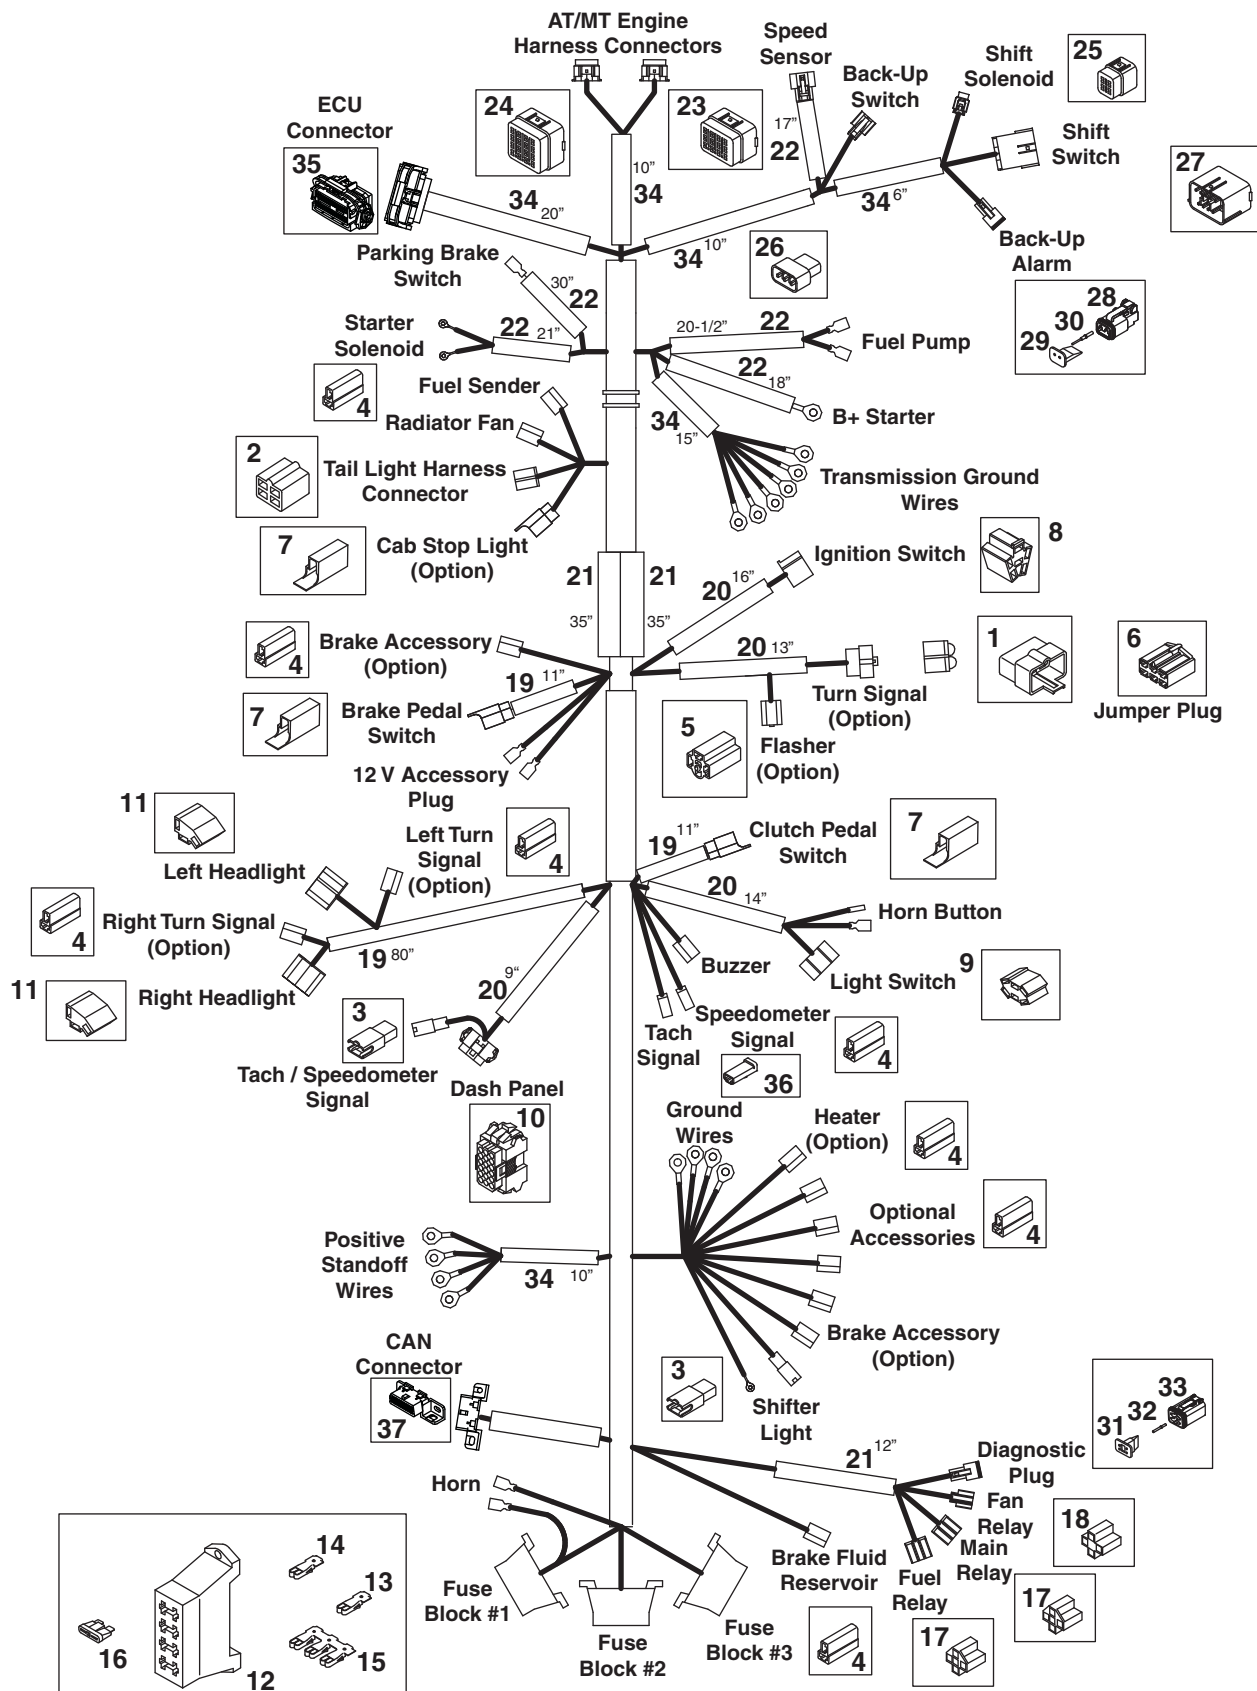


Item	Part No.	Qty.	Description	Serial Number / Notes
1	825973	1	Connector, Six Male Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	Single Wire
	825961	AR	Terminal, 1/4 in. Male 10 Gauge	Two Wire
2	829631	1	Connector, Four Female Terminal	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/ in. Female 10 Gauge	Two Wire
3	826726	2	Connector, One Female Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	
4	826005	12	Connector, Two Female Terminal	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
5	825894	1	Connector, Flasher	
	825889	AR	Terminal, 5/16 in. Female 14-16 Gauge	
6	2700913	1	Jumper Plug, Taillight	
	825877	1	• Connector, Six Female Terminal	
	825748	AR	• Terminal, 1/4 in. Female 14 Gauge	Single Wire
	825878	AR	• Terminal, 1/4 in. Female 10 Gauge	Two Wire
7	826006	3	Connector, Two Male Terminal	
	825886	AR	Terminal, 1/4 in. Male 14-16 Gauge	
8	837296	1	Connector, Ignition Switch	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
9	843598	1	Connector, Rocker Switch	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	Single Wire
	825878	AR	Terminal, 1/4 in. Female 10 Gauge	Two Wire
10	843550	1	Connector, Eighteen Terminal	
	843551	AR	Terminal	
11	837301	2	Connector, Headlight	
	825889	AR	Terminal, 5/16 in. Female 14-16 Gauge	One Wire
	828629	AR	Terminal, 5/16 in. Female 14-16 Gauge	Two Wire
12	825996	3	Fuse Holder	
13	825997	12	Fuse Clip, 1 Term., 14-16 Gauge	
14	825998	6	Fuse Clip, 1 Term, 10 Gauge	
15	825999	2	Fuse Clip, 3 Term. 14-16 Gauge	
16	836892	7	Fuse, 10 Amp	
16	842983	3	Fuse, 15 Amp	
16	826000	1	Fuse, 20 Amp	
16	4113261	1	Fuse, 25 Amp	
17	843168	2	Connector, 15 Amp Relay	
	842966	8	Terminal, Female Relay	
18	2700868	1	Connector, 70 Amp Relay	
	842966	2	Terminal, 1/4 in. Female Relay	
	2700869	2	Terminal, 3/8 in. Female Relay	
19	826190	AR	Tubing, 3/8 in. I.D. Black Convuluted	50 Foot Bulk
20	826191	AR	Tubing, 1/2 in. I.D. Black Convuluted	25 Foot Bulk

56.1 Gas Main Harness (Continued)

Part Number 4238042


Serial No. 84067 - All
Serial No. 84068 - All
Serial No. 84069 - All

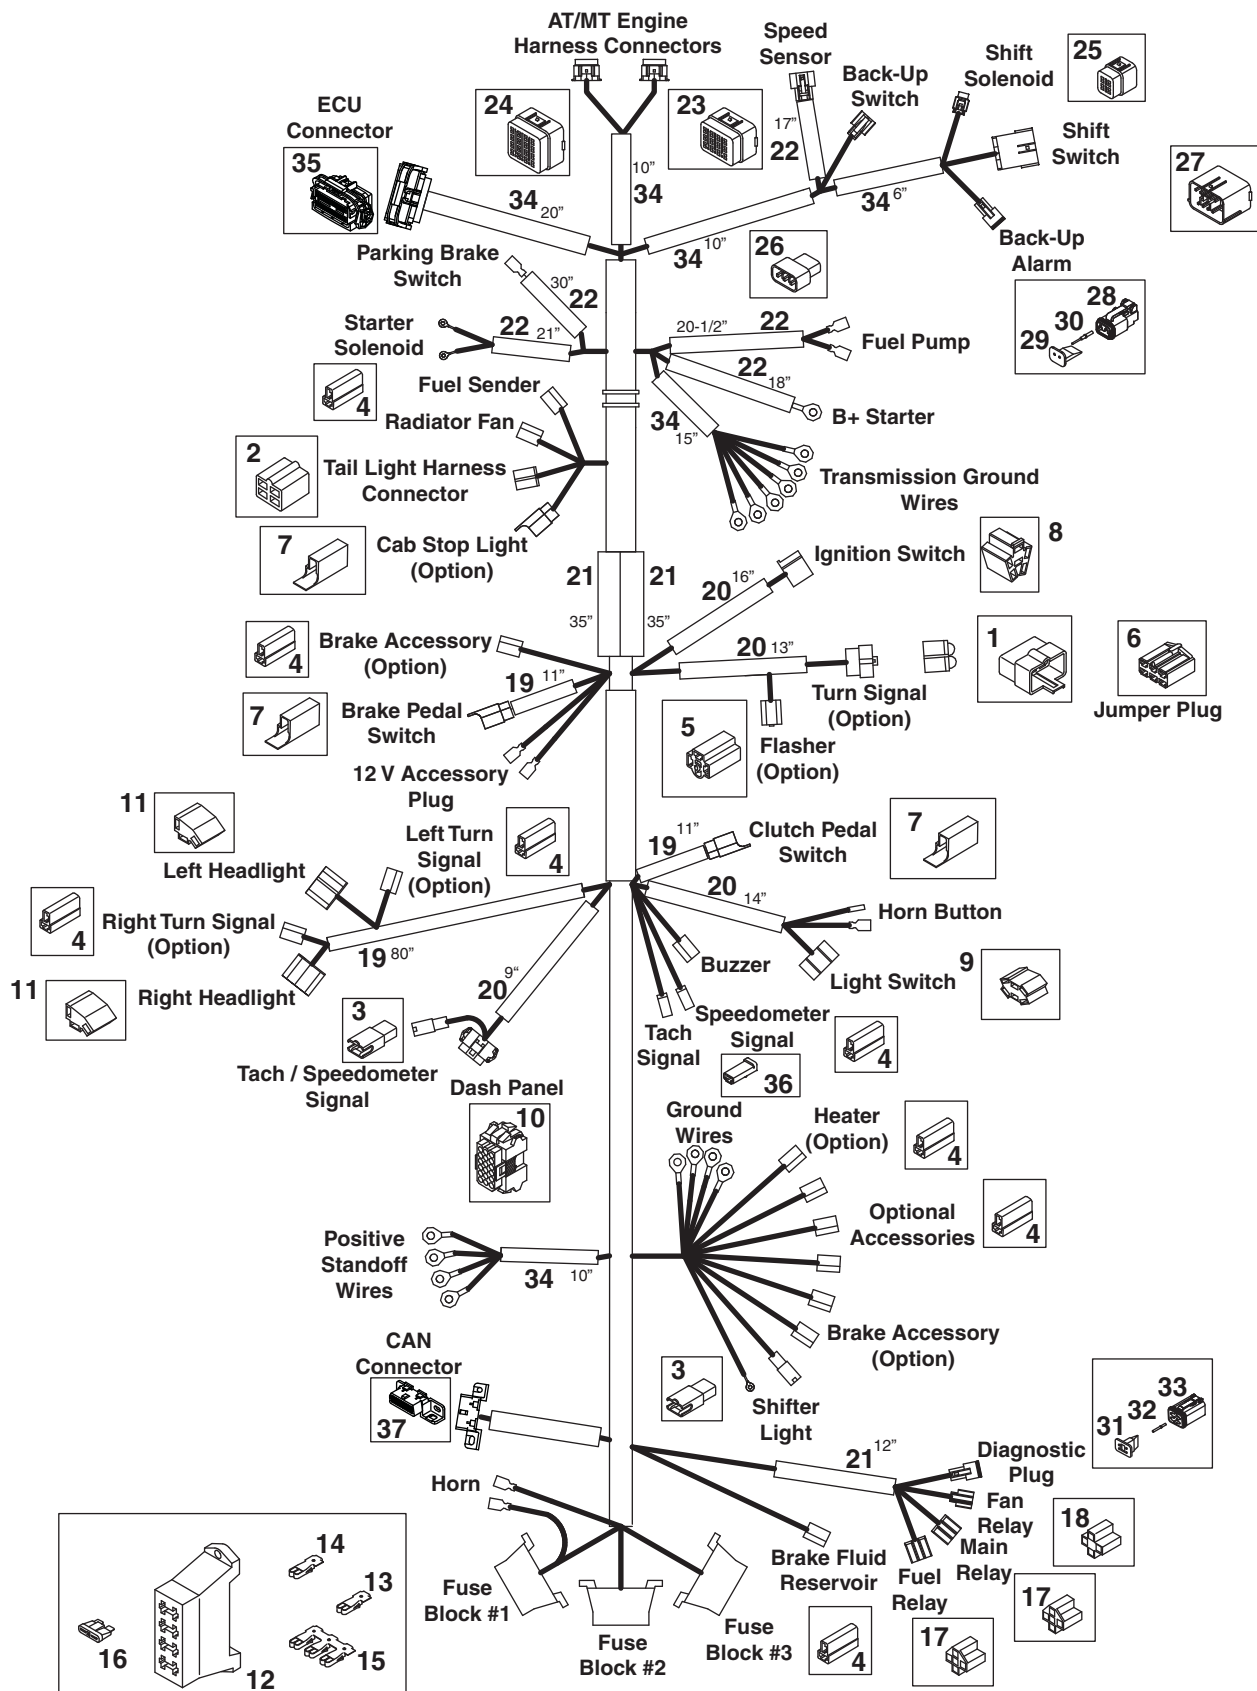



Item	Part No.	Qty.	Description	Serial Number / Notes
21	826192	AR	Tubing, 3/4 in. I.D. Black Convolute	25 Foot Bulk
22	826193	AR	Tubing, 7/16 in. I.D. Green Convolute	25 Foot Bulk
23	N/S	1	Connector, 12 Contact Male	MT Engine Harness Connector
	833257	6	Terminal, Female	
	838463	6	Seal, Wire	
	2700933	6	Plug, Cavity	
24	N/S	1	Connector, 16 Contact Male	AT Engine Harness Connector
	833257	14	Terminal, Female	
	838463	14	Seal, Wire	
	2700933	2	Plug, Cavity	
	4118039	7	Plug, ECU Connector	
25	845330	1	Connector, 4 Contact Male	
	833257	4	Terminal, Female	
	838463	4	Seal, Wire	
26	845327	1	Connector, 3 Contact Female	
	2700380	3	Terminal	
	2700381	3	Seal, Wire	
27	845328	1	Connector, 9 Contact Female	
	2700385	2	Terminal	
	2700387	2	Seal, Wire	
	2700384	7	Terminal	
	2700386	7	Seal, Wire	
28	839917	1	Plug, 2 Wire Deutsch	
29	839921	1	Lock, 2 Wire Deutsch	
30	524358	2	Terminal, 18-20 AWG Male Pin	
31	838768	2	Lock, 4 Wire Deutsch	
32	838769	4	Terminal, 18-20 AWG Socket	
33	838770	2	Plug, 4 Wire Deutsch	
34	4245130	AR	Tubing, 1/2 in. I.D. Green Convolute	30 Inch Length
35	N/S	1	Connector, 60 Contact	
36	825880	2	Connector, One Male Terminal	
	825748	AR	Terminal, 1/4 in. Female 14-16 Gauge	
37	N/S	1	CAN Connector	


57.1 Gas Engine Electrical Schematic

Serial No. 84067 All
Serial No. 84068 All
Serial No. 84069 All

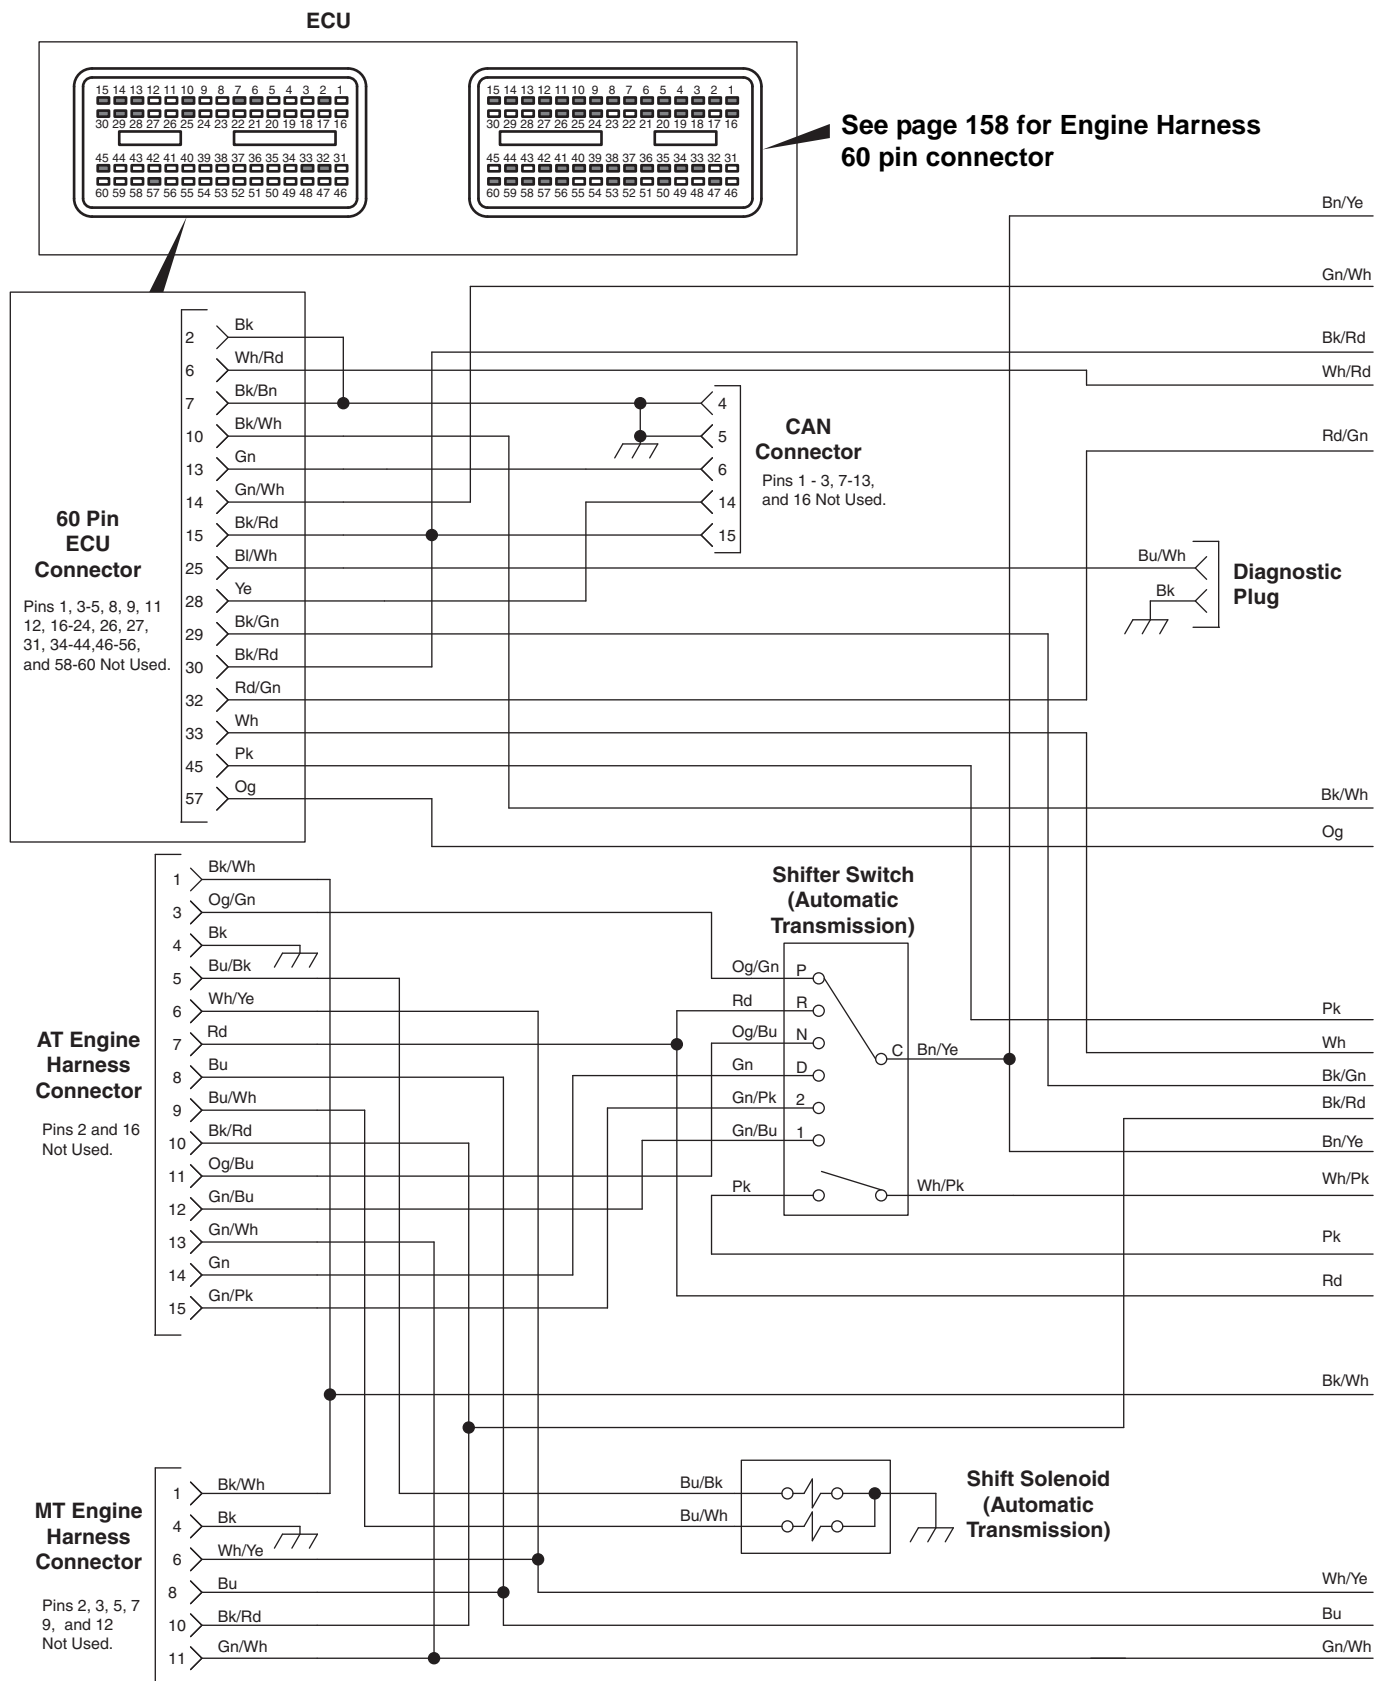


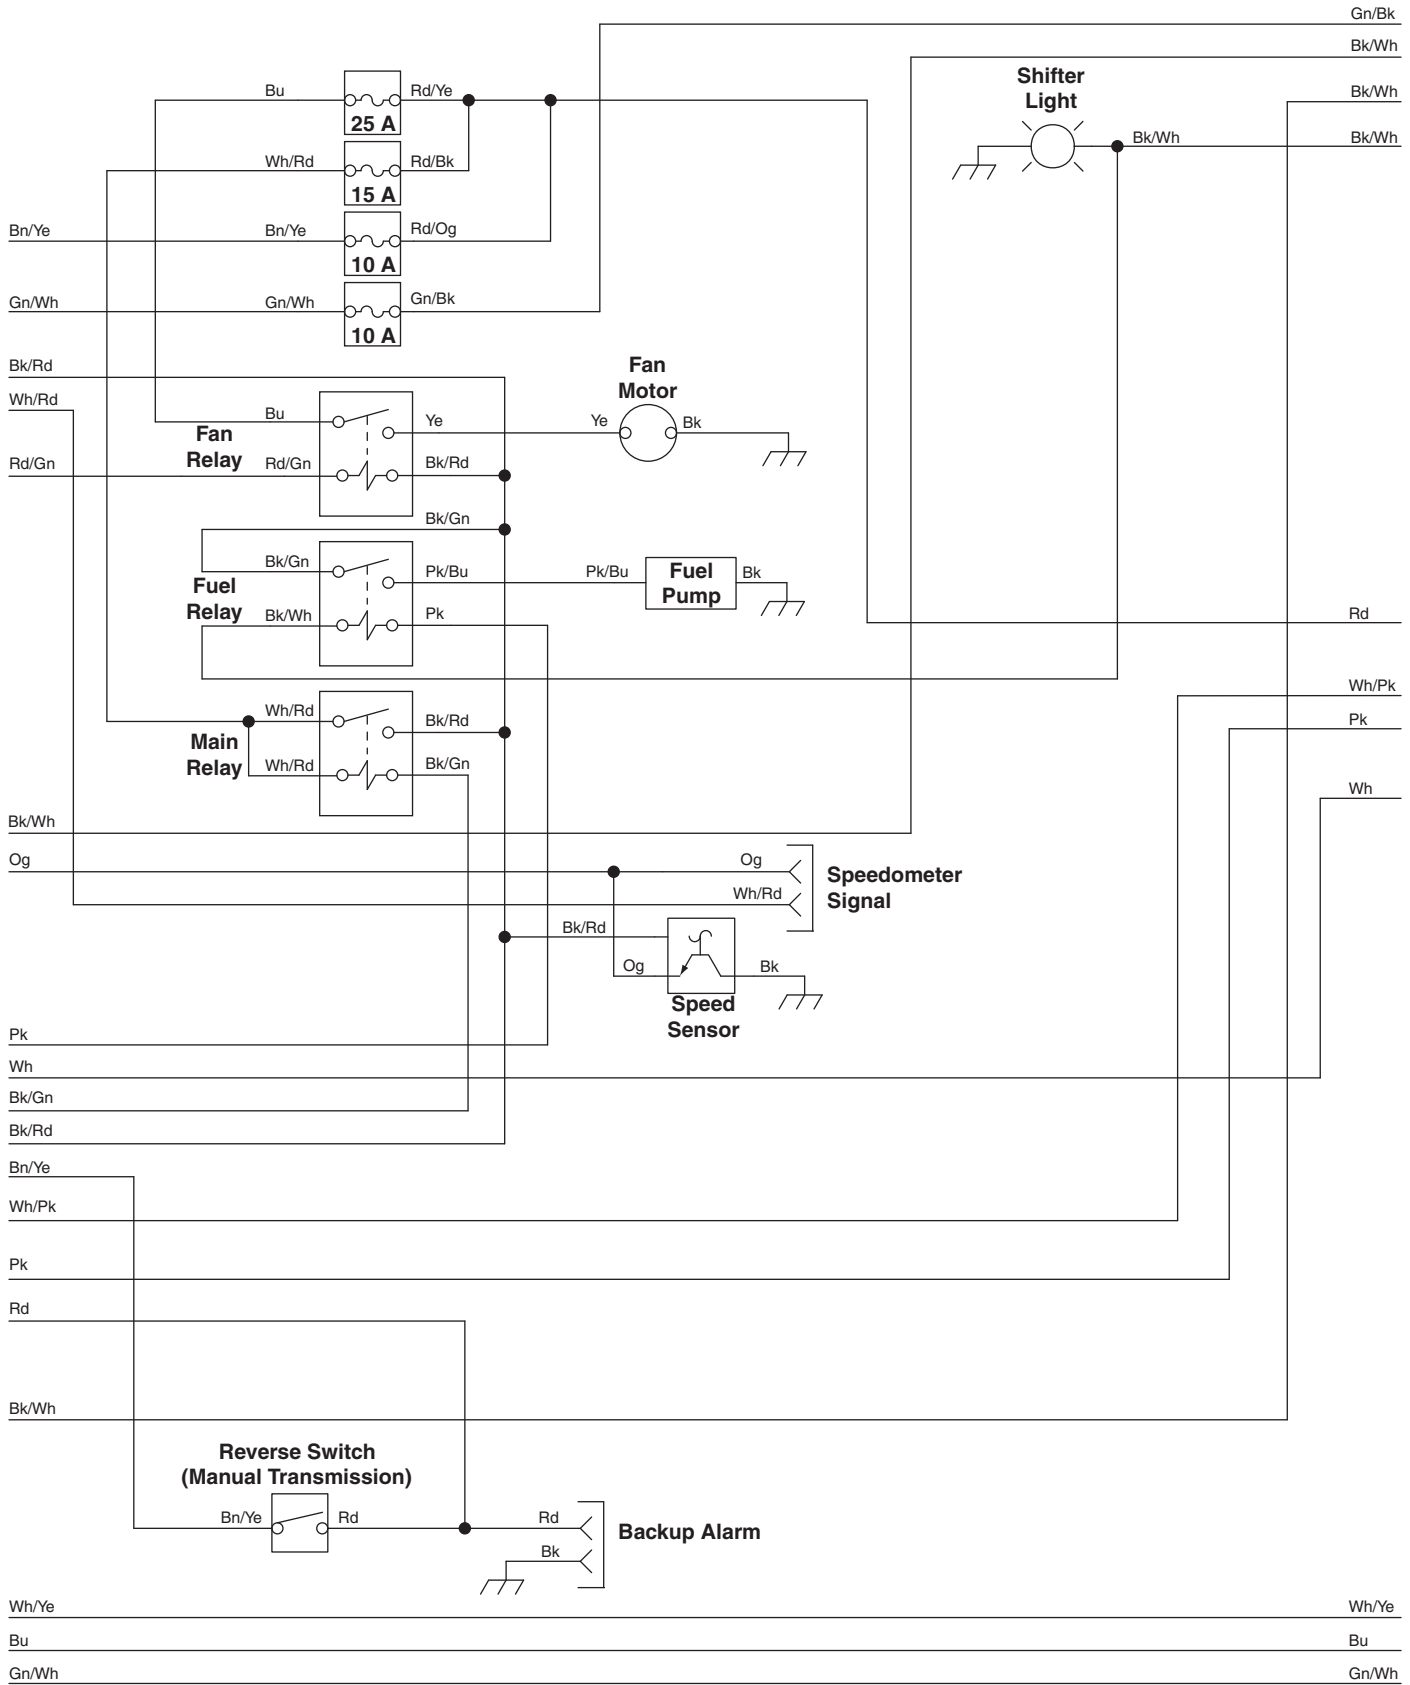


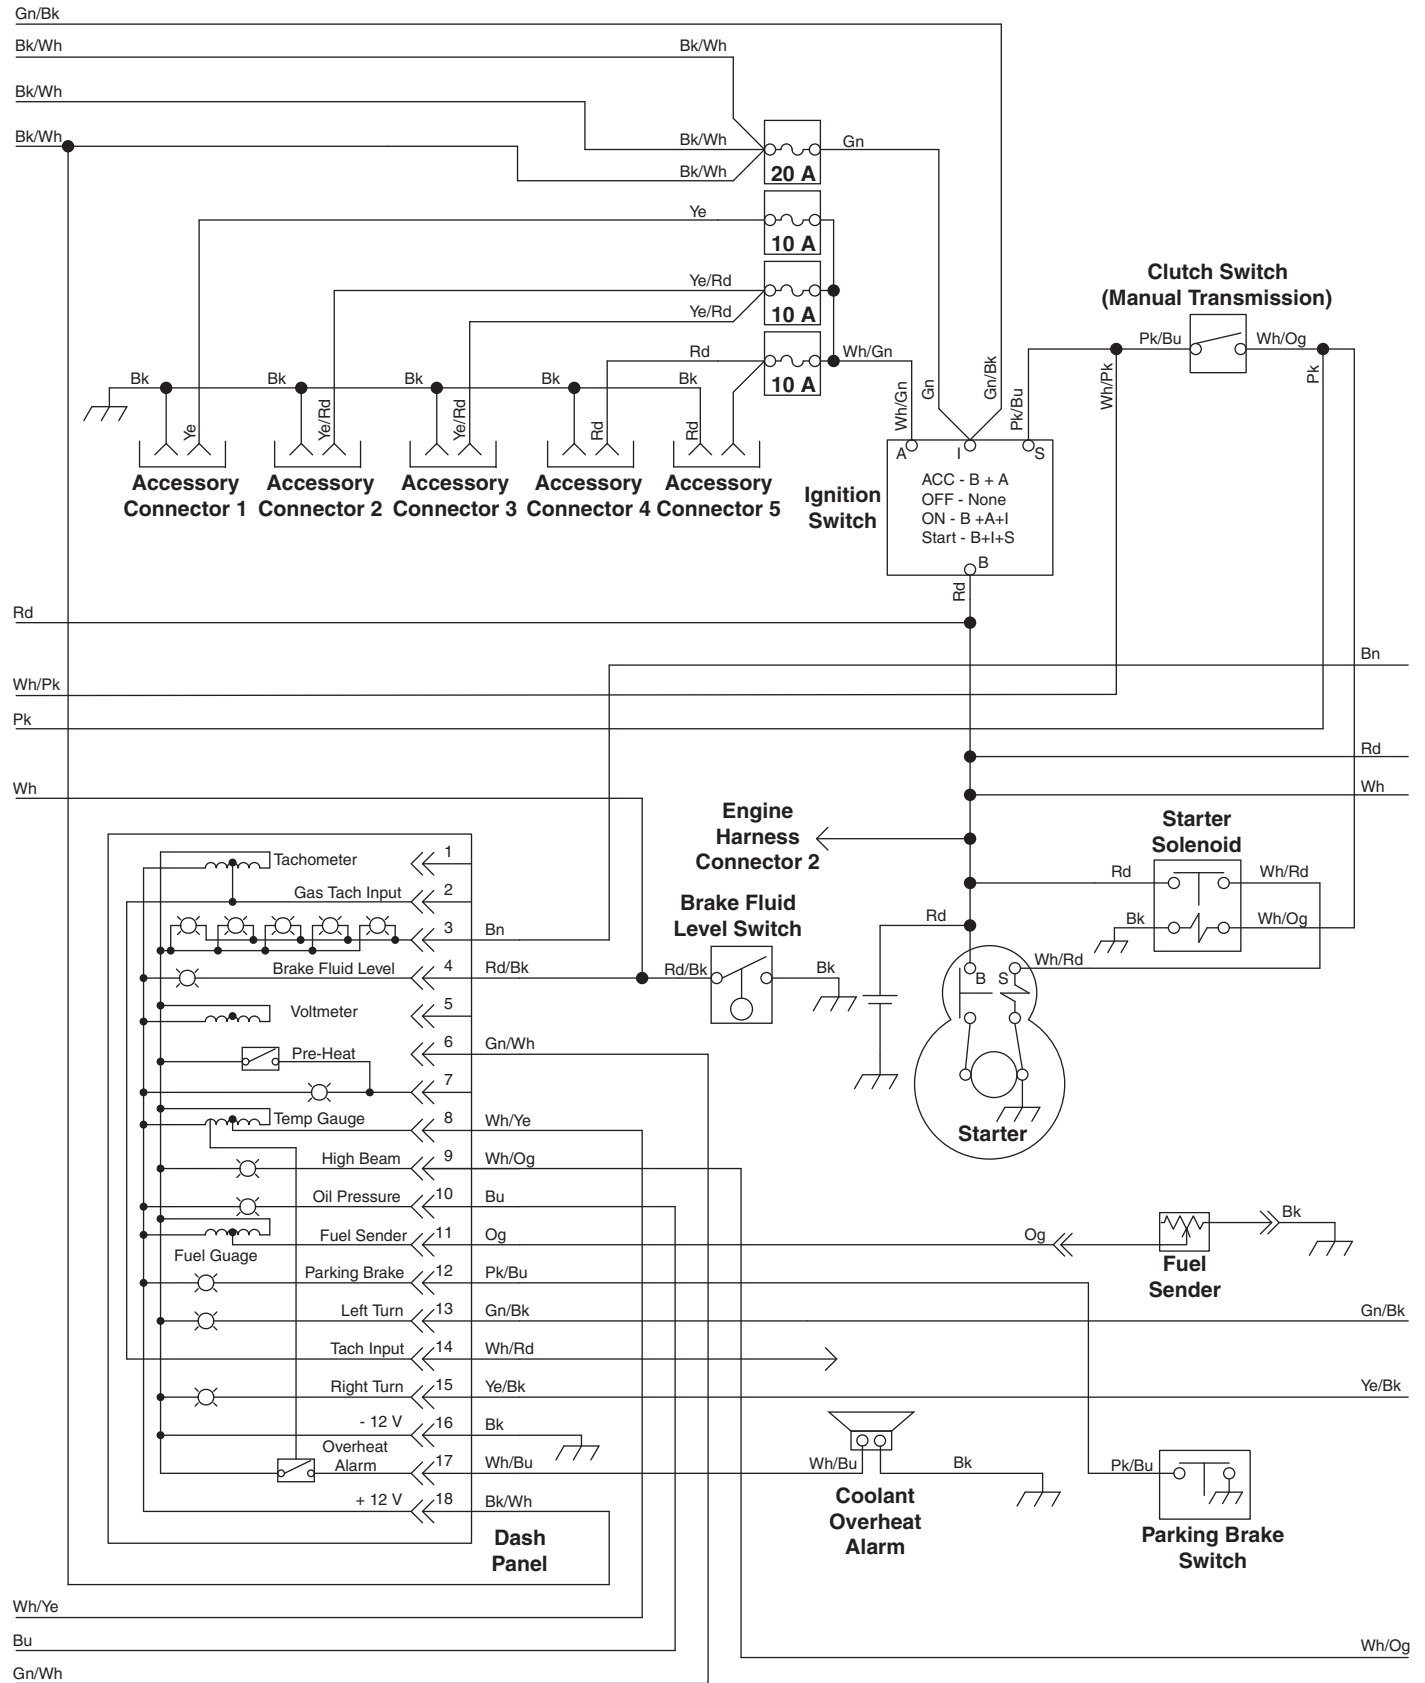

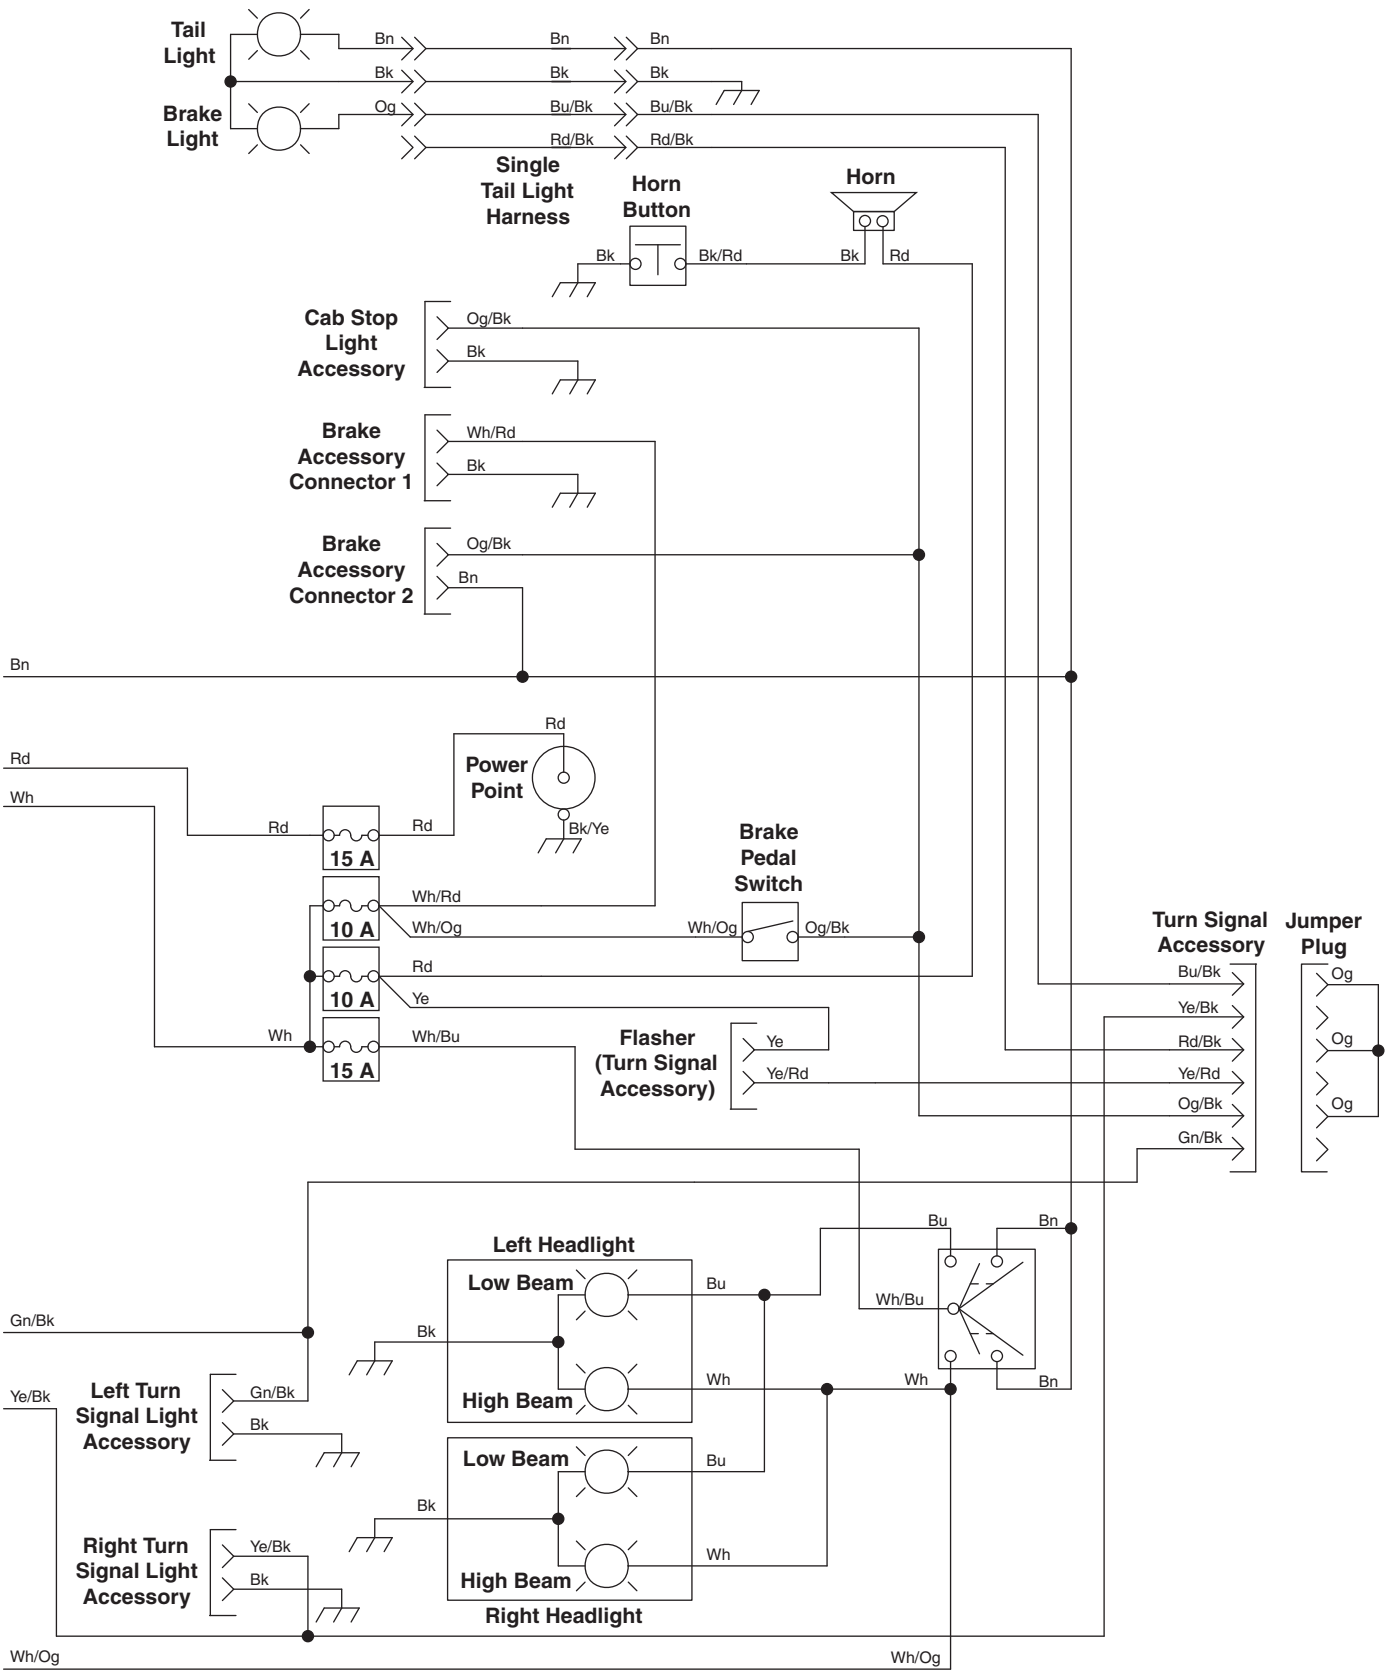


58.1 Gas Engine Schematic

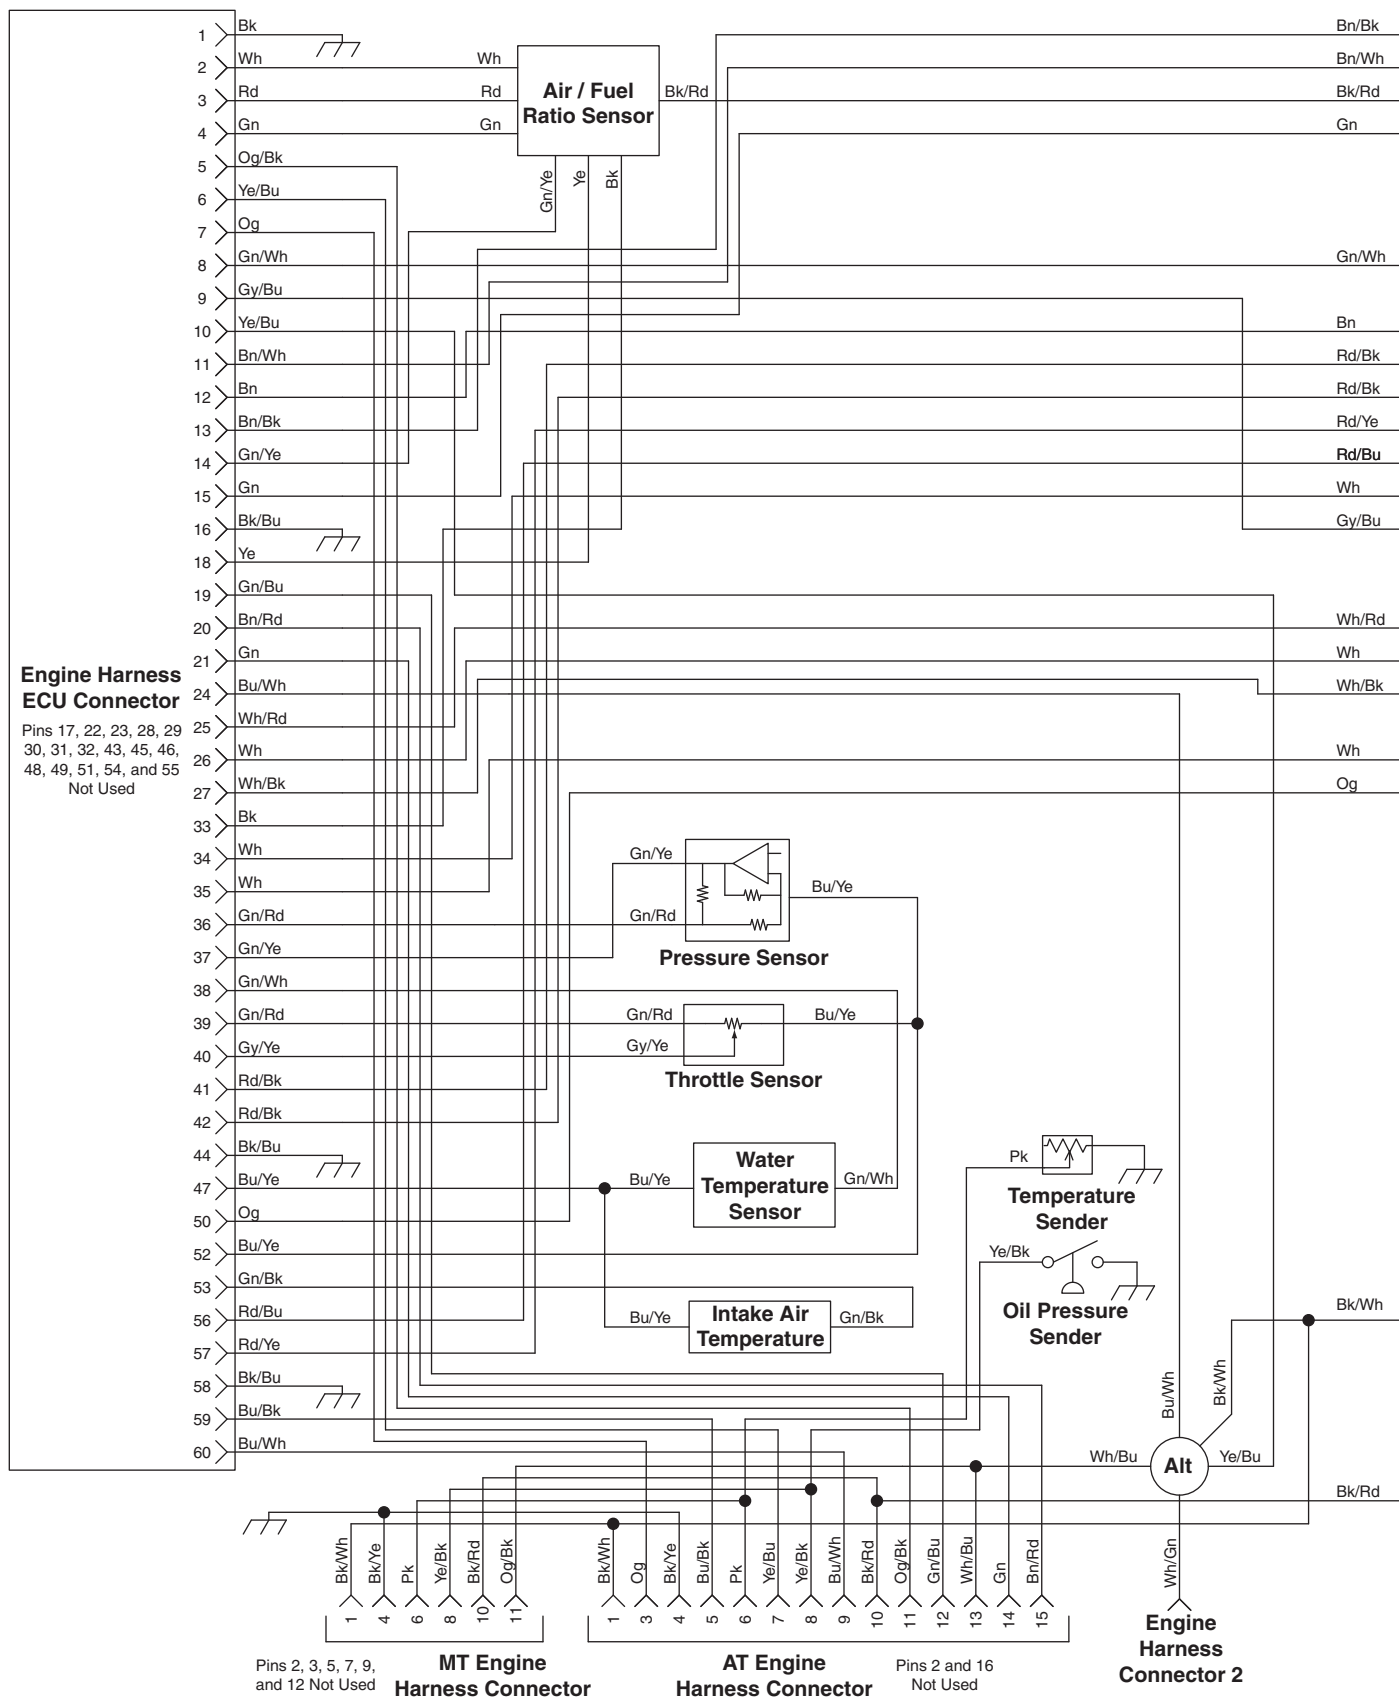


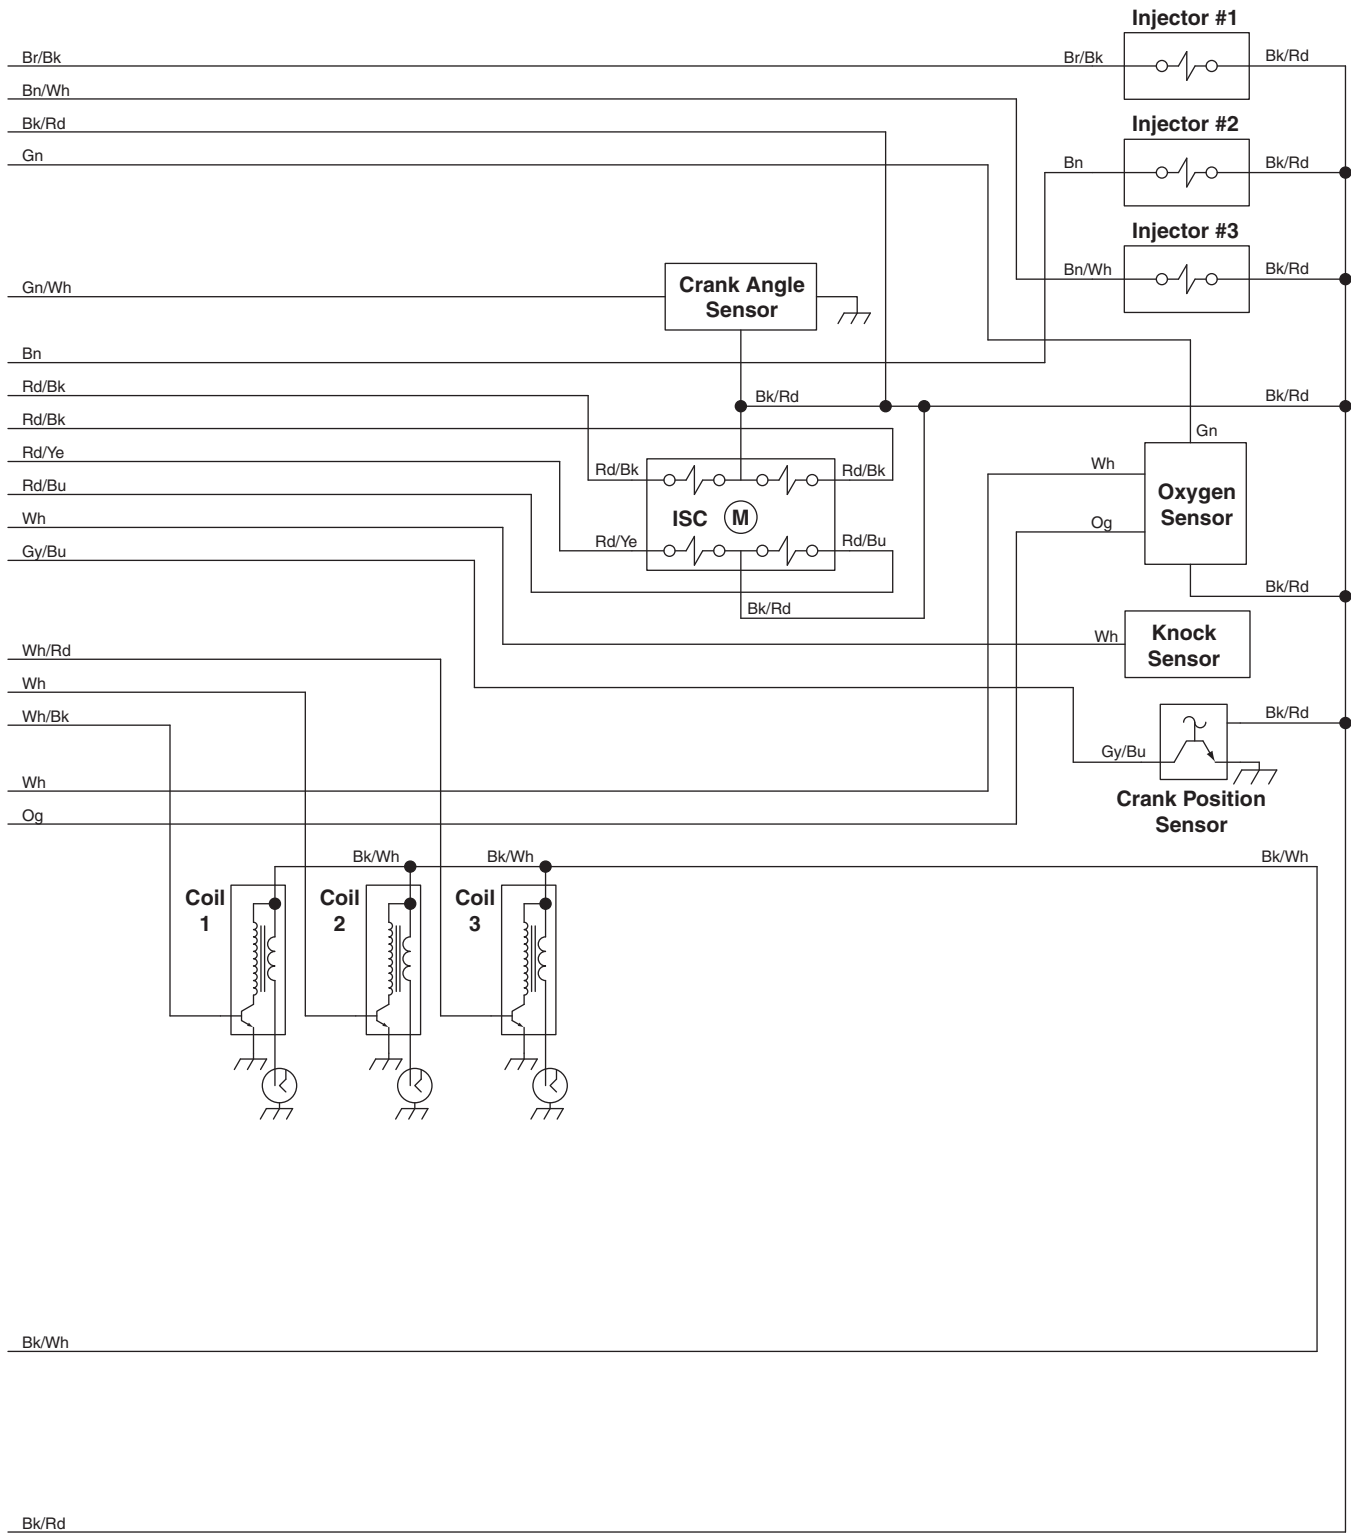


59.1 Diesel Engine Electrical Schematic

Serial No. 84063 All
Serial No. 84064 All

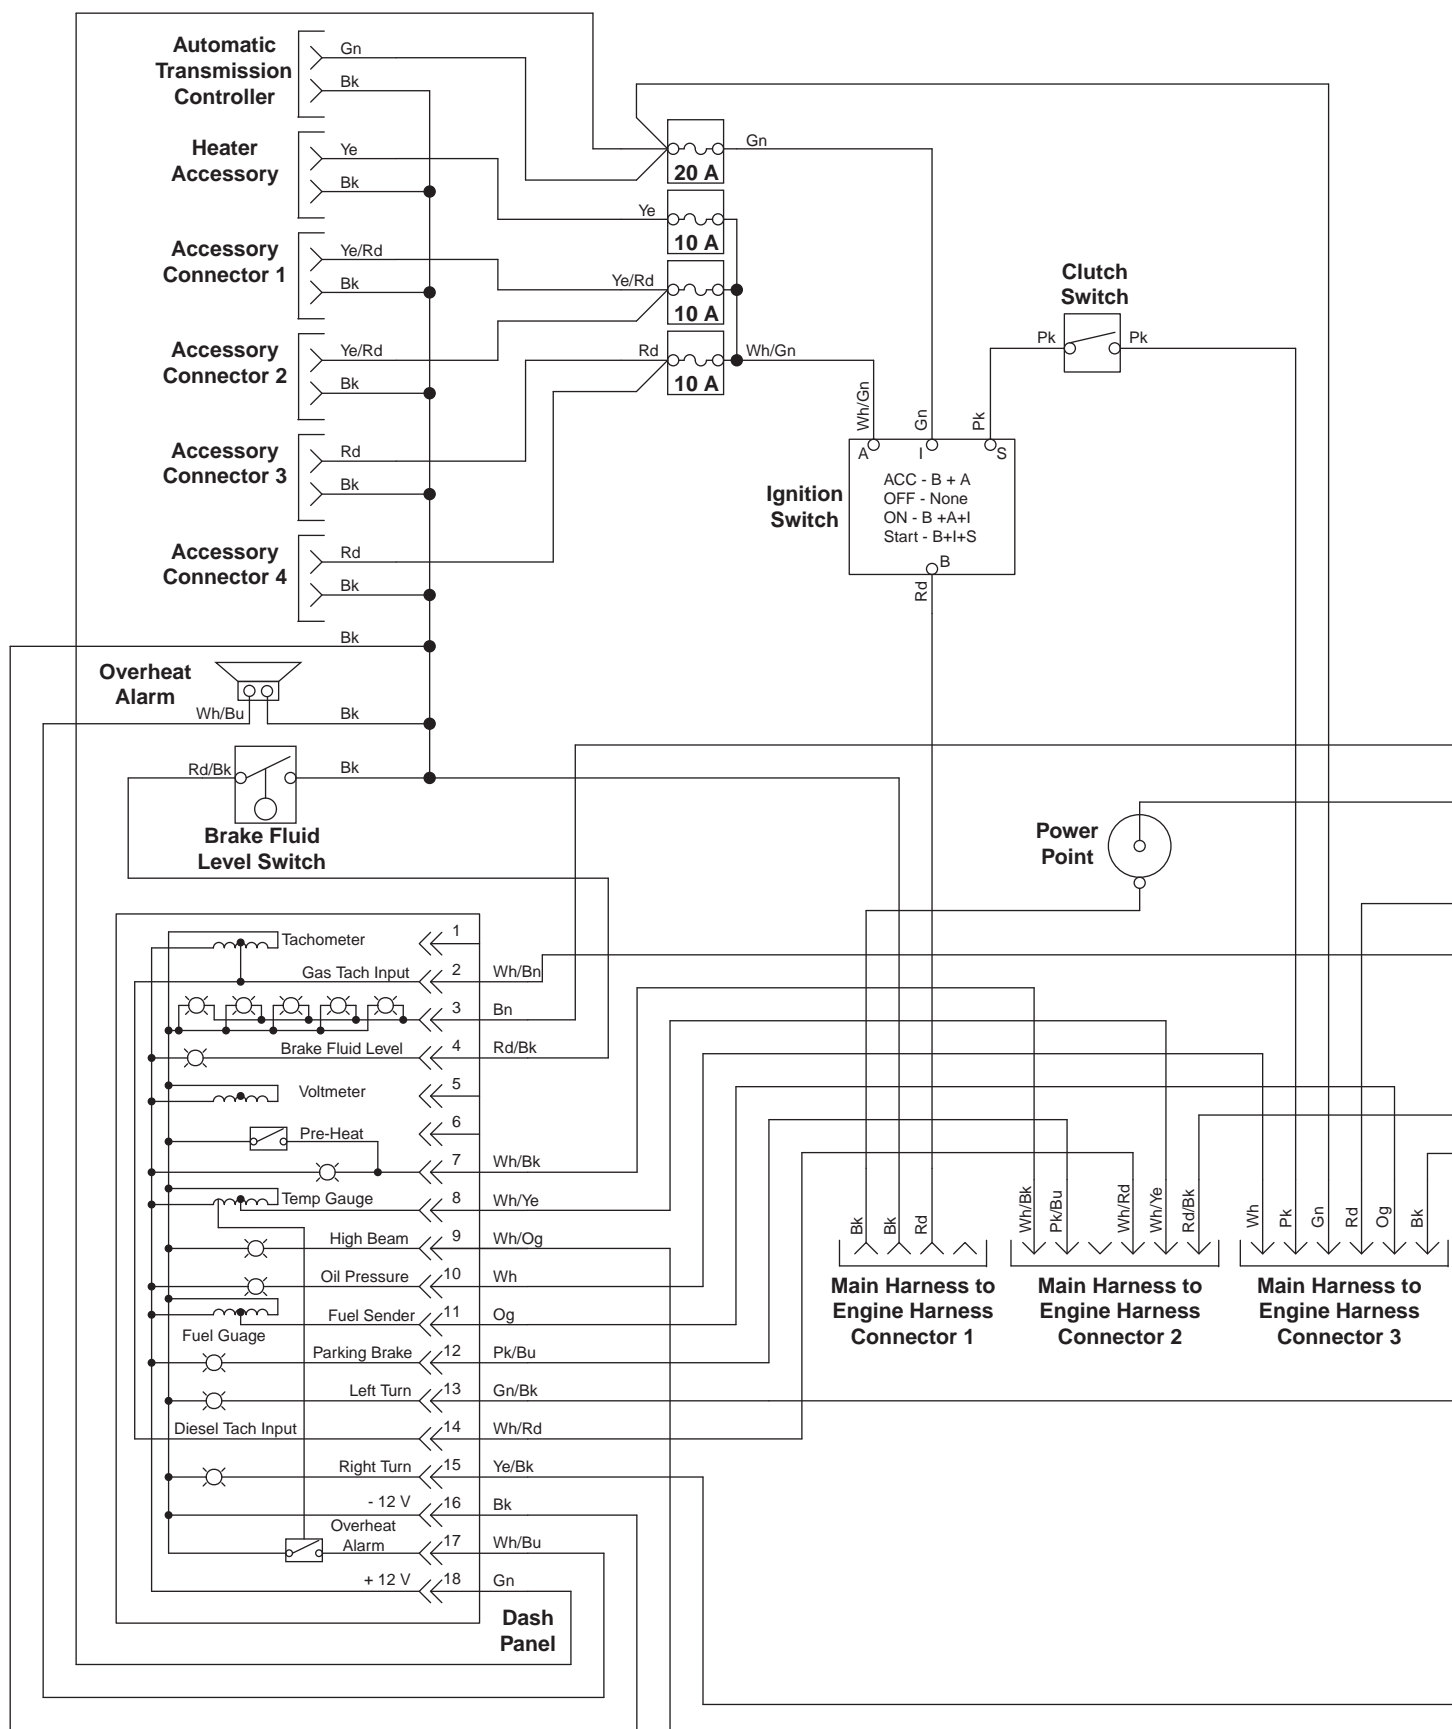

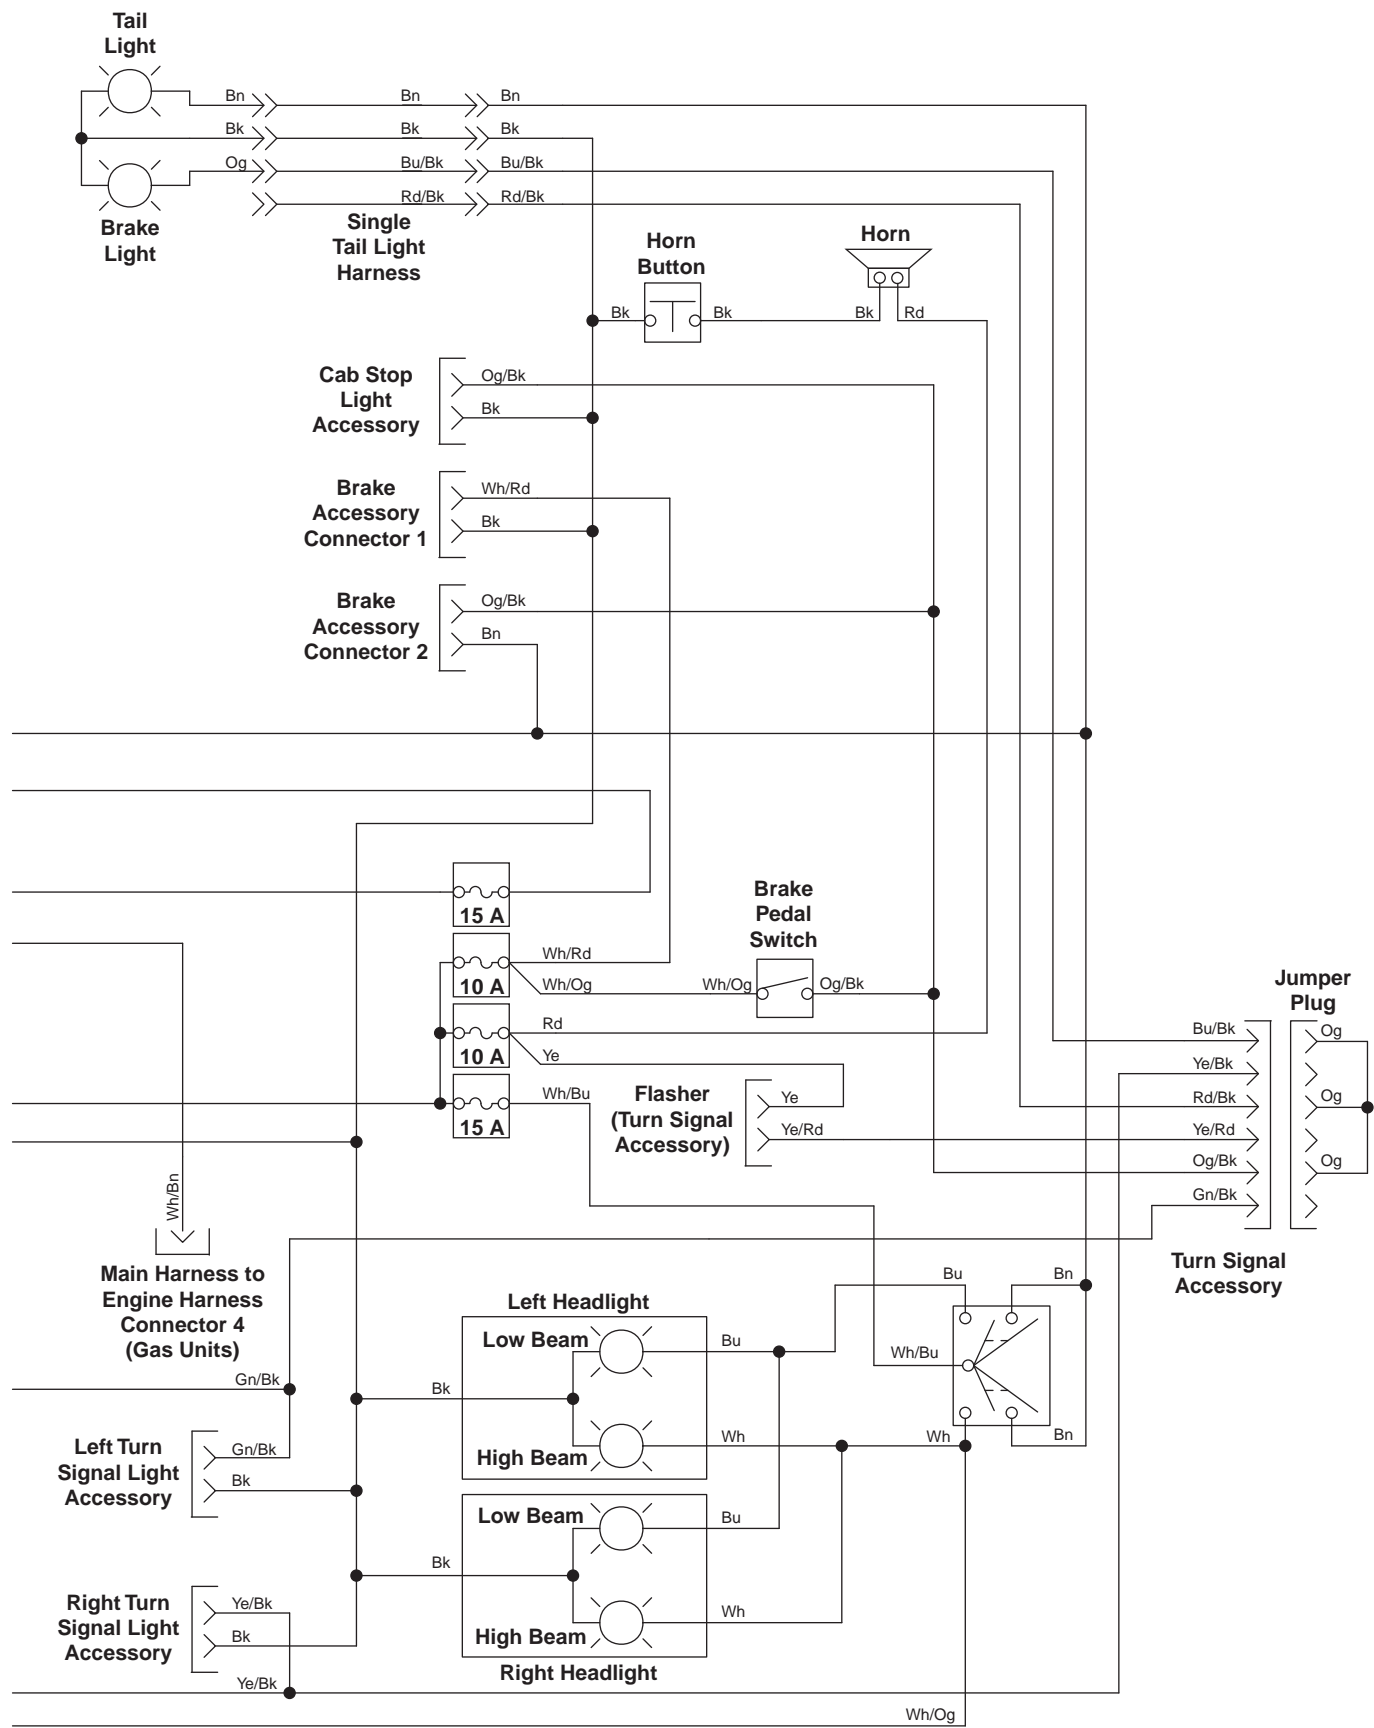

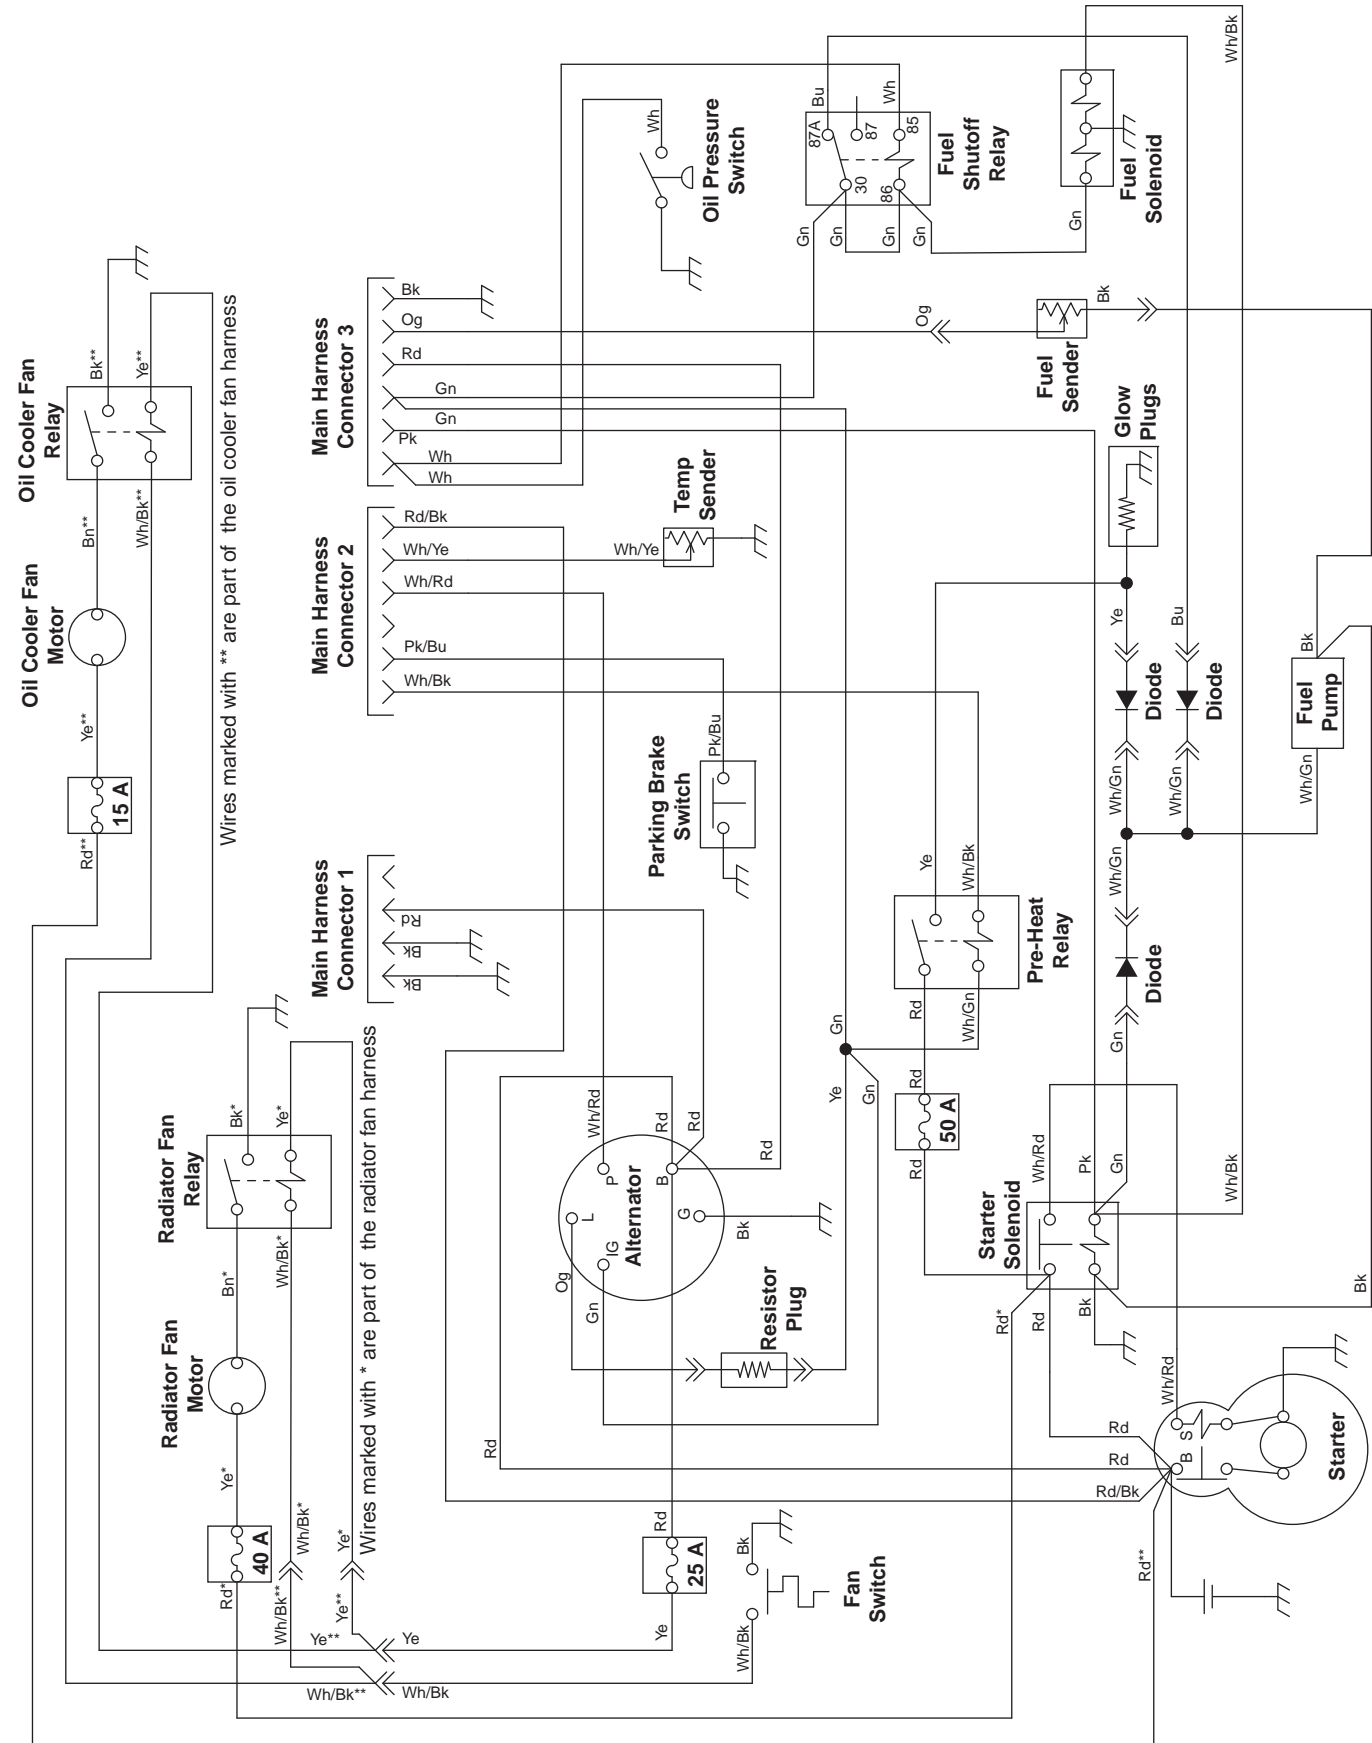

INDEX

00414-G5.....	105	11741-85200.....	85, 137	2700386.....	153	2702501.....	109
009034880.....	81, 83	120052.51, 97, 105, 111,		2700387.....	153	2702502.....	109
01116-G01.....	103	115, 123, 125		2700453.....	79	2702534.7.....	131
01421-08303.....	139	120166.....	145	2700493.....	133	2702535.7.....	131
01550-08353.....	59	12017785, 91, 93, 101		2700496....51, 61, 63, 64		2702547.....	87
01550-08553.....	137	130728.....	97, 103, 105	2700514.....	131	2702548.....	87
06111-06003.....	141	160410.....	105	2700515.....	131	2702559.....	141
06111-12004.....	143	17680-50F70.....	81	2700525.....	105	2702561.....	141
08310-00103.....	85	18292-G1.....	113	2700530.....	131	2702659.....	137, 139
09103-08152.....	139	22100-85200.....	91, 93	2700531.....	131	2702662.....	139
09111-08035.....	91, 93	22400-85141.....	91, 93	2700540.....	103	2702665.....	139
09128-10002.....	143	23260-85203.....	137	2700757.....	59, 125	2702683.....	139
09135-08005.....	143	23265-85200.....	137	2700792.....	43	2702684.....	137
09160-17035.....	143	23266-85002.....	59	2700796.....	53	2702686.....	87, 89
09162-08008.....	143	24110-80410.....	141	2700797.....	53	2702687.....	87
09166-16014.....	145	24121-85252.....	141	2700800.....	117	2702688.....	87, 89
09166-30007.....	141	24131-83002.....	139	2700801.....	117	2702689.....	87, 89
09168-10007.....	143	24211-83011.....	141	2700859.....	103	2702690.....	87, 89, 139
09205-03019.....	137	24220-60A01.....	141	2700868.....	149, 151	2702695.....	61
09205-05012.....	143	24400-83002.....	141	2700869.....	149, 151	2702696.....	63
09246-16010.....	145	24410-83000.....	141	2700913.....	151	2702756.....	89
09250-10006.....	143	24420-83000.....	141	2700933.....	153	2702883.....	143
09261-03017.....	143	24431-83001.....	141	2701107.7.....	117	2702996.....	61
09262-28019.....	139	24432-83001.....	141	2701129.....	103	2703002.....	59
09262-28020.....	139	24436-83000.....	141	2701223.....	45	2703081.....	77
09262-30086.....	141	24471-60A00.....	141	2701253.....	77, 131	2703158.....	43
09263-30031.....	141	24473-70D10.....	141	2701273.....	63	2703257.7.....	51
09263-35015.....	141	24671-83000.....	139	2701371.....	63	2703294.7.....	69
09280-11002.....	137	24700-85200.....	139	2701408.....	131	2703309.....	131
09283-25088.....	139	24741-83001.....	139	2701442.....	83	2703453.....	141
09284-17004.....	143	24821-09001.....	143	2701465.....	123, 125	2703454.....	143
09286-09001.....	143	2500917.....	91, 93	2701513.....	83	2703481.....	131
09300-14017.....	137	25411-85201.....	143	2701658.....	123, 125	2703580.....	141
09300-30003.....	141	25415-83000.....	143	2701693.7.....	69, 113	2703581.....	141
09380-28007.....	139, 141	25420-85201.....	143	2701697.7.....	69, 87, 89	2703582.....	143
09390-62010.....	139	25451-85261.....	143	2701737.7.....	57	2703683.....	51, 97
09390-68002.....	139	25520-85203.....	143	2701850.7.....	51	2703684.....	51, 103
09448-20007.....	137	25530-79501.....	143	2701897.....	113	2703699.....	143
10386753, 57, 59, 61, 64,		25535-85412.....	143	2701898.....	113	2703707.....	61
..91, 93, 97, 101,		25536-84200.....	143	2701953.....	143	2703931.7.....	61, 63
103, 109, 111,		25541-85201.....	143	2702012.....	51	2703951.....	61, 63
115, 129, 133		25545-85055.....	143	2702014.....	51	2703953.....	61
111074.....	129, 133	25546-60C01.....	143	2702198.....	43	2703956.7.....	61
111758.....	129	25547-70D00.....	143	2702199.....	45	2703961.....	69
111812.....	105	25576-70D00.....	143	2702217.....	77	2703964.7.....	61, 63
111813.....	105	26121-85202.....	141	2702244.....	55, 103, 123,	28391-85202.....	139
111814.....	105	2700120.....	145	125		29165G01.....	51
111817.....	105	2700121.....	145	2702247.....	77	3001025.....	119
111838.....	79	2700166.....	113	2702257.7.....	77	3001388.....	99
111893.....	103	2700177.....	113	2702470.....	87, 89, 139	3001965.....	99
111898.....	51, 97, 105	2700334.....	103	2702471.....	139	300646.....	99, 107, 117
112050.....	127	2700335.....	103	2702475.....	137	300977.....	61, 63
112840.....	105	2700380.....	153	2702484.....	107	301988.....	145
11391G4.....	83	2700381.....	153	2702489.....	107	302030.....	64
11391G7.....	99, 107	2700384.....	153	2702494.....	143	302288.....	45, 103, 105
11710-77100.....	85	2700385.....	153	2702500.....	109	302944.....	75

INDEX

303269..... 75, 85, 91, 93, 101	316942.....145	4140071.....71	4174286.....85, 101
303952.....43	320107.. 55, 79, 119, 121	4140072.....71	4174287.....71
304636..... 75, 77, 131	359864.....105	4140075.....71	4174288.....71
305134.....75	360111..... 67, 71	4140090..... 81, 83	4174290..... 101
306320.....103	36092-G01.....99	4140269..... 47, 49	4174321..... 81, 149
306322.....133	361005..... 91, 93	4140431..... 63	4174440..... 91
306325. 91, 93, 101, 103, 109,123, 125	361117..... 111, 115	4140617.....107	4174560.....101
30632845, 51, 53, 55, 57,59	37610-80043.....137	4140618.....107	4174563..... 81
306372.....103	38061A.....43	4140899..... 87	4174620..... 99
306375..... 64, 103, 105	38541.....43	4141031.....103	4174660..... 81
306388.....53	400108.....85	4141037.....141	4174662..... 97
306396..... 61, 63, 64, 99, 103,105, 107, 109,123	400184..... 81, 83, 99	4141425.....105	4174720..... 97
306397.....61, 63	400188.....113	4142627..... 63	4174820..... 81
306405.....131	409804.....125	4142630..... 63	4175021..... 97
306416.....129	4113019.....113	4142772..... 87	4175340..... 49
306419 43, 109, 123, 125	4113020.....113	4142796..... 63	4175401..... 67
306423.....133	4113022.....111	4144334..... 71	4175402..... 81, 83
306435.....133	4113261..... 149, 151	4144345..... 71	4175560..... 91, 93
306450.....101	4113986..... 91, 93, 101	4146818..... 63	4175561.....101
306463.....43, 53	4114867.....105	4146819..... 63	4175562.....101
306488..... 43, 123, 125	4115033.....83	4147584..... 45	4175620.....101
306506.....105	4115400.....83	4147586..... 45	4176248.....113
306531.....51	4115584.....105	4148065..... 89	4176887..... 81
306555.....109	4116017.....125	4148082..... 87	4176960.....101
306562..... 85, 91, 93	4117092..... 91, 93	4148150..... 83	4177253..... 81
306799.....79	4117153.7... 67, 111, 115	4148206..... 83	4177560.....101
306825.....75	4117221.....43	4148212..... 89	4179800..... 81, 149
306829.....129	4117900.....87	4148213..... 89	4179801..... 81, 149
306834.....53	4118027.....107	4148360..... 87	4179802.....111
306835.....91, 93	4118039.....153	4148361..... 89	4179803..... 69, 87, 89
306836.....85	4118422.....107	4149901..... 95	4179842.....101
306839.....73	4118423.....107	4150138..... 95	4180501.....113
306891.....85	4118760.....119	4150957.....105	4180601.....111, 115
306915.....105	4119000.....141	4154081.....125	4183301.....123, 125
306981.. 91, 93, 103, 108	4119866.8.....101	4154480..... 59	4183302.....125
306982.....129	4119867.8.....101	4154481..... 59	4183303.....123, 125
307776.....133	4119955.....89	4158740..... 43	4183304.....125
308008.....75	4120076.....83	4158741..... 43	4183623..... 91, 93
308089.....53, 103	4120096.....89	4158742..... 43	4183634.....101
308090..... 45, 61, 63, 99, 103,105, 107, 117	4120097.....89	4166840.....115	4184320..... 49
308091.....61, 63	4120098.....89	4166841.....115	4184900.....135
309067.....69, 113	4120138.....73	4166842.....115	4184901.....135
309488.....45	4124567.....121	4168131.....115	4185240.....101
311392.....75	4124568.....121	4168143.....113	4185540..... 69, 111
311396.....71	4138391.....87	4170802.....113	4186780..... 91, 93
311398.....71	4139208.....103	4170840.....115	4186900.....135
311763.....61, 63	4139209.....103	4171761.....131	4188387..... 95, 108
312288.....67	4139210.....103	4173062..... 85	4189960.....105
316907.....53	4139211.....107	4173201..... 91, 93	4190700.....101
	4139442.....83	4173262..... 91, 93	4190701.....101
	4139691.....43	4173980..... 91, 93	4191140..... 85, 101
	4139724.....45	4174200..... 91, 93	4192125..... 85
	4139939.....45	4174260..... 91, 93	4194420..... 57
	4139967.....111	4174281..... 85	4194421..... 57
	4140067.....71	4174282..... 91, 93	4194500..... 57
	4140069.....71	4174285..... 85, 99, 111	4202860..... 55

INDEX

4203360.....	87	450400.....	43	452424.....	57, 59	800021.....	111, 115
4203381.....	87	450401.....	47	452692.....	61, 63, 77, 113	800024.....	103, 105
4205580.....	47	450410.....	57, 87, 89	452695.....	43, 51, 59, 61, 63	800026.....	67
4206760.....	43	450412.....	47, 85	452738.....	97	800073.....	91, 93
4208620.....	43	450422.....	91	460030.....	73	800113.....	117
4209665.....	93	45045245, 51, 55, 69, 81,		463005.....	119	800146.....	81
4210205.....	93	83, 97, 113, 119,		471221.....	73	800177.....	67, 81, 83
4211800.....	129	121, 123, 125		473142.....	43, 79	800198.....	71
4211960.....	135	45045345, 47, 49, 53, 55,		48540-01.....	101	800221.....	111, 115
4216305.....	93 57, 59, 67, 69,		5000913.....	107	800227.....	105
4218620.....	113	79, 81, 83, 85,		5000914.....	99, 107	800271.....	51, 97, 105
4218621.....	113	91, .. 93, 97, 107,		5000919.....	99	800279.....	117
4218622.....	113	111, 113, 117,		5000920.....	99	800294.....	71
4221100.....	81, 125, 149	123, 125		515268.....	51	800344.....	43
4223561.....	113	45045453, 55, 57, 61, 63,		517226.....	129	800425.....	145
4231620.....	107 67, 69, 87, 89,		521144.....	53	800446.....	55
4232042.....	109	91, .. 93, 99, 103,		523085.....	45	800485.....	75
4233001.....	119, 121	115		524358.....	153	800547.....	47, 91, 93, 97,
4233160.....	109	450455..... 47, 49, 69, 75		524633.....	51	101	
4233161.....	109	450457..... 79		524643.....	51	800558.....	105
4233440.....	87, 89	450510..... 59		548041.....	108	800571.....	85
4235369.....	87, 89	450541..... 43, 45, 81, 83		548079.....	73	800582.....	51, 61, 63, 64
4235740.....	107	450544..... 125		548159.....	43	800602.....	71
4235966.....	109	450739..... 79		548171.....	53	800695.....	135
4237525.....	103	452004..... 85		548175 .. 43, 61, 63, 123,		800711.....	108
4238042.....	125	452006..... 81, 83, 113		125		800717.....	129
4238925.....	81, 83	45237851, 55, 69, 81, 83,		548201.....	135	800737.....	135
4238927.....	81, 83 113, 121, 123		548204.....	133, 145	800743.....	131
4240882.....	109	452380..... 119, 145		548224.....	73	800789.....	65
4241843.....	83	452381..... 139		548325.....	105	800861.....	73
4242482.....	69, 125	45238845, 55, 57, 59, 81,		548477.....	145	800875.....	113
4243002.....	71 83, 85, 91, 93,		548804.....	108	800908.....	77, 131
4243003.....	71	97, 111, 117,		548827.....	117	800909.....	67, 71
4243004.....	67	123, 125		548849.....	85	800911.....	135
4243005.....	67	45238943, 69, 85, 87, 91,		548910.....	53, 67, 101	800927.....	103
4243006.....	71	93, 101, 107, 117		548911.....	51, 67	80093043, 47, 49, 53, 57,	
4243008.....	71	452390..... 85, 97, 139		548937.....	133	. 67, 79, 113, 117	
4243009.....	67	452391..... 55		548952.....	135	800934 . 43, 57, 123, 125	
4244442.....	123, 125	452392..... 53, 83		550489.....	111	800943 43, 51, 57, 79,	
4244712.....	125	452393..... 85		550553.....	111	123, 125	
4245130.....	113, 153	452394..... 111		553020.....	101	800944.....	131
4249342.....	125	452395..... 81, 83, 91, 93		553926.....	81, 83	800945.....	73, 75
4249343.....	125	452396..... 139		554663.....	71	800948.....	85
443102.....	101	45239855, 57, 67, 69, 77,		558019.....	149	800949.....	85
443106.. 81, 83, 123, 125	 81, 83		600992.....	81	800973.....	129
443810.....	53, 108	452399..... 67, 115, 117		600993.....	91	805307.....	145
444730.....	71	452401..... 61, 63		601585.....	99	805387.....	131
445795.....	99	452402..... 69, 91, 93		601592.....	81, 83	806703.....	55, 59, 103
446134.....	81, 83	452403..... 69		601595.....	99	806714.....	51, 57
450077.....	73	452404..... 53		601937.....	45	807332.....	71
450169.....	87, 89	452405..... 69, 87, 89, 99		603102.....	105	807366.....	133
450193.....	101, 109	452406..... 69		604174.....	61, 63	807624.....	145
450324.....	123, 125, 139	452408..... 75		64237-05.....	101, 109	808060.....	79
450377.....	55, 59	452410..... 47, 69		7033.....	81	809092.....	79
450382.....	73	452411..... 49		7162.....	81, 83	809137.....	57, 77
450393.....	73	452415..... 67		800017.....	101	809152.....	55

INDEX

809174.....	85	825886.....	57, 147, 151	832900.....	121	837301.....	147, 151
809180.....	67, 71	825889.....	151	833056.....	105	837303.....	43
809231.....	65, 111	825894.....	147, 151	833101.....	105	838154.....	111
809254.....	135	825899.....	147, 151	833103.....	105	838295.8.....	101, 109
809265.....	121	825961.....	147, 149, 151	833104.....	105	838340.....	65
810152.....	57, 59	825973.....	147, 151	833257.....	149, 153	838463.....	149, 153
810435.....	57, 133	825996.....	147, 151	833273.....	59	838539.....	131
810437.....	73, 77, 133	825997.....	147, 149, 151	833345.....	105	838602.....	85
810722.....	103	825998.....	147, 151	833512.....	81, 83	838768.....	153
811992.....	135	825999.....	147, 151	833715.....	83	838769.....	153
811993.....	135	826000.....	147, 151	833953.....	111, 115	838770.....	153
812006.....	135	826005.....	147, 149, 151	834005.....	111, 115	839213.....	53
812009.....	135	826006.....	57, 149	834691.....	111	839917.....	153
812335.....	135	826190.....	147, 151	835101.....	119, 121	839921.....	153
812419.....	145	826191.....	147, 151	835271.....	97, 103, 105	839948.....	129
812445.....	57	826192.....	147, 153	836206.....	119	840222.....	79
813850.....	71, 75	826193.....	149, 153	836420.....	135	840436.....	45
814079.....	53	826254.....	149	836421.....	135	840473.....	97
814476.....	129	826558.....	53, 121	836429.....	135	840508.....	43
815012.....	145	826590.....	65, 111	836431.....	133	840725.....	57, 59
815013.....	145	826726.....	147, 151	836441.....	135	840726.....	57, 59
815085.....	145	827182.....	55	836443.....	129	840754.....	81, 83
815093.....	145	827486.....	117	836536.....	149	840857.....	117
815182.....	145	827821.....	51	836657.....	133	840877.....	119, 121
816307.....	61, 63	828049.....	51	836658.....	133	841167.....	73
816401.....	45	828057.....	53	836662.....	133	841255.....	75, 79
816586.....	75	828231.....	123, 125	836675.....	129	841264.....	51
817104.....	51, 105	828382.....	43	836676.....	129	841336.....	75
817250.....	77	828590.....	79	836677.....	129	841404.....	75
817320.....	121	828629.....	147, 151	836678.....	129	841428.....	43
817397.....	145	829099.....	67	836680.....	129	841429.....	73
817928.....	77	829630.....	147, 149	836681.....	129	841430.....	77, 131
818395.....	103	829631.....	151	836682.....	129	841477G01.....	43
819923.....	79	829787.....	111, 115	836683.....	129	841630.....	73
820889.....	83	829954.....	111, 115	836684.....	129	841637.....	43
820899.....	81, 91, 93	829997.....	69, 111, 113	836685.....	129	841663.....	51
821071.....	51	830140.....	103	836686.....	129	841715.....	43
821164.....	61, 64, 97, 103	830366.....	51	836687.....	129	841737.....	73
821893.....	65, 69, 117, 121	830784.....	45, 51	836688.....	129	841738.....	73
822049.....	67	830810.....	121	836689.....	129	841753.....	43
822419.....	53	830930.....	79	836690.....	129	841799.....	47, 49
822819.....	53	831039.....	111, 113	836691.....	129	841805.....	117
823118.....	53	831099.....	133	836692.....	129	841837.....	127
823119.....	121	831225.....	123, 125	836693.....	135	841838.....	127
823225.....	53	831405.....	75	836694.....	131	841839.....	77
823621.....	71	831586.....	103	836695.....	131	841841.....	77
825264.....	65, 111, 113	831846.....	81, 83	836841.....	133	841842.....	77, 127
825500.....	71	831888.....	97	836852.....	111, 133	841844.....	127
825538.....	53	831889.....	97	836892.....	147, 151	841853.....	111
825748.....	147, 149, 151, 153	831890.....	97	836959.....	133	841885.....	85
825866.....	147, 149	832033.....	57	837020.....	135	841913.....	43
825877.....	147, 149, 151	832408.....	121	837043.....	55	841969.....	111
825878.....	147, 149, 151	832409.....	121	837270.....	117	841982.....	101, 109
825880.....	153	832414.....	119, 121	837295.....	51	842010.....	59
825884.....	81, 85	832584.....	127	837296.....	147, 151	842033.....	75
		832798.....	53	837298.....	51	842103.....	57

INDEX

842104.....	77	844130.....	51, 97, 105	884513.....	125	894179.....	61
842360.....	135	844148.....	73	884574.....	121	894201.....	111, 115
842740.....	64	844177.....	53	885249.....	119	894266.....	123
842773.....	61, 63	844179.....	53	886001.....	121	894308.....	57, 59
842774.....	61, 63	844184.....	139	886090.....	123, 125	894313.....	67
842800.....	121	844185.....	145	886270.....	53	894348.....	81
842870.....	69	844186.....	139	887017.....	119	894434.....	105
842915.....	107	844187.....	145	887187.....	71	894435.....	105
842935.....	57, 59	844188.....	145	887259.....	79	894456.....	57
842959.....	149	844202.....	59	887512.....	75	894471.....	105
842961.....	85	844223.....	51	887994.....	91, 93, 95, 119	894508.....	64
842966.....	149, 151	844224.....	51	888549.....	107	894519.....	135
842983.....	147, 149, 151	844564.....	119	889681.....	75	894573.....	73
843013.....	103	844565.....	119	889780.....	133	894574.....	73
843021.....	57	844566.....	119	889870.....	129	894581.....	69
843158.....	55	844571.....	119	889871.....	129	894582.....	69
843167.....	125, 149	844582.....	53	889925.....	133	894584.....	64
843168.....	149, 151	844583.....	119	890000.....	123, 125	894602.....	123, 125
843238.....	71	844590.....	119	890930.....	113	894635.....	75
843298.....	111, 115	844598.....	121	891089.....	135	894638.....	111
843355.....	53	844600.....	119	891829.....	127, 129	894675G01.....	117
843356.....	55	844601.....	117	892164.....	64	894691.....	119
843359.....	55	844611.....	59	892228.....	79	894696.....	53, 119
843418.....	77	844627.....	119	892486.....	79	894701.....	119
843537.....	105	844628.....	119	892534.....	91	894702.....	119
843550.....	147, 151	844647G01.....	69	892601.....	119	894825.....	71, 127, 131
843551.....	147, 151	844652.....	119	892921.....	57	894826.....	71, 127, 131
843561.....	51	844729.....	117	892933.....	59	894886.....	135
843562.....	51	844813.....	131	893067.....	55	894930.....	77, 131
843563.....	51	844937.....	119	893145.7.....	69	894931.....	77, 131
843568.....	69	844951.....	135	893199.7.....	69	894933.....	77, 131
843581.....	51	844952.....	135	893199-G02.....	69	894934.....	77, 131
843598.....	147, 151	844953.....	135	893233.....	73	894935.....	77, 131
843607.....	51	844956.....	135	893234.....	73	894936.....	77, 131
843614.....	61, 63	844973.....	119	893266.....	73	894947.....	145
843679.....	61, 63	844988.....	49	893322.....	45	894965.....	145
843685.....	61, 63	845034.....	135	893344.....	79	894989.....	145
843724.....	61, 63	845133.....	55	893487.....	67	894998.7.....	69, 87, 89
843726.....	111, 115	845134.....	55	893488.....	67	895113.....	57
843727.....	111	845185.....	53	893519.....	131		
843758.....	53	845223.....	137	893525.....	69		
843759.....	53	845224.....	83	893539.....	117		
843767.....	79	845231.....	45	893541.....	45		
843768.....	79	845234.....	45	893571.....	79		
843778.....	61	845257.....	145	893581.....	131		
843792.....	61, 63	845327.....	153	893582.....	131		
843857.....	83, 91, 93	845328.....	153	893583.....	127		
843862.....	83	845330.....	153	893585.....	77		
843866.....	105	845345.7.....	64	893586.....	77		
843876.....	71	845356.....	131	893602.....	67		
843942.....	123, 125	869154.....	64	893613.....	71		
843997.....	51	879807.....	145	893632.....	45, 47, 49		
844019.....	121	882971.....	69	893862.....	71		
844051.....	53	882993.....	121	894066.....	85		
844087.....	135	883236.....	121	894159.....	51		
844116.....	51	884398.....	149	894167.....	57		

World Class Quality, Performance And Support

Equipment from Jacobsen is built to exacting standards ensured by ISO 9001 and ISO 14001 registration at all of our manufacturing locations.

A worldwide dealer network and factory trained technicians backed by Genuine Jacobsen Parts provide reliable, high-quality product support.

Qualité Totale Mondiale, Performance et Soutien

Les machines Jacobsen sont fabriquées, dans toutes nos usines, selon les normes de l'accréditation ISO 9001 et ISO 14001.

Jacobsen offre à sa clientèle un réseau international de revendeurs et de techniciens formés pour l'après-vente, ce qui garantit un support technique fiable et de haute qualité.



When Performance Matters.™

CUSHMAN JACOBSEN RANSOMES

Jacobsen, A Textron Company
11108 Quality Drive, Charlotte,
NC 28273, Etats-Unis
www.Jacobsen.com
800-848-1636

Ransomes Jacobsen Limited
West Road, Ransomes Europark, Ipswich, IP3 9TT, Angleterre
Numéro d'immatriculation de la société anglaise : 1070731
www.ransomesjacobsen.com
+44 (0) 1473 270000